



ADLINK
TECHNOLOGY INC.

USB-1210

4-CH 16-Bit 2MS/s Simultaneous-Sampling USB
DAQ Module

User's Manual



Manual Rev.: 2.00
Revision Date: July 31, 2014
Part No: 50-1Z162-1000

Advance Technologies; Automate the World.

Revision History

Revision	Release Date	Description of Change(s)
2.00	July 31, 2014	Initial Release

Preface

Copyright 2014 ADLINK Technology, Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

Table of Contents

Revision History	ii
Preface	iii
List of Figures	vii
List of Tables	ix
1 Introduction	1
1.1 Overview	1
1.2 Features.....	1
1.3 Applications	1
1.4 Specifications.....	2
1.4.1 General Specifications.....	2
1.4.2 Analog Input	3
1.5 Schematics	4
1.5.1 Module.....	4
1.5.2 Module Stand	7
1.6 Connector Pin Assignment	11
1.6.1 Connector Signal Description	11
1.7 Analog Input Signal Connection	12
1.8 Software Support	14
1.9 Driver Support for Windows.....	14
1.10 Utilities for Windows	14
2 Getting Started	15
2.1 Unpacking Checklist	15
2.2 Attaching the Module Stand.....	15
2.3 Rail Mounting.....	16
2.4 Wall Mounting	17
2.5 Installing the USB-1210 Module	18

2.5.1	Connecting the USB-1210 Module	18
2.5.2	Device ID	19
2.5.3	Hardware Configuration.....	20
3	Operation & Calibration.....	21
3.1	Operation	21
3.1.1	Signal Function	21
3.1.2	A/D Conversion.....	22
3.1.3	Trigger Sources	25
3.1.4	Trigger Modes.....	27
3.1.5	Programmable Function I/O.....	31
3.1.6	Basic Timer/Counter Function	32
3.1.7	General Purpose Timer/Counter Modes.....	33
3.1.8	Isolation	39
3.2	Calibration.....	39
3.2.1	Loading Calibration Constants.....	39
3.2.2	Auto-Calibration	40
3.2.3	Saving Calibration Constants	40
	Important Safety Instructions.....	41
	Getting Service	43

List of Figures

Figure 1-1:	USB-1210 Module Rear View	4
Figure 1-2:	USB-1210 Module Side View	5
Figure 1-3:	USB-1210 Module Front View	6
Figure 1-4:	Module, Stand, Connector, and USB Cable	7
Figure 1-5:	Module, Stand, & Wall Mount Kit Side View (w/ connections)	8
Figure 1-6:	Module in Stand Front View	8
Figure 1-7:	Module Stand Top View	9
Figure 1-8:	Module Stand Side Cutaway View	10
Figure 1-9:	Module Stand Front View	10
Figure 1-10:	GRND-Referenced Source w/ DIFF Input	13
Figure 1-11:	Floating Source w/ DIFF Input.....	13
Figure 2-1:	Rail Mount Kit	16
Figure 2-2:	Module Pre-Rail Mounting.....	16
Figure 2-3:	Module Rail-Mounted	17
Figure 2-4:	Wall Mount Holes	17
Figure 2-5:	Module with Wall Mount Apparatus	18
Figure 2-6:	USB-1210 module in Windows Device Manager.....	19
Figure 2-7:	Device ID Selection Control.....	20
Figure 3-1:	Carrier Board Functional Block Diagram	21
Figure 3-2:	Daughter Board Functional Block Diagram	22
Figure 3-3:	Analog Input	23
Figure 3-4:	Configuring Different Sampling Rates	25
Figure 3-5:	Below-Low Analog Triggering.....	26
Figure 3-6:	Above-High Analog Triggering	27
Figure 3-7:	Digital Triggering	27
Figure 3-8:	Post Trigger without Retriggering	28
Figure 3-9:	Delayed Trigger	28
Figure 3-10:	Middle Trigger.....	29
Figure 3-11:	Pre-Trigger	29
Figure 3-12:	Post Trigger with Retriggering	30
Figure 3-13:	Gated Trigger	30
Figure 3-14:	Mode 1-Simple Gated-Event Calculation	33
Figure 3-15:	Mode 2-Single Period Measurement.....	34
Figure 3-16:	Mode 3-Single Pulse-Width Measurement	35
Figure 3-17:	Mode 4-Single-Gated Pulse	35
Figure 3-18:	Mode 5-Single-Triggered Pulse.....	36
Figure 3-19:	Mode 6-Re-Triggered Single Pulse	36

Figure 3-20:	Mode 7-Single-Triggered Continuous Pulse.....	37
Figure 3-21:	Mode 8-Continuous Gated Pulse.....	37
Figure 3-22:	Mode 9-Edge Separation Measurement.....	38
Figure 3-23:	Mode 10-PWM Output Following Trigger	38
Figure 3-24:	Mode 10-PWM Output Following GATE Control	38
Figure 3-25:	Isolation	39

List of Tables

Table 1-1: USB-1210 Pin Assignment	11
Table 1-2: CN1/CN2 I/O Signal Description.....	12
Table 3-1: Bipolar Analog Input Range and Output Digital Code ...	23
Table 3-2: Pin Definition of LVTTTL Digital I/O	31
Table 3-3: Timer/Counter Pin Definition.....	32

This page intentionally left blank.

1 Introduction

1.1 Overview

The USB-1210 is a 16-bit high-speed USB 2.0-based DAQ module equipped with 4 analog input channels providing simultaneous sampling at up to 2MS/s per channel. The USB-1210 delivers high accuracy and excellent dynamic performance at maximum sampling rates and features flexible trigger function. In addition, onboard 256MS FIFO ensures no data loss during acquisition even with heavy loading on CPU or system.

The USB-1210 is USB bus powered and equipped with removable screw-down terminals for easy device connectivity, and the included multi-functional stand can be used for desktop, rail, or wall mounting.

Suitable for high-speed data acquisition, laboratory and medical research, the USB-1210 provides a reliable measurement solution at an affordable price.

1.2 Features

- ▶ Hi-Speed USB 2.0
- ▶ USB bus power
- ▶ 4-CH simultaneous-sampling analog input, up to 2MS/s per channel
- ▶ Analog and digital triggering
- ▶ 500VDC bus isolation
- ▶ Removable screw terminal
- ▶ Lockable USB cable for secure connectivity
- ▶ Ready-to-use testing application (U-Test) included

1.3 Applications

- ▶ Automotive testing
- ▶ High-speed data acquisition
- ▶ Laboratory research
- ▶ Medical
- ▶ I/O control

1.4 Specifications

1.4.1 General Specifications

Digital I/O Specifications	
Number of channels	8-CH programmable function digital input (DI) 4-CH programmable function digital output (DO)
Compatibility	LVTTL (single-end) (supports 3.3V and 5 V DI but 3.3V DO)
Input voltage	Logic low: $V_{IL} = 0.8 \text{ V max}$; $I_{IL} = 0.2 \text{ mA max}$. Logic high: $V_{IH} = 2.0 \text{ V min.}$; $I_{IH} = 0.2 \text{ mA max}$.
Output voltage	Logic low: $V_{OL} = 0.5 \text{ V max}$; $I_{OL} = 10 \text{ mA max}$. Logic high: $V_{OH} = 2.6\text{V min.}$; $I_{IH} = 10 \text{ mA max}$.
Supporting modes (only one can be selected and function at the same time, please see Section 3.1.5: Programmable Function I/O)	8-CH LVTTL DI and 4-CH LVTTL DO 2-CH 32-bit general-purpose timer/counters: Clock source: internal or external Max source frequency: internal: 80 MHz; external: 10 MHz 2-CH PWM outputs*: Duty cycle: 1-99% (please see Section : Mode 10: PWM Output) Modulation frequency: 20 MHz to 0.005Hz
Data transfers	Programmed I/O

Physical, Power, and Operating Environment	
Interface	High speed USB 2.0 compatible, mini-USB connector
Dimensions	156 (L) x 114 (W) x 41 (H) mm (6.14 X 4.49 X 1.61 in.)
I/O Connector	Two 20-pin removable screw-down terminals
Power requirement	USB power (5 V @ 500 mA)
Operating environment	Ambient temperature: 0 to 55°C Relative humidity: 10% to 90%, non-condensing
Storage environment	Ambient temperature: -20 to 70 °C Relative humidity: 5% to 95%, non-condensing

1.4.2 Analog Input

Resolution	16 bit
Channels	4 differential (simultaneous sampling)
Maximum sampling rate	2MS/s per channel
Programmable gain	1, 5
Input range (voltage)	$\pm 10\text{ V}$, $\pm 2\text{ V}$
Offset error	$\pm 1\text{ mV}$ (gain=1) $\pm 0.2\text{ mV}$ (gain=5)
Gain error	Typical: $\pm 0.01\%$ of FSR (gain=1 & 5) Maximum: $\pm 0.02\%$ of FSR (gain=1 & 5)
-3dB bandwidth	630kHz (gain=1) 600kHz (gain=5)
CMRR (fin=1 kHz)	80 dB (gain=1) 90 dB (gain=5)
SFDR (fin=10 kHz)	108 dB (gain=5)
SINAD (fin=10 kHz)	89 dB (gain=1 & 5)
THD (fin=10 kHz)	100 dB (gain=1 & 5)
SNR (fin=10 kHz)	89 dB (gain=1 & 5)
ENOB (fin=10 kHz)	14.3-Bit (gain=1 & 5)
Temperature Drift: Gain Error	5 ppm/ $^{\circ}\text{C}$ (gain=1 & 5)
Temperature Drift: Offset Error	50 $\mu\text{V}/^{\circ}\text{C}$ (gain=1) 20 $\mu\text{V}/^{\circ}\text{C}$ (gain=5)
FIFO buffer	256 Msamples
Trigger sources	Software, external digital, analog trigger (from one analog input channel)
Trigger mode	Post trigger, pre-trigger, delay trigger, middle trigger, gate trigger, post or delay trigger with re-trigger
External A/D conversion source	Yes (from CONV)
Input coupling	DC
Oversvoltage protection	Power on: $\pm 35\text{ V}$ Power off: $\pm 15\text{ V}$
Input impedance	1 G Ω

Data transfer	Programmed I/O, continuous (USB bulk transfer mode)
---------------	---

1.5 Schematics



All units are in millimeters (mm)

1.5.1 Module

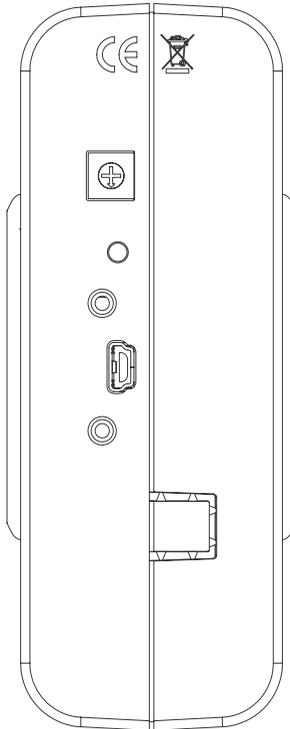


Figure 1-1: USB-1210 Module Rear View

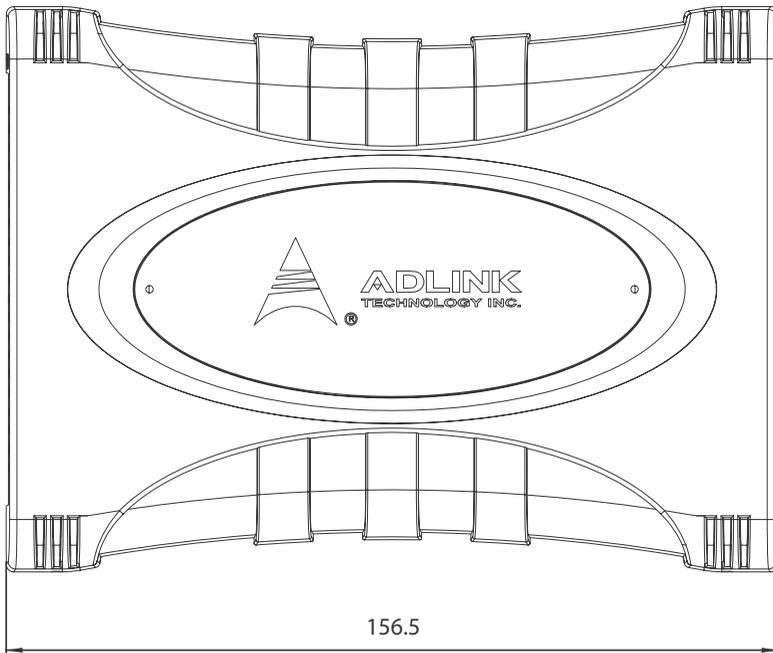


Figure 1-2: USB-1210 Module Side View

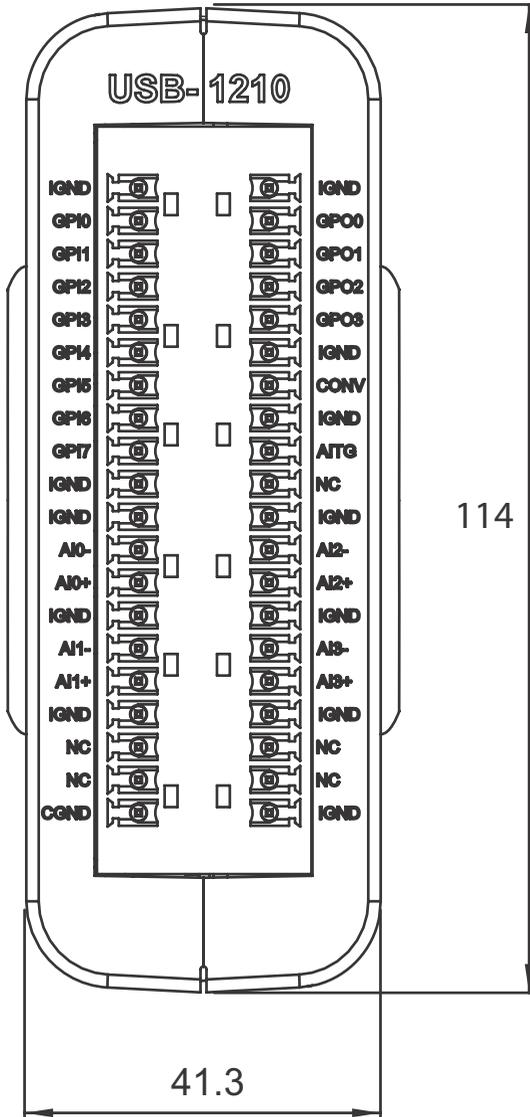


Figure 1-3: USB-1210 Module Front View

1.5.2 Module Stand

The multi-function USB-1210 stand is compatible with desk, rail, or wall mounting. To fix the module in the stand, slide the module body into the stand until a click is heard. To remove the module from the stand, twist the bottom of the stand in a back-and-forth motion and separate from the module.

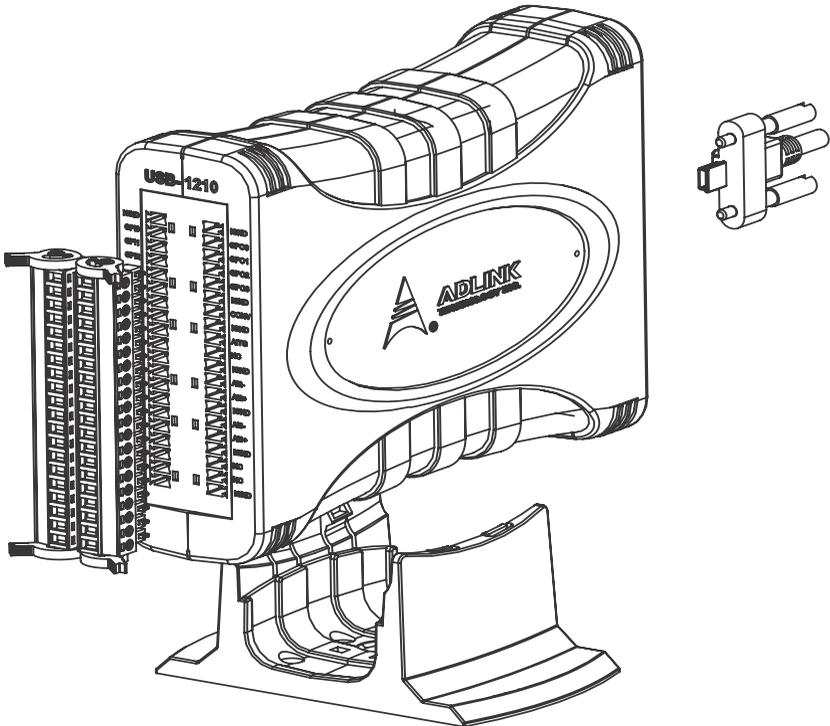


Figure 1-4: Module, Stand, Connector, and USB Cable

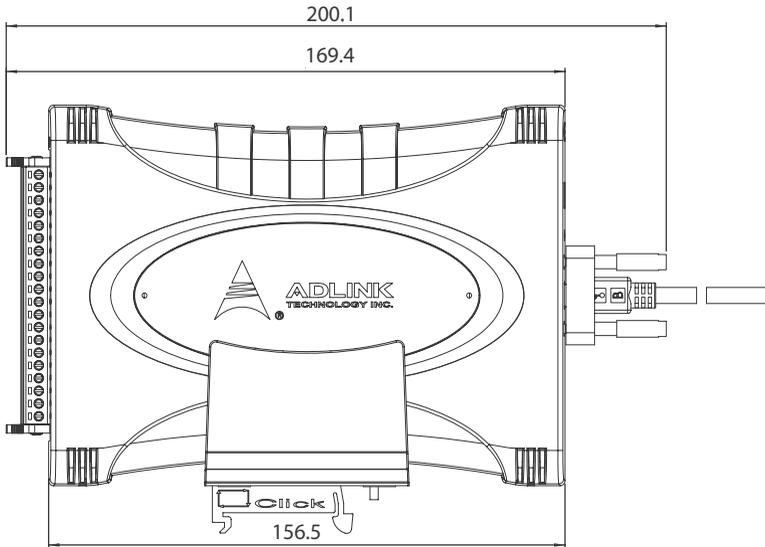


Figure 1-5: Module, Stand, & Wall Mount Kit Side View (w/ connections)

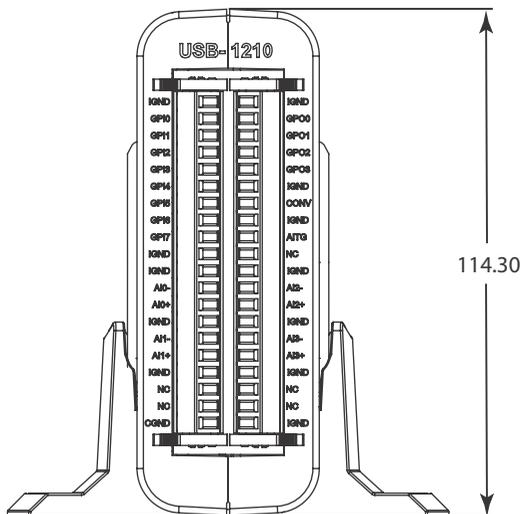


Figure 1-6: Module in Stand Front View

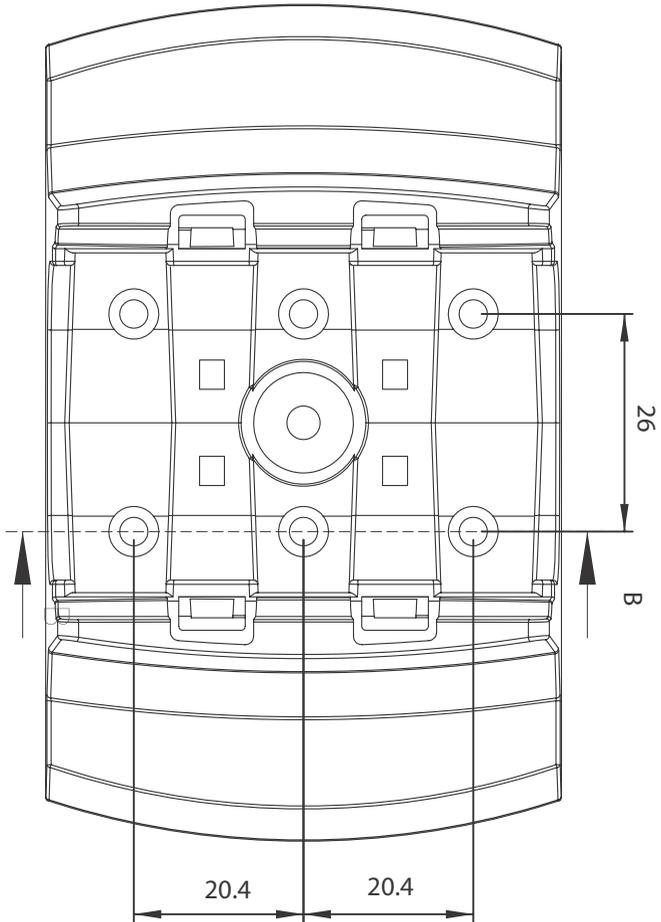


Figure 1-7: Module Stand Top View

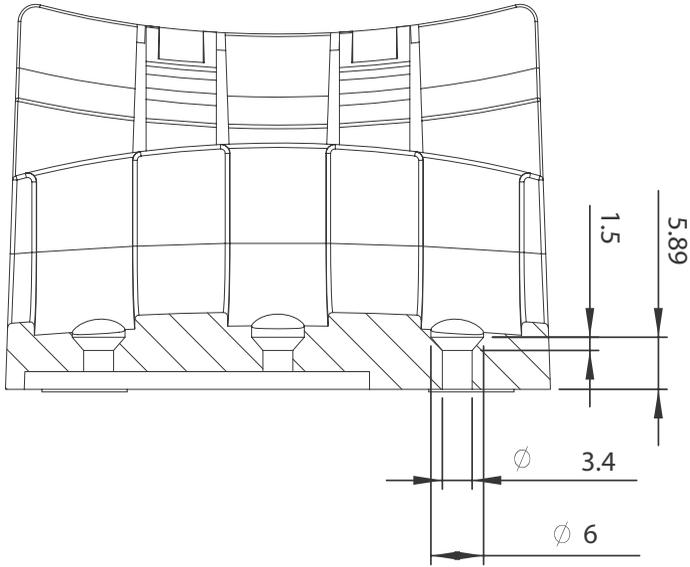


Figure 1-8: Module Stand Side Cutaway View

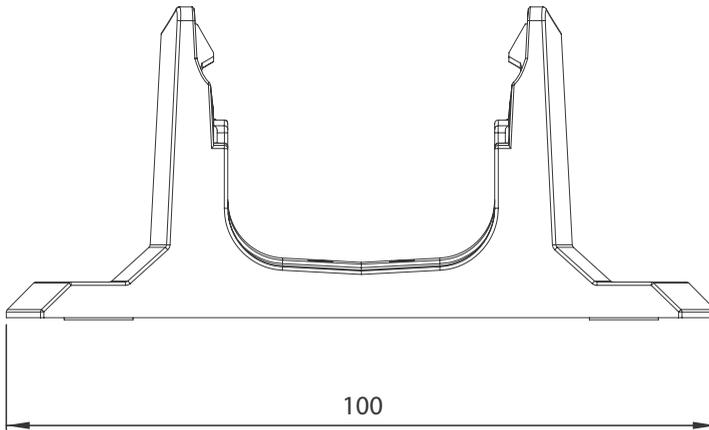


Figure 1-9: Module Stand Front View

1.6 Connector Pin Assignment

The USB-1210 module is equipped with 40-pin removable screw-down terminal connectors, with pin assignment as shown.

	Pin	Pin	
IGND	20	40	IGND
GPI0	19	39	GPO0
GPI1	18	38	GPO1
GPI2	17	37	GPO2
GPI3	16	36	GPO3
GPI4	15	35	IGND
GPI5	14	34	CONV
GPI6	13	33	IGND
GPI7	12	32	AITG
IGND	11	31	NC
IGND	10	30	IGND
AI0-	9	29	AI2-
AI0+	8	28	AI2+
IGND	7	27	IGND
AI1-	6	26	AI3-
AI1+	5	25	AI3+
IGND	4	24	IGND
NC	3	23	NC
NC	2	22	NC
CGND	1	21	IGND

Table 1-1: USB-1210 Pin Assignment

1.6.1 Connector Signal Description

Signal	Reference	I/O	Description
IGND	N/A	None	Isolated ground for AI and DI/O
AI+[0 to 3] AI-[0 to 3]	IGND	I	Differential Input for channels 0 to 3

Signal	Reference	I/O	Description
CGND	N/A	None	Chassis ground
GPI<0..7>	IGND	I	Function Input <0..7> (see Section 3.1.5: Programmable Function I/O)
GPO<0..3>	IGND	O	Function Output <0..3> (see Section 3.1.5: Programmable Function I/O)
CONV	IGND	I	External A/D conversion clock
AITG	IGND	I	Digital trigger for analog input
NC	NC	NC	No connection

Table 1-2: CN1/CN2 I/O Signal Description

1.7 Analog Input Signal Connection

The USB-1210 provides 4 truly differential analog input channels. These four channels are simultaneous-sampling and support up to 2MS/s per channel. The analog signal can be converted to a digital value by the A/D converter. To avoid ground loops and obtain more accurate measurement from the A/D conversion, it is important to understand the type of signal source and how to connect the signal in differential mode.

Signal Source Types

Floating

A floating signal source is not connected in any way to the existing ground system. A device with an isolated output is a floating signal source. This includes optical isolator outputs, transformer outputs, and thermocouples.

Ground-Referenced

A ground-referenced signal is connected in some way to the existing ground system. That is, the signal source is already connected to a common ground point with respect to the USB-1210, assuming that the computer is connected to the same power system. Non-isolated outputs of instruments and

devices that plug into the existing power systems are ground-referenced signal sources.

Input Configurations

Differential Input Mode

Differential input mode provides positive signal and negative signal inputs that respond to signal voltage difference between them, as shown. If the signal source is ground-referenced, differential mode can be used for noise rejection for improvement over single-ended mode.

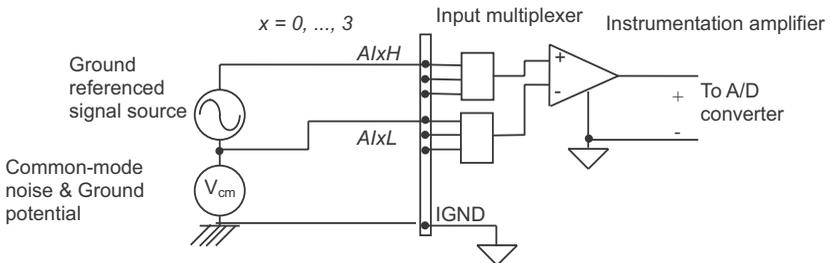


Figure 1-10: GRND-Referenced Source w/ DIFF Input

Connection of a floating signal source to the USB-1210 module in differential input mode is further shown. For floating signal sources, the negative side of the signal should be connected to the AIGND, with less noise coupled into the signal connections than in single-end mode.

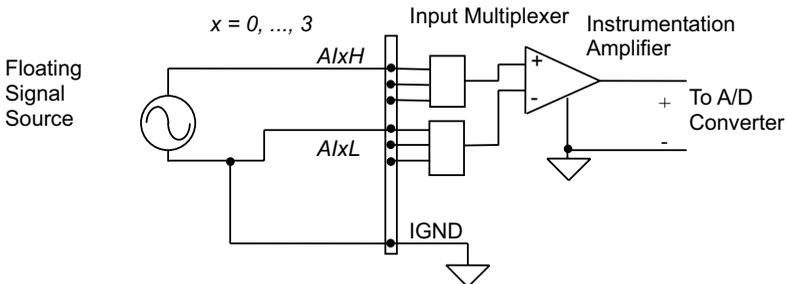


Figure 1-11: Floating Source w/ DIFF Input

1.8 Software Support

ADLINK provides comprehensive software drivers and packages to suit various user approaches to system building. In addition to programming libraries, such as DLLs, for most Windows-based systems, ADLINK also provides drivers for other application environments such as LabVIEW[®] and MATLAB[®]. All software options are included in the ADLINK All-in-One CD.

Be sure to install the driver & utility before using the USB-1210 module.

1.9 Driver Support for Windows

UD-DASK

UD-DASK is composed of advanced 32/64-bit kernel drivers and SDK for customized DAQ application development. USB-DASK enables you to perform detailed operations and achieve superior performance and reliability from your data acquisition system. DASK kernel drivers now support Windows 7/8 OS.

DAQPilot

DAQPilot is a driver and SDK utility providing control and configuration capabilities for ADLINK USB DAQ devices in LabVIEW[®].

You can download and install DAQPilot at:

<http://www.adlinktech.com/TM/DAQPilot.html>.

1.10 Utilities for Windows

U-Test

U-Test is a free and ready-to-use utility which can assist instant testing and operation of all ADLINK USB DAQ series functions with no programming. In addition to providing data collection and monitoring functions, U-Test also supports basic FFT analysis and provides direct control of analog output and digital I/O with a user-friendly interface.

You can download and install U-Test at: <http://www.adlinktech.com/>

2 Getting Started

2.1 Unpacking Checklist

Before unpacking, check the shipping carton for any damage. If the shipping carton and/or contents are damaged, inform your dealer immediately. Retain the shipping carton and packing materials for inspection. Obtain authorization from your dealer before returning any product to ADLINK. Ensure that the following items are included in the package.

- ▶ USB-1210 module
- ▶ Stand
- ▶ Two removable screw terminals
- ▶ USB cable (2-meter length)
- ▶ Rail mount kit
- ▶ ADLINK All-in-One CD
- ▶ User's manual

2.2 Attaching the Module Stand

The multi-function USB-1210 stand is compatible with desk, rail, or wall mounting. To fix the module in the stand, slide the module body into the stand until a click is heard. To remove the module from the stand, twist the bottom of the stand in a back-and forth motion and separate from the module.

2.3 Rail Mounting

The multi-function stand can be mounted on the DIN rail using the rail-mount kit as shown.

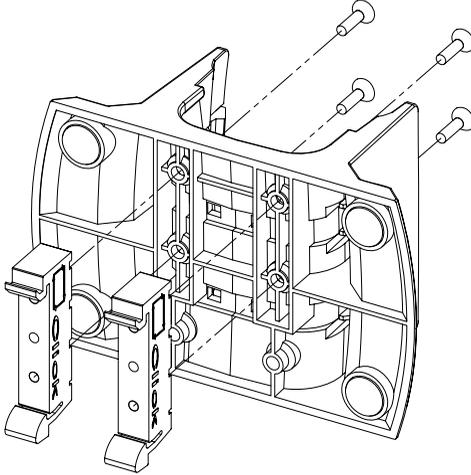


Figure 2-1: Rail Mount Kit

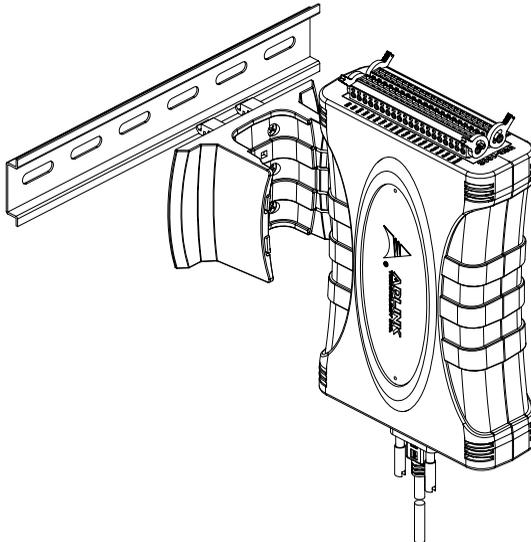


Figure 2-2: Module Pre-Rail Mounting

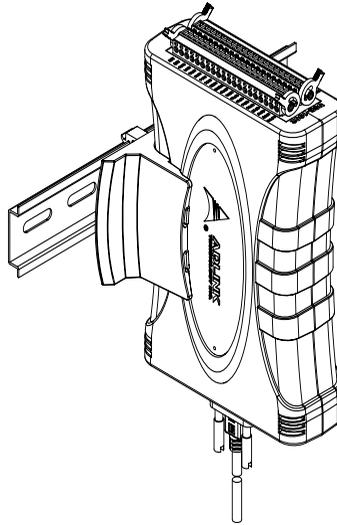


Figure 2-3: Module Rail-Mounted

2.4 Wall Mounting

The multi-function stand can be fixed to a wall using four flush head screws as shown. The four screw holes should be approximately 3.4 mm in diameter.

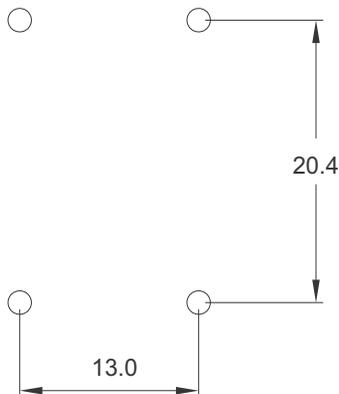


Figure 2-4: Wall Mount Holes

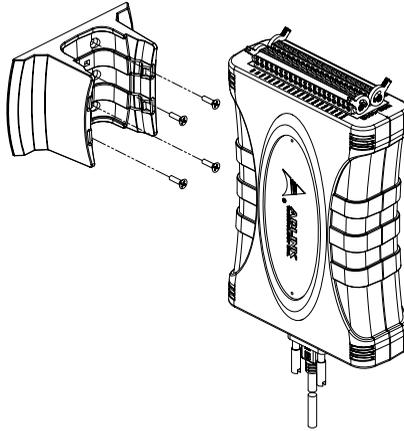


Figure 2-5: Module with Wall Mount Apparatus

2.5 Installing the USB-1210 Module



WARNING:

The appropriate driver must be installed before you can connect the USB DAQ to your computer system. Refer to Section 1.9: Driver Support for Windows for driver support information.

2.5.1 Connecting the USB-1210 Module

1. Turn on your computer.
2. Connect the USB-1210 module to one USB 2.0 port on your computer using the included USB cable.
3. The first time the USB-1210 module is connected, a New Hardware message appears. It will take around 6 seconds to load the firmware. When loading is complete, the LED indicator on the rear of the USB DAQ module changes from amber to green and the New Hardware message closes.
4. The USB-1210 module can now be located in the hardware Device Manager, listed as **ADLINK USBDAQ 1210 Device** as shown.

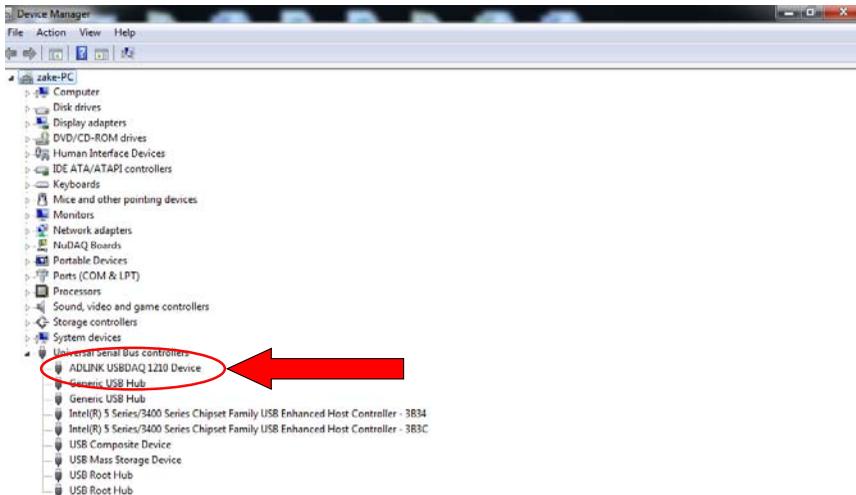


Figure 2-6: USB-1210 module in Windows Device Manager

If the USB-1210 module cannot be detected, the power provided by the USB port may be insufficient. The USB-1210 module is exclusively powered by the USB port and requires 460 mA @ 5 V.

2.5.2 Device ID

A rotary control on the rear of the module (as shown) controls device ID setting and can be set from 1 to 8. The device ID allows dedicated control of the USB-1210 module irrespective of the connected USB port. When more than one USB module of the same

type is connected, each must be set to a different ID to avoid conflicts and errors in operation.

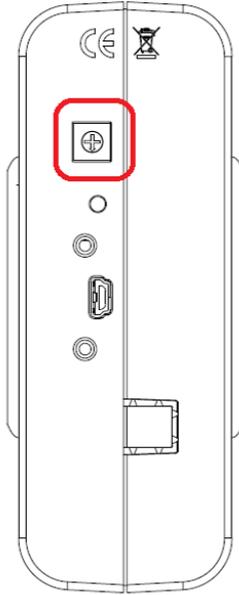


Figure 2-7: Device ID Selection Control

2.5.3 Hardware Configuration

All remaining hardware configurations are software programmable, including sampling/update rate, input/output channel, input range, and others. Please see the UD-DASK Function Reference manual for details.

3 Operation & Calibration

Operation of the USB-1210 is described here to assist in configuration and programming of the module. Functions described include A/D conversion, programmable function I/O, and others

3.1 Operation

3.1.1 Signal Function

The USB-1210 provides 4 truly differential and simultaneous-sampling analog input channels of 16-bit A/D input. Each A/D input channel is connected to one ADC (LT LTC2380 or equivalent). The ADC controller and all timing control logics are implemented by the FPGA. The USB-1210 utilizes calibration circuits to provide high performance and low-temperature drift signal acquisition. Calibration data is saved in the EEPROM.

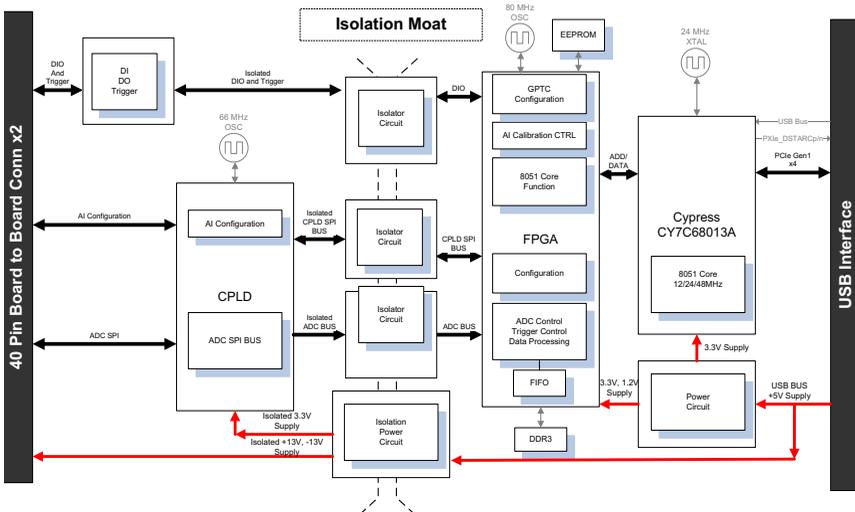


Figure 3-1: Carrier Board Functional Block Diagram

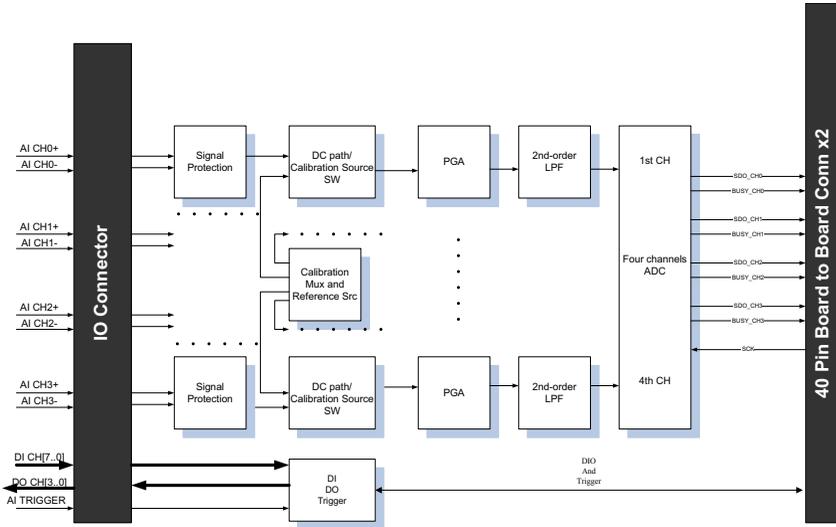


Figure 3-2: Daughter Board Functional Block Diagram

3.1.2 A/D Conversion

When using an A/D converter, the properties of the signal to be measured must be considered and a channel and connection of signals to the module selected. Please see Section 1.7: Analog Input Signal Connection. As well, A/D signal configuration, including channel, gain, and signal type must be defined and set.

A/D acquisition is initiated by a predefined trigger source. Data acquisition will commence once a trigger condition is matched.

After A/D conversion, A/D data is buffered in a data FIFO for transfer into system memory for further processing.

Analog Input Circuitry

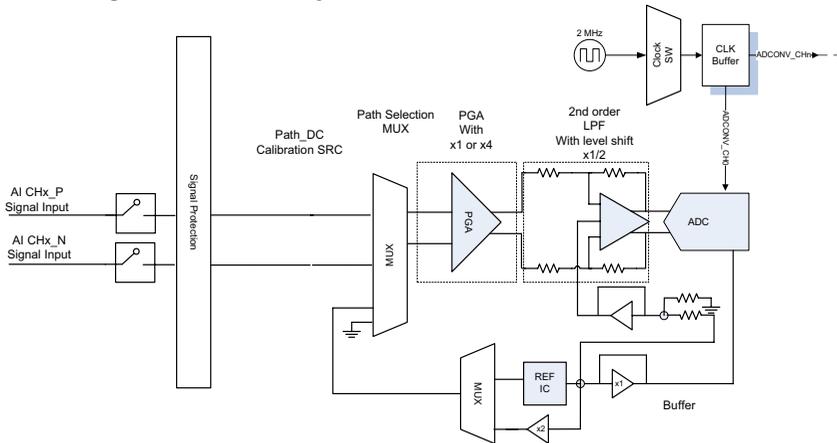


Figure 3-3: Analog Input

AI Data Format

The acquired 16-bit A/D data is 2's complement coded data format. Valid input ranges and ideal transfer characteristics are shown.

Description	Bipolar Analog Input Range		Digital Code
Full-scale range	± 10 V	± 2 V	N/A
Least significant bit	305.2 μ V	61.03 μ V	N/A
FSR-1LSB	9.999695V	1.999938V	7FFF
Midscale +1LSB	305.2 μ V	61.03 μ V	0001
Midscale	0 V	0 V	0000
Midscale -1LSB	-305.2 μ V	-61.03 μ V	FFFF
-FSR	-10 V	-2 V	8000

Table 3-1: Bipolar Analog Input Range and Output Digital Code

Software Conversion with Polling Data Transfer Acquisition Mode (Software Polling)

Generally the most convenient way to acquire a single A/D data sample, the A/D converter starts a conversion when the dedicated software command is executed. The software then polls the conversion status and reads back the A/D data when it is available.

This method is indicated when there is a need to process A/D data in real time or instant closed-loop control. In this mode, the timing of the A/D conversion is fully controlled by the software.



The A/D conversion rate is determined by the software timer and may not be precise.

WARNING:

Continuous Acquisition Mode

Continuous A/D Conversion Clock Source

When the onboard ADC receives a conversion clock signal, A/D conversion is triggered. The USB-1210 conversion clock may originate with the internal hardware timer or externally via CONV (external A/D conversion clock) pin. While the conversion clock source can be chosen by setting AI source configuration, if precision acquisition is required, use of the internal hardware timer is recommended.

Sampling Rate Control with Internal Hardware Timer

This mode is recommended if a fixed and precise A/D sampling rate is required. The period between conversions of individual channels can be accurately programmed. ADC sampling rate is determined by:

Sampling Rate = $2M/ScanIntrv$ Where $ScanIntrv$ is scan interval counter, value can be 1, 2, 3, 4... $2^{32} - 1$

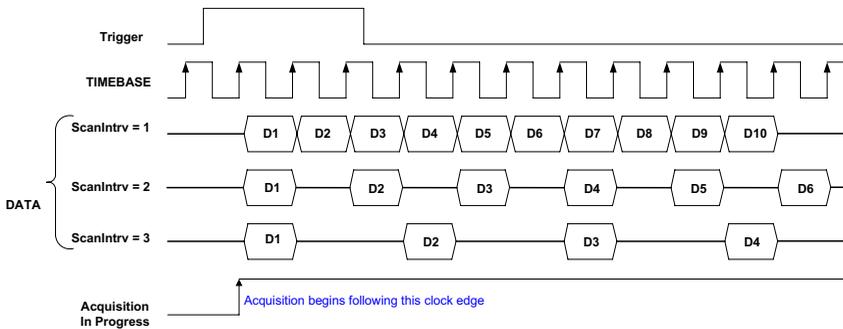


Figure 3-4: Configuring Different Sampling Rates

Sampling Rate Control with External Conversion Strobe Clock

The A/D conversion clock can be provided by external strobe clock via CONV pin. The valid frequency of external clock is from DC to 2 MHz and the minimum pulse width is 225ns.

Analog Input Triggering

The USB-1210 supports flexible trigger sources for analog input functionality. The trigger source can originate with software command, external analog, or external digital signal in continuous analog input mode. Users can configure the trigger source and trigger mode by software.

3.1.3 Trigger Sources

Software Triggering

This trigger mode requires no external trigger source. The trigger asserts immediately following execution of the specified function calls to begin the operation.

External Analog Triggering

The analog multiplexer can select one input channel as the analog trigger source. That is, one of 4 input channels in differential mode can be selected as the analog trigger source. An external analog

trigger occurs when the analog trigger signal crosses above (above high) or below (below low) the pre-defined voltage level. The range of trigger level is the full-scale range of the selected input channel and the resolution is 16-bit.

Below-Low Analog Triggering

In below-low analog triggering, as shown, the trigger signal is generated when the input analog signal is less than the Low_Threshold voltage. High_Threshold setting is not used in this triggering situation.

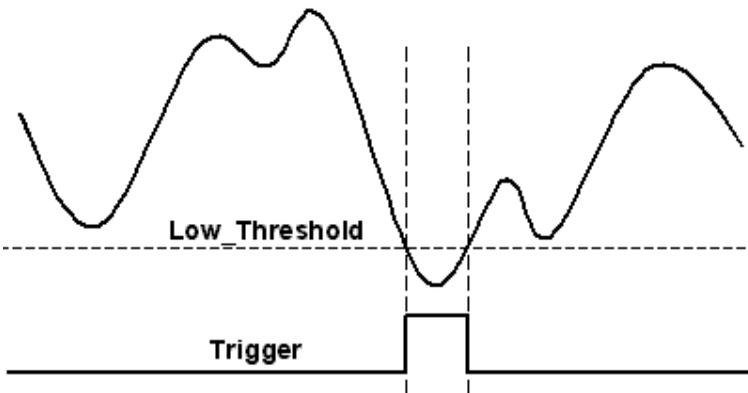


Figure 3-5: Below-Low Analog Triggering

Above-High Analog Triggering

In above-high analog triggering, as shown, the trigger signal is generated when the input analog signal exceeds the High_Threshold voltage. Low_Threshold setting is not used in this triggering situation.

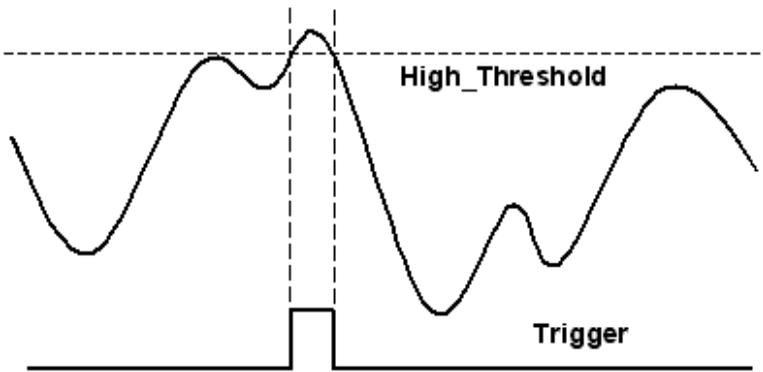


Figure 3-6: Above-High Analog Triggering

External Digital Triggering

An external digital trigger occurs when a rising or falling edge is detected on the digital signal connected to the AITG (analog input trigger) pin. Trigger polarity can be programmed using ADLINK software drivers.



WARNING:

Signal level of the external digital trigger signals should be LVTTTL-compatible, with a minimum pulse of 20ns.



Figure 3-7: Digital Triggering

3.1.4 Trigger Modes

Analog input supports post, pre, middle, delay, gate, post trigger with retrigger, and delay trigger with retrigger modes.

Post-Trigger Acquisition Mode (no retriggering)

Post-trigger acquisition is indicated when data is to be collected after the trigger event, as shown..

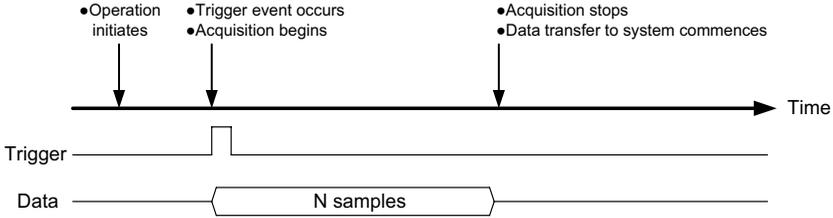


Figure 3-8: Post Trigger without Retriggering

Delayed-Trigger Acquisition Mode (no retriggering)

Delay-trigger acquisition is indicated when the data collection is to be delayed following the trigger event, as shown. Delay duration is specified by a 32-bit counter value, whereby maximum delay is the period of TIMEBASE X $(2^{32} - 1)$, and minimum delay the period of the timebase.

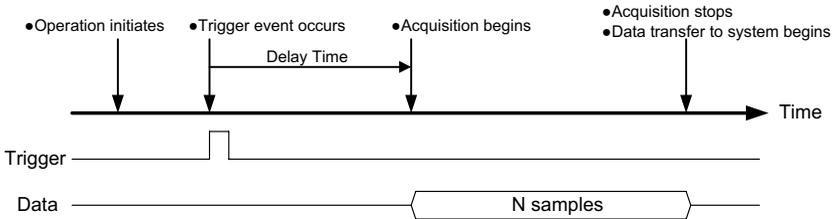


Figure 3-9: Delayed Trigger

Middle Trigger Mode

Middle-trigger acquisition mode is indicated when data is to be collected before and after the trigger event. The amount of stored data before and after trigger event can be set individually (M and N samples), as shown.

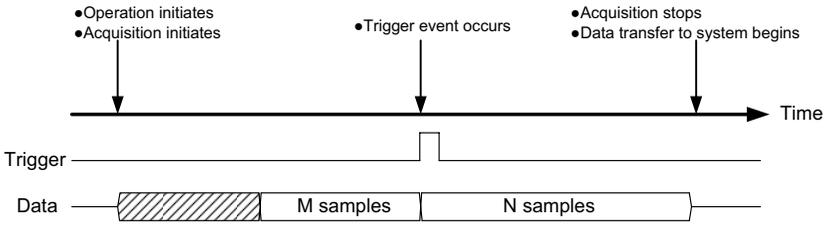


Figure 3-10: Middle Trigger

Pre-Trigger Mode

Pre-trigger acquisition is indicated when data is to be collected before the trigger event. Acquisition commences once specified function calls are executed to begin the pre-trigger operation, and stops when the trigger event occurs. If the trigger event occurs after the specified amount of data has been acquired, the system stores only data preceding the trigger event by a specified amount, as shown.

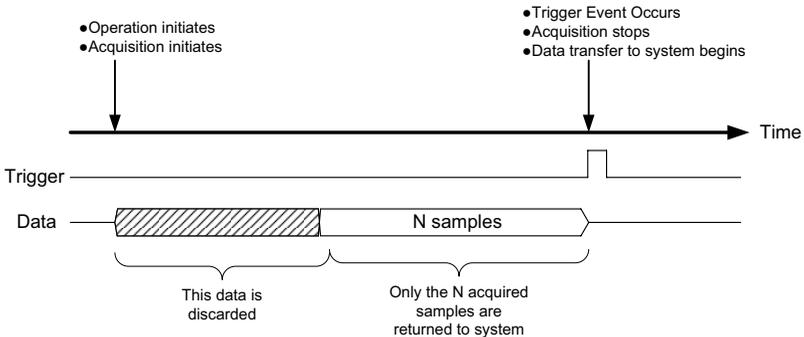


Figure 3-11: Pre-Trigger

Post-Trigger or Delayed-Trigger Acquisition Mode with Retriggering

Post-trigger or Delayed-Trigger acquisition with re-trigger function is indicated when data is to be collected after several trigger events. An example is shown, in which N samples of data are

acquired after the first trigger signal, after which the USB-1210 awaits the next re-trigger signal (re-trigger signals occurring before the N samples are completed will be ignored). When the re-trigger signal occurs, another N samples are performed. The process repeats until the specified number of re-trigger signals are detected.

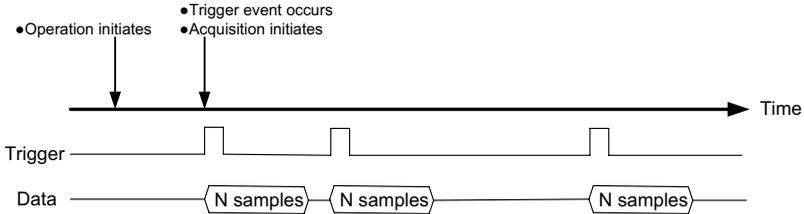


Figure 3-12: Post Trigger with Retriggering

Gated Trigger

Gated-trigger acquisition is indicated in applications where you want to collect data when trigger events are set to level high/low, and hold acquisition when trigger events are set to the opposite level.

As shown, after the operation starts, the first scan of data is immediately acquired when the trigger signal is deasserted and paused when the trigger signal is asserted.

The remaining A/D conversions are not performed until the trigger signal is deasserted again. The process repeats until the specified amount of data is acquired.

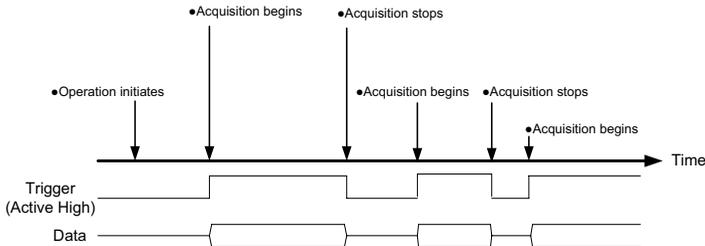


Figure 3-13: Gated Trigger

3.1.5 Programmable Function I/O

The USB-1210 supports powerful programmable I/O function provided by an FPGA chip, configurable as LVTTTL DI/DO, 32-bit timer/counters, and PWM output. These signals are single-ended and 5 V LVTTTL-compliant.

LVTTTL DI/DO

Programmable function I/O can be used as static LVTTTL-compliant 8-CH digital input and 4-CH digital output. You can read/write these I/O lines by software polling, with sample and update rate fully controlled by software timing.

	Pin#	Pin#	
IGND	20	40	IGND
GPI0	19	39	GPO0
GPI1	18	38	GPO1
GPI2	17	37	GPO2
GPI3	16	36	GPO3
GPI4	15	35	IGND
GPI5	14	34	N/C*
GPI6	13	33	N/C*
GPI7	12	32	N/C*
IGND	11	31	N/C*

*Not used in DI/O

Table 3-2: Pin Definition of LVTTTL Digital I/O

General Purpose Timer/Counter

The USB-1210 is equipped with two general purpose timer/counter sets featuring:

- ▶ Count up/down controllable by hardware or software
- ▶ Programmable counter clock source (internal clock up to 80 MHz, external clock up to 10 MHz)

- ▶ Programmable gate selection (hardware or software control)
- ▶ Programmable input and output signal polarities (high active or low active)
- ▶ Initial Count loaded from a software application
- ▶ Current count value readable by software without affecting circuit operation.

	Pin	Pin	
IGND	20	40	IGND
GPTC_CLK	19	39	GPTC_OUT0
GPTC_UD0	18	38	GPTC_OUT1
GPTC_GATE0	17	37	GPTC_OUT2
GPTC_AUX0	16	36	GPTC_OUT3
GPTC_CLK2	15	35	IGND
GPTC_UD2	14	34	N/C*
GPTC_GATE2	13	33	N/C*
GPTC_AUX2	12	32	N/C*
IGND	11	31	N/C*

*Not used in GPTC

Table 3-3: Timer/Counter Pin Definition

3.1.6 Basic Timer/Counter Function

Each timer/counter has three inputs that can be controlled via hardware or software. They are clock input (GPTC_CLK), gate input (GPTC_GATE), and up/down control input (GPTC_UD). The GPTC_CLK input provides a clock source input to the timer/counter. Active edges on the GPTC_CLK input increment or decrement the counter. The GPTC_UD input directs the counter to count up or down (high: count up; low: count down), while the GPTC_GATE input is a control signal acting as a counter enable or counter trigger signal in different applications. The GPTC_OUT then generates a pulse signal based on the timer/counter mode set.

All input/output signal polarities can be programmed by software application. For brevity, all GPTC_CLK, GPTC_GATE, and GPTC_OUT in the following illustrations are assumed to be active high or rising-edge triggered.

3.1.7 General Purpose Timer/Counter Modes

Ten programmable timer/counter modes are available. All modes initialize following a software-start signal set by the software. The GPTC software reset initializes the status of the counter and reloads the initial value to the counter. The operation remains halted until software start is executed again. Operations under different modes are described as follows.

Mode 1: Simple Gated-Event Counting

In this mode, the counter calculates the number of pulses on the GPTC_CLK after a software start. Initial count can be loaded from the software application. Current count value can be read back by software any time with no influence on calculation. GPTC_GATE enables/disables calculation. When GPTC_GATE is inactive, the counter halts the current count value. Operation in which initial count = 5, countdown mode is shown.

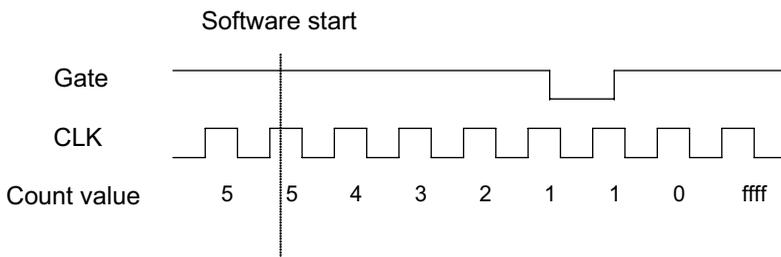


Figure 3-14: Mode 1-Simple Gated-Event Calculation

Mode 2: Single Period Measurement

The counter calculates the period of the signal on GPTC_GATE in terms of GPTC_CLK. The initial count can be loaded from the software application. After software start, the counter calculates the number of active edges on GPTC_CLK between two active edges

of GPTC_GATE. After the completion of the period interval on GPTC_GATE, GPTC_OUT outputs high and then current count value can be read by the software application. Operation in which initial count = 0, count-up mode is shown.

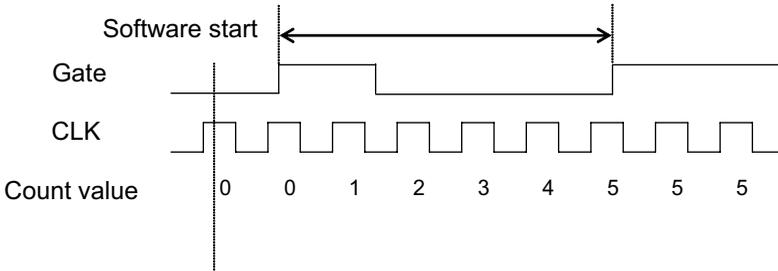


Figure 3-15: Mode 2-Single Period Measurement

Mode 3: Single Pulse-Width Measurement

The counter calculates the pulse-width of the signal on GPTC_GATE in terms of GPTC_CLK. Initial count can be loaded from the software application. After software start, the counter calculates the number of active edges on GPTC_CLK when GPTC_GATE is in its active state.

After the completion of the pulse-width interval on GPTC_GATE, GPTC_OUT outputs high and current count value can be read by the software application. Operation in which initial count = 0, count-up mode is shown.

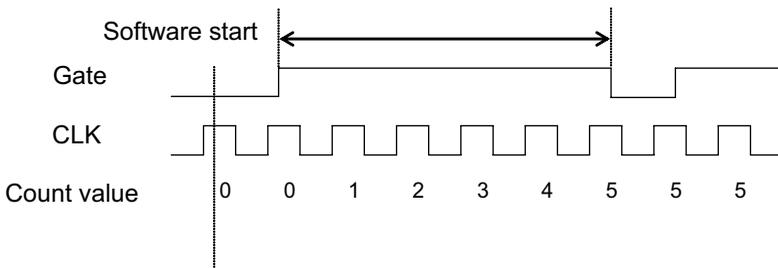
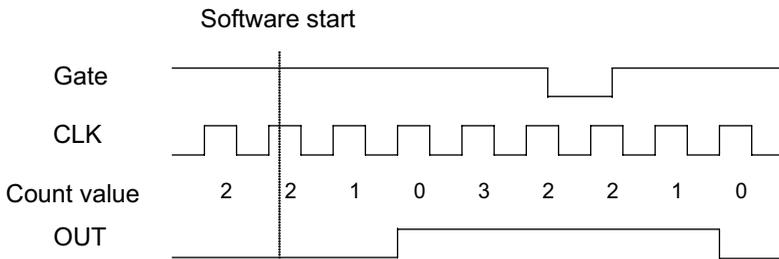


Figure 3-16: Mode 3-Single Pulse-Width Measurement**Mode 4: Single-Gated Pulse Generation**

This mode generates a single pulse with programmable delay and programmable pulse-width following software start. The two programmable parameters can be specified in terms of periods of the GPTC_CLK input by the software application. GPTC_GATE enables/disables calculation. When GPTC_GATE is inactive, the counter halts the current count value. Generation of a single pulse with a pulse delay of two and a pulse-width of four is shown.

**Figure 3-17: Mode 4-Single-Gated Pulse****Mode 5: Single-Triggered Pulse**

This mode generates a single pulse with programmable delay and programmable pulse-width following an active GPTC_GATE edge. These programmable parameters can be specified in terms of periods of the GPTC_CLK input. When the first GPTC_GATE edge triggers the single pulse, GPTC_GATE has no effect until software start is executed again. Generation of a single pulse with a pulse delay of two and a pulse-width of four is shown.

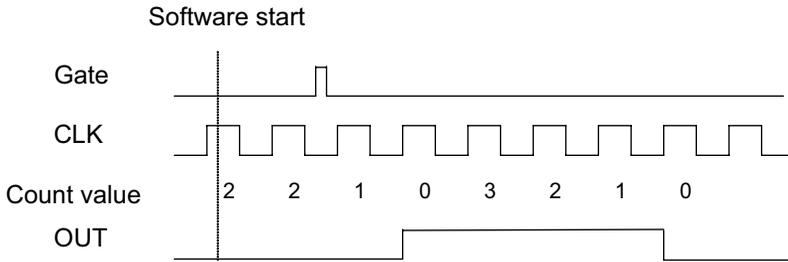


Figure 3-18: Mode 5-Single-Triggered Pulse

Mode 6: Re-Triggered Single Pulse Generation

This mode is similar to Mode 5 except that the counter generates a pulse following every active edge of GPTC_GATE. After software start, every active GPTC_GATE edge triggers a single pulse with programmable delay and pulse width. Any GPTC_GATE triggers that occur when the prior pulse is not completed are ignored. Generation of two pulses with a pulse delay of two and a pulse width of four is shown.

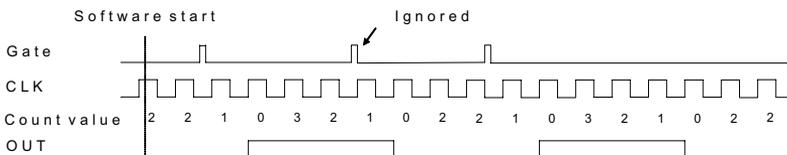


Figure 3-19: Mode 6-Re-Triggered Single Pulse

Mode 7: Single-Triggered Continuous Pulse Generation

This mode is similar to Mode 5 except that the counter generates continuous periodic pulses with programmable pulse interval and pulse-width following the first active edge of GPTC_GATE. When the first GPTC_GATE edge triggers the counter, GPTC_GATE has no effect until software start is executed again. Generation of two pulses with a pulse delay of four and a pulse-width of three is shown.

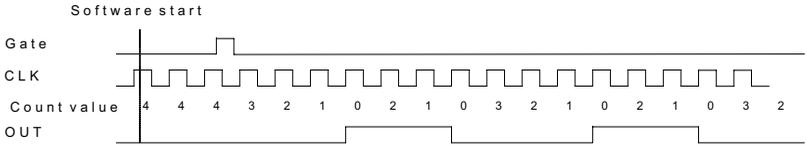


Figure 3-20: Mode 7-Single-Triggered Continuous Pulse

Mode 8: Continuous Gated Pulse Generation

This mode generates periodic pulses with programmable pulse interval and pulse-width following software start. GPTC_GATE enables/disables calculation. When GPTC_GATE is inactive, the counter halts the current count value. Generation of two pulses with a pulse delay of four and a pulse-width of three is shown.

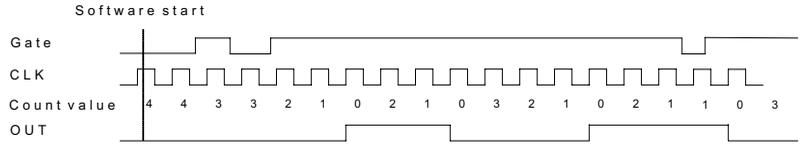


Figure 3-21: Mode 8-Continuous Gated Pulse

Mode 9: Edge Separation Measurement

Measures the time differentiation between two different pulse signals. The first pulse signal is connected to GPTC_GATE and the second signal is connected to GPTC_AUX. Clocks that pass between the rising edge signal of two different pulses through the 80 MHz internal clock or external clock are calculated. You can calculate the time period via the known clock frequency. The max-

imum counting width is 32-bit. Decrease of the counter value in Edge Separation Measurement mode is shown.

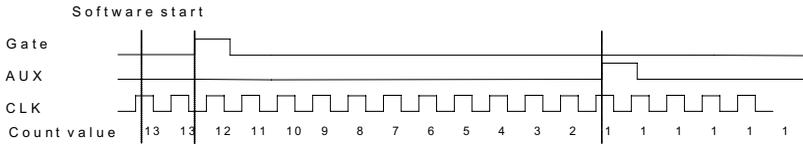


Figure 3-22: Mode 9-Edge Separation Measurement

Mode 10: PWM Output

The USB-1210 timer/counter can also simulate a PWM (Pulse Width Modulation) output. The PWM starts to generate output following a GPTC_GATE edge trigger or being activated/inactivated by the GPTC_GATE high/low logic control. By setting a varying amount of Pulse_initial_cnt and Pulse_length_cnt, varying pulse frequencies (Fpwm) and duty cycles (Dutypwm) can be obtained. PWM output is shown.

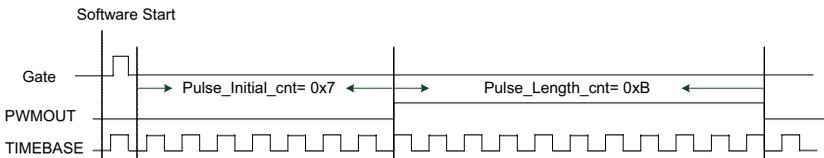


Figure 3-23: Mode 10-PWM Output Following Trigger

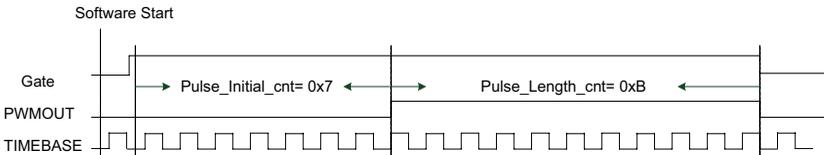


Figure 3-24: Mode 10-PWM Output Following GATE Control

Calculation of the PWM frequency and duty cycle is as follows.

$$F_{\text{PWM}} = \frac{F_{\text{Timebase}}}{\text{Pulse_initial_cnt} + \text{Pulse_length_cnt}}$$

$$\text{Duty}_{\text{PWM}} = \frac{\text{Pulse_length_cnt}}{\text{Pulse_initial_cnt} + \text{Pulse_length_cnt}}$$

3.1.8 Isolation

The USB-1210 provides 500VDC isolation capability to protect against hazardous voltage caused by erroneous signal connection or signal levels to be measured exceeding expectation. The isolation circuit can also reduce the ground-loop noise.

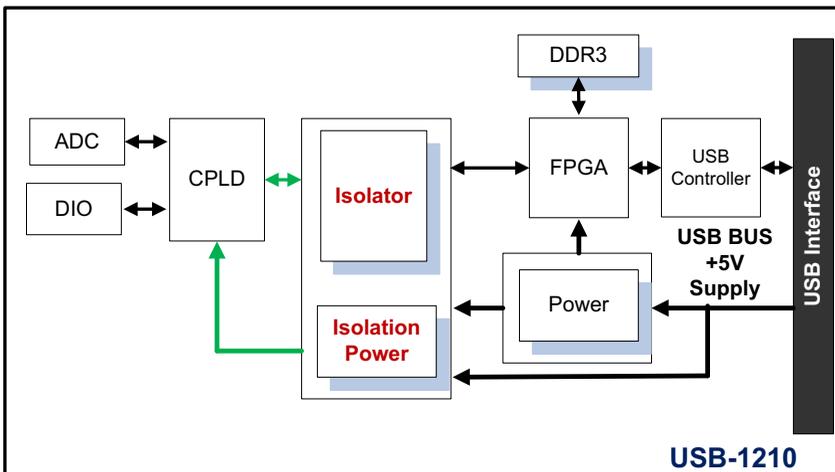


Figure 3-25: Isolation

3.2 Calibration

3.2.1 Loading Calibration Constants

The USB-1210 is factory-calibrated before shipment. The associated calibration constants of the TrimDACs firmware are written to the onboard EEPROM. TrimDACs firmware is the algorithm in the

FPGA. Loading calibration constants entails loading the values of TrimDACs firmware stored in the onboard EEPROM.

Dedicated space for storing calibration constants is provided in the EEPROM. In addition to the bank of factory calibration constants, there is one user-utilization bank, allowing loading of the TrimDACs firmware values either from the original factory calibration or a subsequently-performed calibration.

The default calibration constants are loaded from the user-utilization bank and are the same as those in the factory calibration bank if no auto-calibration is performed.

Since measurement and output errors may vary depending on time and temperature, it is recommended that you calibrate the USB-1210 module in your existing testing environment, as follows.

3.2.2 Auto-Calibration

USB-1210 auto-calibration utility measures and corrects almost all calibration errors with no external signal connections, reference voltage, or measurement devices. The USB-1210 provides onboard calibration reference to ensure the accuracy of auto-calibration. The reference voltage is measured in the production line by a digital potentiometer and compensated in the software. The calibration constant is stored after this measurement.

3.2.3 Saving Calibration Constants

Factory-calibrated constants are permanently stored in a bank of the onboard EEPROM and cannot be modified. When the device is recalibrated, the software stores the new constants in a user-configurable section of the EEPROM. To restore original factory calibration settings, the software can copy the factory-calibrated constants to the user-configurable section of the EEPROM. When auto-calibration is complete, the new calibration constants can be saved to the user-configurable banks in the EEPROM.



NOTE:

The USB-1210 should be warmed up for at least 15 minutes before initiating auto-calibration

Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS**, and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- ▶ Read these safety instructions carefully.
- ▶ Keep this user's manual for future reference.
- ▶ Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- ▶ When installing/mounting or uninstalling/removing equipment:
 - ▷ Turn off power and unplug any power cords/cables.
- ▶ To avoid electrical shock and/or damage to equipment:
 - ▷ Keep equipment away from water or liquid sources;
 - ▷ Keep equipment away from high heat or high humidity;
 - ▷ Keep equipment properly ventilated (do not block or cover ventilation openings);
 - ▷ Make sure to use recommended voltage and power source settings;
 - ▷ Always install and operate equipment near an easily accessible electrical socket-outlet;
 - ▷ Secure the power cord (do not place any object on/over the power cord);
 - ▷ Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
 - ▷ If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

- ▶ Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.

A Lithium-type battery may be provided for uninterrupted, backup or emergency power.



Risk of explosion if battery is replaced with an incorrect type; please dispose of used batteries appropriately.

-
- ▶ Equipment must be serviced by authorized technicians when:
 - ▷ The power cord or plug is damaged;
 - ▷ Liquid has penetrated the equipment;
 - ▷ It has been exposed to high humidity/moisture;
 - ▷ It is not functioning or does not function according to the user's manual;
 - ▷ It has been dropped and/or damaged; and/or,
 - ▷ It has an obvious sign of breakage.

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology, Inc.

Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路 166 號 9 樓
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 5215 Hellyer Avenue, #110
San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 上海市浦东新区张江高科技园区芳春路 300 号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park
Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology Beijing

Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室(100085)
Rm. 801, Power Creative E, No. 1 Shang Di East Rd.
Beijing, 100085 China
Tel: +86-10-5885-8666
Fax: +86-10-5885-8626
Email: market@adlinktech.com

ADLINK Technology Shenzhen

Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bldg. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7
High-Tech Industrial Park S., Shenzhen, 518054 China
Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

LiPPERT ADLINK Technology GmbH

Address: Hans-Thoma-Strasse 11, D-68163
Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

ADLINK Technology, Inc. (French Liaison Office)

Address: 6 allée de Londres, Immeuble Ceylan
91940 Les Ulis, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation

Address: 〒101-0045 東京都千代田区神田鍛冶町 3-7-4
神田 374 ビル 4F
KANDA374 Bldg. 4F, 3-7-4 Kanda Kajicho,
Chiyoda-ku, Tokyo 101-0045, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5209-6013
Email: japan@adlinktech.com

ADLINK Technology, Inc. (Korean Liaison Office)

Address: 137-881 서울시 서초구 서초대로 326, 802 (서초동, 모인터빌딩)
802, Mointer B/D, 326 Seocho-daero, Seocho-Gu,
Seoul 137-881, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte. Ltd.

Address: 84 Genting Lane #07-02A, Cityneon Design Centre
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte. Ltd. (Indian Liaison Office)

Address: #50-56, First Floor, Spearhead Towers
Margosa Main Road (between 16th/17th Cross)
Malleswaram, Bangalore - 560 055, India
Tel: +91-80-65605817, +91-80-42246107
Fax: +91-80-23464606
Email: india@adlinktech.com

ADLINK Technology, Inc. (Israeli Liaison Office)

Address: 27 Maskit St., Corex Building
PO Box 12777
Herzliya 4673300, Israel
Tel: +972-77-208-0230
Fax: +972-77-208-0230
Email: israel@adlinktech.com

ADLINK Technology, Inc. (UK Liaison Office)

Tel: +44 774 010 59 65
Email: UK@adlinktech.com