NuDAM -6018 Thermocouple Analog Input Module

1. Introduction

NuDAM-6018 is a thermocouple input module with 8 input channels. Six of the eight channels are differential and the other two are single ended type.

Features

- ♦ 8 analog input channels
- 6 differential input and 2 single ended input
- programmable input range
- programmable host watchdog timer for host failure protection
- on board CJC for temperature measurement
- ◆ 2500 Vrms analog input isolation
- internal watchdog timer for device failure protection
- easy programming by software
- easy installation and wiring

Specifications

♦ Interface:

RS-485, 2 wires

Speed (bps): 600, 1200, 2400, 4800, 9600, 19.2k, 38.4k, 57.6k, 115.2k

Analog Input:

Differential channels: 6

Single ended channels: 2

Resolution: 16 bits

Accuracy: ±0.05%

Sampling rate: 10

Unit conversion: thermocouple, mV, V or mA Thermocouple type: J, K, T, E, R, S, B, N and C

J: 0°C ~ 760°C K: 0°C ~ 1370°C

R: 500°C ~ 1750°C S: 500°C ~ 1750°C

B: 500°C ~ 1800°C N: -270°C ~ 1300°C

C: 0°C ~ 2320°C

Voltage range: programmable 6 levels:

 $\pm 2.5V$, $\pm 1V$, ± 500 mV, ± 100 mV, ± 50 mV, ± 15 mV

Current measurement: 20mA (with external 125


ohm resistor)

Isolation Voltage: 2500 Vrms

Note: The maximum input voltage shall not exceed to ±30V with reference to AGND otherwise, they may cause an unrecoverable harm to the hardware component.

- ◆ Storage Temperature Range: -25 to 80 °C
- Operating Temperature Range: -10 to 70 °C
- ► Power Requirement: +10V to +30V_{DC} Unregulated with against power reversal
- ◆ Power Consumption: 0.70W
- Case: ABS with captive mounting hardware
- ◆ CE Class A Conformity

2. Pin Assignment

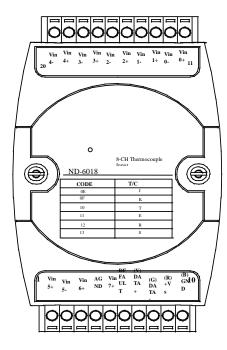


Pin Definitions


Pin#	Signal Name	Description
1	Vin5+	Differential positive input channel 5
2	Vin5-	Differential negative input channel 5
3	Vin6+	Single-ended input channel 6
4	AGND	Analog signal ground of channel 6 & 7
5	Vin7+	Single-ended input channel 7
6	DEFAULT*	Initial state setting
7	(Y)DATA+	RS-485 signal, positive
8	(G)DATA-	RS-485 signal, negative
9	(R)+VS	Power supply, $+10V \sim +30Vdc$
10	(B)GND	Ground
11	Vin0+	Differential positive input channel 0
12	Vin0-	Differential negative input channel 0
13	Vin1+	Differential positive input channel 1
14	Vin1-	Differential negative input channel 1
15	Vin2+	Differential positive input channel 2
16	Vin2-	Differential negative input channel 2
17	Vin3+	Differential positive input channel 3
18	Vin3-	Differential negative input channel 3
19	Vin4+	Differential positive input channel 4
20	Vin4-	Differential negative input channel 4

The module is in DEFAULT mode when DEFAULT pin connected to GND while applying power on the module.
Do not apply any power signal to DEFAULT pin, just left it open or connected it to GND.


3. Application Wiring Differential Voltage Input

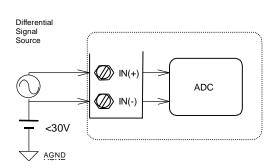


Single Ended Voltage Input

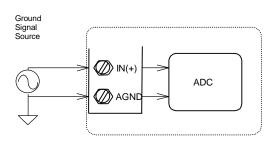


Current Input Measurement

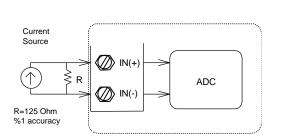

Thermocouple Input Measurement

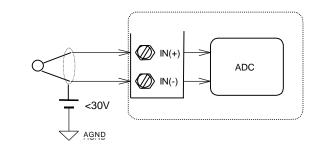

4. Functional Block Diagram

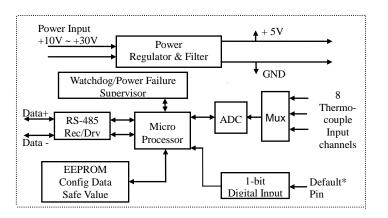

5. Installation

Equipment for Installation

A existing RS-485 network NuDAM modules DC Power supply (+10V~+30V) Wires for power, communication and I/O signal

Installation Procedure

- 1. Configure every single NuDAM module under the administration utility
- 2. The baud rate setting and calibration procedure must be done under the DEFAULT* mode
- 3. The baud rate and check-sum status must be identity with the application network. The address ID must not be conflict with other modules on the network
- 4. Plug the new module to the existing network
- Use the NuDAM administration utility to check the entire network

6. Command Set

There are three categories of NuDAM commands. The first is the *general commands*, including set configuration command, read configuration, reset, read module's name or firmware version, etc. Every NuDAM can response to the general commands. The second is the *functional commands*, which depends on functions of each module. Not every module can execute all function commands. The third is the *special commands* including functions about the programmable watchdog timer, safe values, and the programmable leading code. All the commands used in the NuDAM analog input module are list in the following table.

Command Syntax

General Command				
Set Configuration	%(OldAddr)(NewAddr)			
	(InputRange)(BaudRate)			
	(DataFormat)			
Read Configuration	\$(Addr)2			
Read Module Name	\$(Addr)M			
Read Firmware Version	\$(Addr)F			
Software Reset	\$(Addr)RS			
Functional Command				
Span Calibration	\$(Addr)0			
Offset Calibration	\$(Addr)1			
Read Analog Data From	#(Addr)(Channel No)			
Channel N				
Read All Analog Data	#(Addr)A			
Enable/Disable Channel for	\$(Addr)5(ChannelVal)			

Multiplexing	
Read Channel Status	\$(Addr)6
Read CJC Status	\$(Addr)3
Enable/Disable Internal CJC	\$(Addr)C(Status)
Read Enable/Disable Internal	\$(Addr)D
CJC Status	

^{*} The module accepts calibration command, baud rate and checksum configuration setting under the DEFAULT* mode.

7. ADLINK on the Internet

The full version manual can be download from website

http://www.adlink.com.tw/download/manual/index.htm#6000

Homepage http://www.adlink.com.tw
Service: service@adlink.com.tw
Technical Assistance: NuDAM@adlink.com.tw

Copyright © 2000 ADLINK TECHNOLOGY INC.
TEL: 886-2-82265877 FAX: 886-2-82265717
Contents and specification subject to change without notice.

NuDAM® is a registered trademark of ADLINK TECHNOLOGY INC. Other brands of products are trademarks or registered trademarks of their respective holders. AM-ND6018-E1.01



^{*} Please refer the manual in PDF file format in the CD for detail description of these commands.