



**MODEL:  
SPCIE-C246**



**Full-Size PICMG 1.3 CPU Card Supports LGA1151 Intel® Xeon® E3, 8<sup>th</sup>/9<sup>th</sup> Gen. Core™ i9/i7/i5/i3, Pentium® or Celeron® CPU, Intel® C246 Chipset, DDR4, HDMI, DisplayPort, Dual GbE, USB 3.2 Gen 1, SATA 6Gb/s, M.2, RS-232, HD Audio and RoHS**

# User Manual

# Revision

Date	Version	Changes
March 6, 2020	1.11	Updated supported CPU specification
March 7, 2019	1.10	Initial release

# Copyright

## COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

# Manual Conventions



## WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



## CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



## NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

# Table of Contents

---

<b>1 INTRODUCTION.....</b>	<b>1</b>
1.1 INTRODUCTION.....	2
1.2 FEATURES.....	3
1.3 CONNECTORS .....	4
1.4 DIMENSIONS.....	5
1.5 DATA FLOW .....	6
1.6 TECHNICAL SPECIFICATIONS .....	7
<b>2 PACKING LIST .....</b>	<b>9</b>
2.1 ANTI-STATIC PRECAUTIONS.....	10
2.2 UNPACKING PRECAUTIONS.....	10
2.3 PACKING LIST.....	11
2.4 OPTIONAL ITEMS .....	12
<b>3 CONNECTORS .....</b>	<b>14</b>
3.1 PERIPHERAL INTERFACE CONNECTORS.....	15
3.1.1 SPCIE-C246 Layout.....	15
3.1.2 Peripheral Interface Connectors .....	16
3.1.3 External Interface Panel Connectors.....	17
3.2 INTERNAL PERIPHERAL CONNECTORS .....	17
3.2.1 +12V ATX Power Connector .....	17
3.2.2 Audio Kit Connector .....	18
3.2.3 Battery Connector.....	19
3.2.4 Chassis Intrusion Connector.....	20
3.2.5 DDR4 DIMM Sockets .....	21
3.2.6 Digital I/O Connector.....	21
3.2.7 DisplayPort Connector.....	22
3.2.8 EC Debug Connector.....	23
3.2.9 Fan Connector (CPU).....	24
3.2.10 Fan Connectors (System) .....	25

<i>3.2.11 Front Panel Connector</i> .....	25
<i>3.2.12 I<sup>2</sup>C Connector</i> .....	26
<i>3.2.13 Keyboard and Mouse Connector</i> .....	27
<i>3.2.14 LAN LED Connectors</i> .....	28
<i>3.2.15 M.2 2280 Slot, M-Key</i> .....	29
<i>3.2.16 Power Button</i> .....	31
<i>3.2.17 RS-232 Serial Ports</i> .....	31
<i>3.2.18 RS-422/485 Serial Port</i> .....	32
<i>3.2.19 SATA 6Gb/s Drive Connector</i> .....	33
<i>3.2.20 SMBus Connector</i> .....	34
<i>3.2.21 SPI Flash Connector</i> .....	35
<i>3.2.22 SPI Flash Connector, EC</i> .....	36
<i>3.2.23 TPM Connector</i> .....	37
<i>3.2.24 USB 2.0 Connectors</i> .....	38
<i>3.2.25 USB 2.0 Connector (Type A)</i> .....	39
<i>3.2.26 USB 3.2 Gen 1 Connector</i> .....	40
<b>3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL</b> .....	41
<i>3.3.1 Ethernet Connectors</i> .....	41
<i>3.3.2 USB 3.2 Gen 1 Connectors</i> .....	42
<i>3.3.3 HDMI Connector</i> .....	42
<b>4 INSTALLATION</b> .....	<b>44</b>
<b>4.1 ANTI-STATIC PRECAUTIONS</b> .....	<b>45</b>
<b>4.2 INSTALLATION CONSIDERATIONS</b> .....	<b>45</b>
<b>4.3 SOCKET LGA1151 CPU INSTALLATION</b> .....	<b>47</b>
<b>4.4 SOCKET LGA1151 COOLING KIT INSTALLATION</b> .....	<b>50</b>
<b>4.5 DIMM INSTALLATION</b> .....	<b>52</b>
<b>4.6 SYSTEM CONFIGURATION</b> .....	<b>53</b>
<i>4.6.1 AT/ATX Power Mode Setting</i> .....	53
<i>4.6.2 Clear CMOS Button</i> .....	53
<i>4.6.3 PCIe x16 Channel Mode Setup</i> .....	54
<i>4.6.4 Flash Descriptor Security Override Jumper</i> .....	54
<i>4.6.5 USB Power Selection</i> .....	56
<b>4.7 INTERNAL PERIPHERAL DEVICE CONNECTIONS</b> .....	<b>57</b>
<i>4.7.1 SATA Drive Connection</i> .....	57

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

4.8 SOFTWARE INSTALLATION .....	59
4.9 DRIVER DOWNLOAD .....	59
4.10 INTEL® AMT SETUP PROCEDURE .....	61
<b>5 BIOS .....</b>	<b>62</b>
5.1 INTRODUCTION.....	63
<i>5.1.1 Starting Setup</i> .....	63
<i>5.1.2 Using Setup</i> .....	63
<i>5.1.3 Getting Help</i> .....	64
<i>5.1.4 Unable to Reboot after Configuration Changes</i> .....	64
<i>5.1.5 BIOS Menu Bar</i> .....	64
5.2 MAIN.....	65
5.3 ADVANCED .....	66
<i>5.3.1 CPU Configuration</i> .....	67
<i>5.3.2 PCH-FW Configuration</i> .....	69
<i>5.3.3 Trusted Computing</i> .....	70
<i>5.3.4 ACPI Settings</i> .....	71
<i>5.3.5 iWDD H/W Monitor</i> .....	72
<i>5.3.5.1 Smart Fan Mode Configuration</i> .....	73
<i>5.3.6 F81866 Super IO Configuration</i> .....	75
<i>5.3.6.1 Serial Port 1 Configuration</i> .....	76
<i>5.3.6.2 Serial Port 2 Configuration</i> .....	77
<i>5.3.6.3 Serial Port 3 Configuration</i> .....	78
<i>5.3.6.4 Serial Port 4 Configuration</i> .....	79
<i>5.3.7 RTC Wake Settings</i> .....	80
<i>5.3.8 Serial Port Console Redirection</i> .....	81
<i>5.3.8.1 Legacy Console Redirection Settings</i> .....	84
<i>5.3.9 USB Configuration</i> .....	85
<i>5.3.10 CSM Configuration</i> .....	86
<i>5.3.11 NVMe Configuration</i> .....	87
<i>5.3.12 iEi Feature</i> .....	88
5.4 CHIPSET .....	89
<i>5.4.1 System Agent (SA) Configuration</i> .....	90
<i>5.4.1.1 Memory Configuration</i> .....	91
<i>5.4.1.2 Graphics Configuration</i> .....	91

5.4.1.3 PEG Port Configuration .....	93
5.4.2 <i>PCH-IO Configuration</i> .....	94
5.4.2.1 PCI Express Configuration .....	97
5.4.2.2 SATA Configuration.....	99
5.4.2.3 HD Audio Configuration.....	101
5.5 SECURITY.....	102
5.6 BOOT.....	103
5.7 SAVE & EXIT .....	105
<b>A REGULATORY COMPLIANCE .....</b>	<b>106</b>
<b>B PRODUCT DISPOSAL .....</b>	<b>108</b>
<b>C BIOS OPTIONS .....</b>	<b>110</b>
<b>D TERMINOLOGY .....</b>	<b>114</b>
<b>E DIGITAL I/O INTERFACE .....</b>	<b>118</b>
E.1 INTRODUCTION .....	119
E.2 ASSEMBLY LANGUAGE SAMPLE 1 .....	120
E.3 ASSEMBLY LANGUAGE SAMPLE 2 .....	120
<b>F WATCHDOG TIMER .....</b>	<b>121</b>
<b>G ERROR BEEP CODE .....</b>	<b>124</b>
G.1 PEI BEEP CODES .....	125
G.2 DXE BEEP CODES .....	125
<b>H HAZARDOUS MATERIALS DISCLOSURE.....</b>	<b>126</b>
H.1 RoHS II DIRECTIVE (2015/863/EU) .....	127
H.2 CHINA ROHS.....	128

# List of Figures

Figure 1-1: SPCIE-C246.....	2
Figure 1-2: Connectors .....	4
Figure 1-3: SPCIE-C246 Dimensions (mm) .....	5
Figure 1-4: Data Flow Diagram.....	6
Figure 3-1: Peripheral Interface Connectors .....	15
Figure 3-2: +12V ATX Power Connector Pinout Location .....	18
Figure 3-3: Audio Connector Location .....	18
Figure 3-4: Battery Connector Location.....	20
Figure 3-5: Chassis Intrusion Connector Location.....	20
Figure 3-6: DDR4 DIMM Socket Locations .....	21
Figure 3-7: Digital I/O Connector Location .....	21
Figure 3-8: DisplayPort Connector Location .....	22
Figure 3-9: EC Debug Connector Location.....	23
Figure 3-10: CPU Fan Connector Location .....	24
Figure 3-11: System Fan Connector Location.....	25
Figure 3-12: Front Panel Connector Location .....	26
Figure 3-13: I <sup>2</sup> C Connector Location .....	27
Figure 3-14: Keyboard and Mouse Connector Location.....	27
Figure 3-15: LAN LED Connector Locations .....	28
Figure 3-16: M.2 2280 Slot Location .....	29
Figure 3-17: Power Button Location.....	31
Figure 3-18: RS-232 Serial Port Locations .....	31
Figure 3-19: RS-422/485 Serial Port Locations .....	32
Figure 3-20: SATA 6Gb/s Drive Connector Locations .....	33
Figure 3-21: SMBus Connector Location.....	34
Figure 3-22: SPI Flash Connector Location.....	35
Figure 3-23: SPI EC Flash Connector Location.....	36
Figure 3-24: TPM Connector Location.....	37
Figure 3-25: USB 2.0 Connector Locations .....	38
Figure 3-26: USB 2.0 Connector (Type A) Pinout Location.....	39

Figure 3-27: USB 3.2 Gen 1 Connector Location .....	40
Figure 3-28: External Peripheral Interface Connector .....	41
Figure 3-29: Ethernet Connector.....	41
Figure 3-30: HDMI Connector .....	43
Figure 4-1: Disengage the CPU Socket Load Lever.....	47
Figure 4-2: Remove Protective Cover.....	48
Figure 4-3: Insert the Socket LGA1151 CPU.....	49
Figure 4-4: Close the Socket LGA1151 .....	49
Figure 4-5: Cooling Kit Support Bracket.....	51
Figure 4-6: DIMM Installation.....	52
Figure 4-7: AT/ATX Power Mode Switch Location .....	53
Figure 4-8: Clear CMOS Button Location.....	53
Figure 4-9: Flash Descriptor Security Override Jumper Location .....	54
Figure 4-10: SATA Drive Cable Connection.....	57
Figure 4-11: SATA Power Drive Connection.....	58
Figure 4-12: IEI Resource Download Center.....	59

# List of Tables

---

Table 1-1: SPCIE-C246 Specifications .....	8
Table 2-1: Packing List.....	11
Table 2-2: Optional Items .....	13
Table 3-1: Peripheral Interface Connectors .....	17
Table 3-2: External Peripheral Connectors .....	17
Table 3-3: +12V ATX Power Connector Pinouts .....	18
Table 3-4: Audio Connector Pinouts .....	19
Table 3-5: Battery Connector Pinouts .....	20
Table 3-6: Chassis Intrusion Connector Pinouts .....	20
Table 3-7: Digital I/O Connector Pinouts.....	22
Table 3-8: DisplayPort Connector Pinouts .....	23
Table 3-9: EC Debug Connector Pinouts .....	24
Table 3-10: CPU Fan Connector Pinouts .....	24
Table 3-11: System Fan (SYS_FAN1) Connector Pinouts .....	25
Table 3-12: Front Panel Connector Pinouts.....	26
Table 3-13: I <sup>2</sup> C Connector Pinouts.....	27
Table 3-14: Keyboard and Mouse Connector Pinouts .....	28
Table 3-15: LAN1 LED Connector (LED_LAN1) Pinouts .....	28
Table 3-16: LAN2 LED Connector (LED_LAN2) Pinouts .....	28
Table 3-17: M.2 2280 Connector Pinouts .....	30
Table 3-18: RS-232 Serial Port Pinouts .....	32
Table 3-19: RS-422/485 Serial Port Pinouts .....	32
Table 3-20: DB-9 RS-422/485 Pinouts .....	33
Table 3-21: SATA 6Gb/s Drive Connector Pinouts.....	34
Table 3-22: SMBus Connector Pinouts .....	34
Table 3-23: SPI Flash Connector Pinouts .....	35
Table 3-24: SPI EC Flash Connector Pinouts .....	36
Table 3-25: TPM Connector Pinouts .....	37
Table 3-26: USB 2.0 Connector Pinouts .....	38
Table 3-27: USB 2.0 Connector (Type A) Pinouts .....	39

Table 3-28: USB 3.2 Gen 1 Connector Pinouts .....	40
Table 3-29: LAN Pinouts .....	41
Table 3-30: USB 3.2 Port Pinouts .....	42
Table 3-31: HDMI Connector Pinouts .....	43
Table 4-1: AT/ATX Power Mode Switch Settings.....	53
Table 4-2: PCIe x16 Channel Mode Setup .....	54
Table 4-3: Flash Descriptor Security Override Jumper Settings.....	54
Table 4-4: BIOS Options and Configured USB Ports.....	56
Table 4-5: USB Power Source Setup .....	56
Table 5-1: BIOS Navigation Keys .....	64
Table 5-2: BIOS Options and Configured USB Ports.....	96

# BIOS Menus

---

BIOS Menu 1: Main .....	65
BIOS Menu 2: Advanced .....	66
BIOS Menu 3: CPU Configuration .....	67
BIOS Menu 4: PCH-FW Configuration .....	69
BIOS Menu 5: Trusted Computing .....	70
BIOS Menu 6: ACPI Settings .....	71
BIOS Menu 7: iWDD H/W Monitor .....	72
BIOS Menu 8: Smart Fan Mode Configuration .....	73
BIOS Menu 9: F81866 Super IO Configuration .....	75
BIOS Menu 10: Serial Port 1 Configuration Menu .....	76
BIOS Menu 11: Serial Port 2 Configuration Menu .....	77
BIOS Menu 12: Serial Port 3 Configuration Menu .....	78
BIOS Menu 13: Serial Port 4 Configuration Menu .....	79
BIOS Menu 14: RTC Wake Settings .....	80
BIOS Menu 15: Serial Port Console Redirection .....	81
BIOS Menu 16: Legacy Console Redirection Settings .....	84
BIOS Menu 17: USB Configuration .....	85
BIOS Menu 18: CSM Configuration .....	86
BIOS Menu 19: NVMe Configuration .....	87
BIOS Menu 20: iEI Feature .....	88
BIOS Menu 21: Chipset .....	89
BIOS Menu 22: System Agent (SA) Configuration .....	90
BIOS Menu 23: Memory Configuration .....	91
BIOS Menu 24: Graphics Configuration .....	91
BIOS Menu 25: PEG Port Configuration .....	93
BIOS Menu 26: PCH-IO Configuration .....	94
BIOS Menu 27: PCI Express Configuration .....	97
BIOS Menu 28: PCIEX1 Slot/M.2 Slot .....	97
BIOS Menu 29: SATA Configuration .....	99
BIOS Menu 30: HD Audio Configuration .....	101

BIOS Menu 31: Security .....	102
BIOS Menu 32: Boot .....	103
BIOS Menu 33: Save & Exit.....	105


Chapter

1

# Introduction

---

## 1.1 Introduction

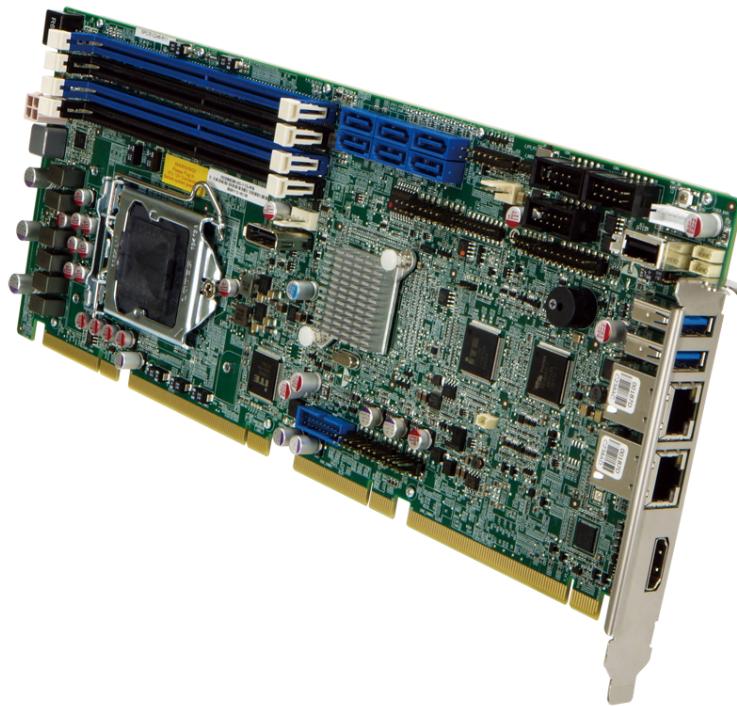

**Figure 1-1: SPCIE-C246**

The SPCIE-C246 is a full-size PICMG 1.3 CPU card. It has a LGA1151 socket that supports Intel® Xeon® E3, 8<sup>th</sup>/9<sup>th</sup> generation Core™ i9/i7/i5/i3, Pentium® or Celeron® processors, and it supports four 288-pin 2666MHz dual-channel DDR4 DIMM modules up to 64 GB.

The SPCIE-C246 provides two GbE interfaces through the Intel® I219LM PHY (with Intel® AMT 11.0 support) and the Intel® I211AT PCIe controllers. The integrated Intel® C246 chipset supports six SATA 6Gb/s drives with RAID 0/1/5/10 function.

Two USB 3.2 Gen 1 on the rear panel, two USB 3.2 Gen 1 by internal box header, six USB 2.0 by pin headers, one USB 2.0 by internal Type A connector, three RS-232, one RS-422/485 and one M.2 M-key slot provide flexible expansion options. High Definition Audio (HDA) support ensures HDA devices can be easily implemented on the SPCIE-C246.

## 1.2 Features

The SPCIE-C246 motherboard features are listed below:

- Full-size PICMG 1.3 CPU card
- LGA1151 socket supports Intel® Xeon® E3, 8<sup>th</sup>/9<sup>th</sup> generation Core™ i9/i7/i5/i3, Pentium® or Celeron® processor
- Intel® C246 chipset
- Four 288-pin 2666 MHz dual-channel ECC/non-ECC DDR4 DIMMs support up to 64 GB
- Two Intel® PCIe GbE connectors (LAN1 with Intel® AMT 11.0 support)
- Supports PCI Express Generation 3.0
- One M.2 2280 M-key slot for storage
- Six SATA 6Gb/s connectors support RAID 0, 1, 5, 10 function
- Two USB 3.2 Gen 1 (5 Gb/s) ports on the rear I/O
- Two USB 3.2 Gen 1 (5 Gb/s) ports via internal box header
- Six USB 2.0 ports via internal pin headers
- One USB 2.0 via internal Type A connector
- Three RS-232 serial ports
- One RS-422/485 serial port
- TPM V1.2 hardware security function supported by TPM module
- High Definition Audio
- RoHS compliant

## 1.3 Connectors

The connectors on the SPCIE-C246 are shown in the figure below.

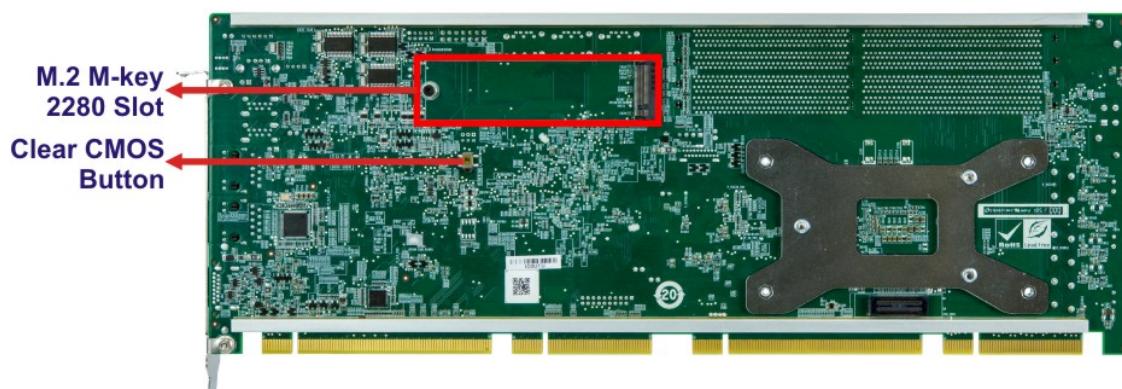
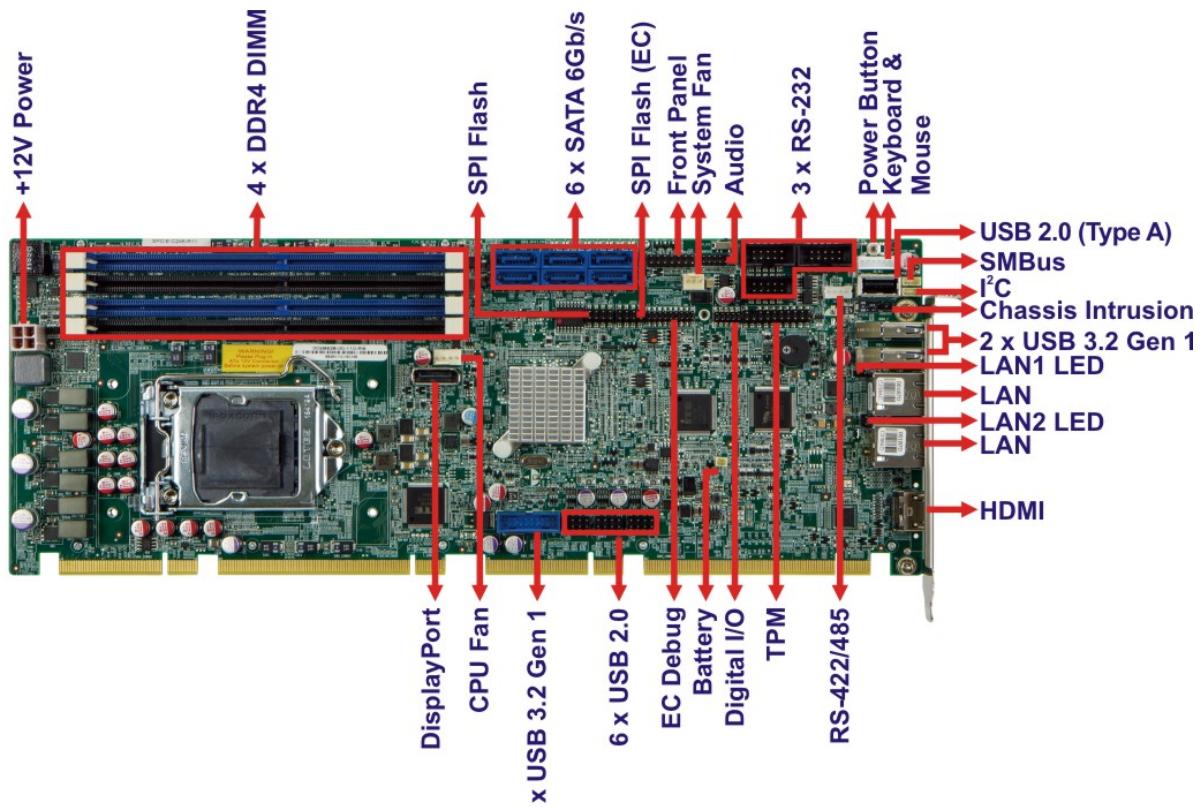


Figure 1-2: Connectors

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

### 1.4 Dimensions

The main dimensions of the SPCIE-C246 are shown in the diagram below.

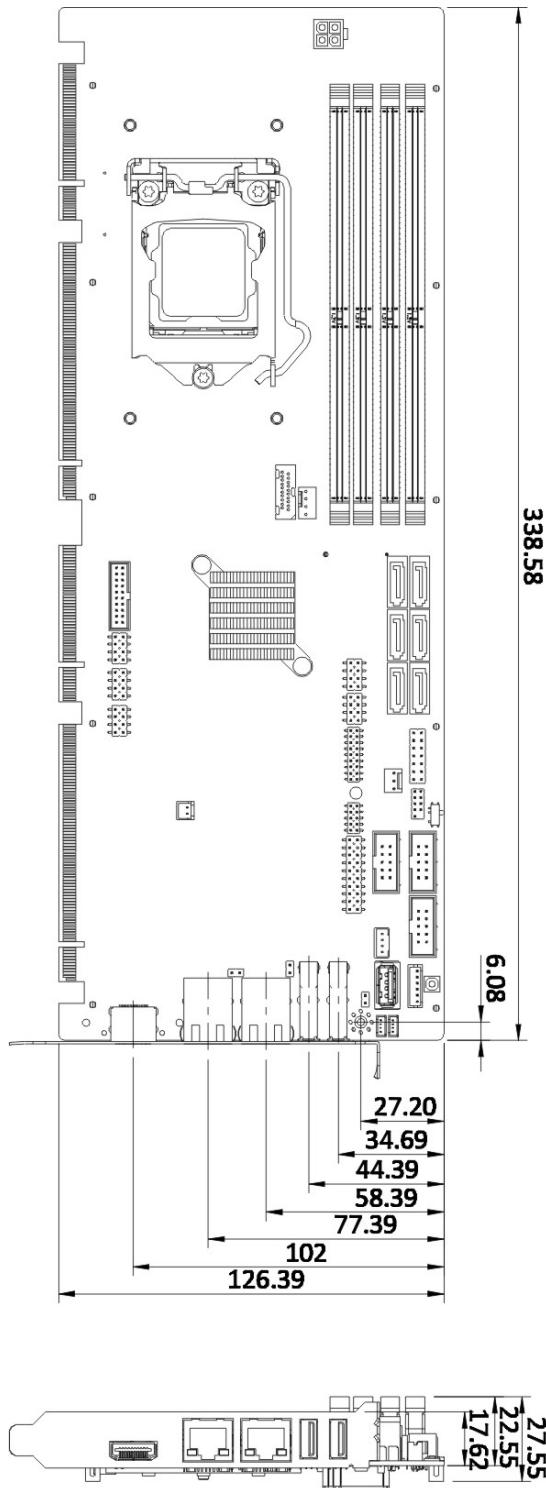


Figure 1-3: SPCIE-C246 Dimensions (mm)

## 1.5 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

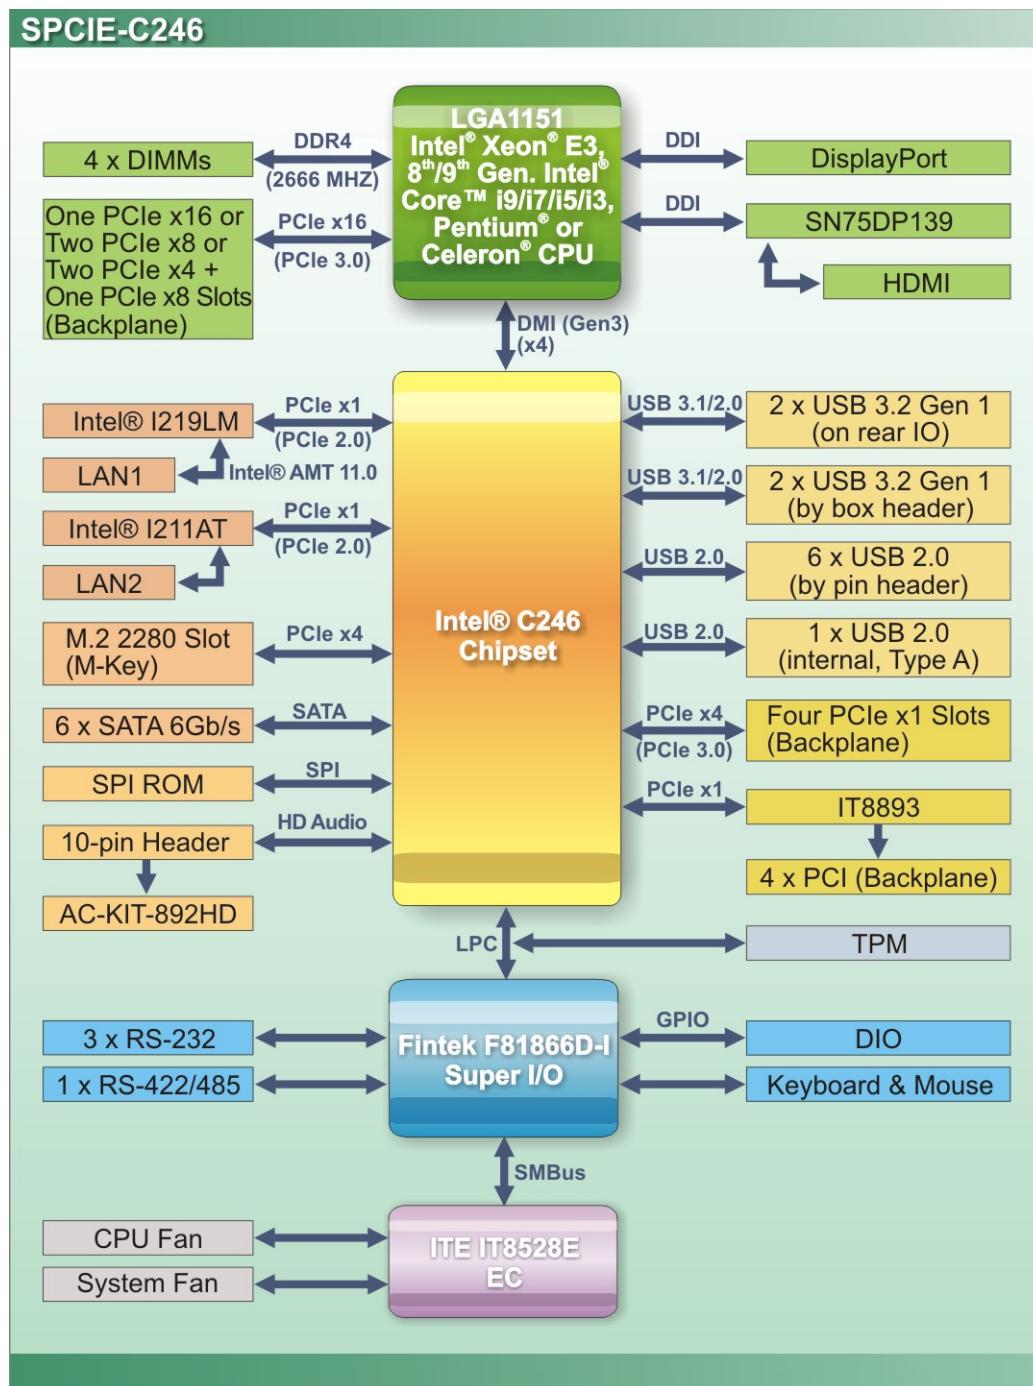


Figure 1-4: Data Flow Diagram

**SPCIE-C246 Full-size PICMG 1.3 CPU Card**

## 1.6 Technical Specifications

The SPCIE-C246 technical specifications are listed below.

Specification/Model	<b>SPCIE-C246</b>
<b>Form Factor</b>	Full-size PICMG 1.3 CPU card
<b>CPU Supported</b>	LGA1151 socket supports Intel® Xeon® E3, 8 <sup>th</sup> /9 <sup>th</sup> generation Core™ i9/i7/i5/i3, Pentium® or Celeron® processors
<b>PCH</b>	Intel® C246
<b>Memory</b>	Four 288-pin 2666 MHz dual-channel unbuffered ECC/non-ECC DDR4 SDRAM DIMMs supported (system max. 64 GB)
<b>Graphics Engine</b>	Intel® HD Graphics Gen9 engine with 16 low-power execution units, supporting DX 2015, OpenGL 5.x and OpenCL 2.x, ES 2.0
<b>Display Output</b>	1 x HDMI (up to 4096x2304 @ 30Hz) 1 x DisplayPort (up to 4096x2304 @ 60Hz)
<b>Ethernet Controllers</b>	<b>LAN1:</b> Intel® I219LM PHY (with Intel® AMT 11.0 support) <b>LAN2:</b> Intel® I211AT PCIe GbE controller (co-lay I210-AT)
<b>Audio</b>	Supports 7.1-channel HD audio by IEI AC-KIT-892HD kit
<b>BIOS</b>	UEFI BIOS
<b>Expansions</b>	<b>One M.2 2280 slot (M key, PCIe x4 only)</b> <b>4 x PCI link via golden finger</b> <b>4 x PCIe x1 link via golden finger</b> <b>16-lane PCIe link from CPU via golden finger:</b> Supports one PCIe x16, or two PCIe x8, or two PCIe x4 + one PCIe x8 slots on the backplane (configured via <a href="#">BIOS</a> )
<b>Super I/O Controller</b>	Fintek F81866D-I
<b>Embedded Controller</b>	ITE IT8528E
<b>Watchdog Timer</b>	Software programmable supports 1~255 sec. system reset
<b>I/O Interface Connectors</b>	
<b>Audio Connector</b>	One audio connector (10-pin header)

<b>Chassis Intrusion</b>	One 2-pin header
<b>Digital I/O</b>	8-bit digital I/O (10-pin header)
<b>Ethernet</b>	Two RJ-45 ports
<b>Fan</b>	One 4-pin CPU smart fan connector One 3-pin system smart fan connector
<b>Front Panel</b>	One 14-pin header (power LED, HDD LED, speaker, power button, reset button)
<b>I<sup>2</sup>C</b>	One 4-pin wafer connector
<b>Keyboard and Mouse</b>	One internal keyboard and mouse connector (6-pin wafer)
<b>LAN LED</b>	Two 2-pin headers for LAN1 LED and LAN2 LED
<b>Serial ATA</b>	Six SATA 6Gb/s connectors (support RAID 0, 1, 5, 10)
<b>Serial Ports</b>	Three RS-232 via internal 10-pin box headers One RS-422/485 via internal 4-pin wafer
<b>SMBus</b>	One 4-pin wafer connector
<b>TPM</b>	One via 20-pin header
<b>USB 2.0</b>	Six USB 2.0 ports by three internal pin headers One USB 2.0 port by internal Type A connector
<b>USB 3.2 Gen 1</b>	Two USB 3.2 Gen 1 (5 Gb/s) ports on rear panel Two USB 3.2 Gen 1 (5 Gb/s) ports via internal box header
<b>Environmental and Power Specifications</b>	
<b>Power Supply</b>	AT/ATX power support ErP/EuP compliant
<b>Power Consumption</b>	5V@3.12A, 12V@6.85A, 3.3V@1.13A, 5VSB@0.15A (4.0 GHz Intel® Core™ i7-8700K CPU with four 16 GB 2666 MHz DDR4 memory)
<b>Operating Temperature</b>	-20°C ~ 60°C
<b>Storage Temperature</b>	-30°C ~ 70°C
<b>Operating Humidity</b>	5% ~ 95% (non-condensing)
<b>Physical Specifications</b>	
<b>Dimensions</b>	338 mm x 126 mm
<b>Weight (GW/NW)</b>	1000 g/500 g

**Table 1-1: SPCIE-C246 Specifications**

Chapter

2

# Packing List

---

## 2.1 Anti-static Precautions



### WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- ***Wear an anti-static wristband:*** Wearing an anti-static wristband can prevent electrostatic discharge.
- ***Self-grounding:*** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- ***Use an anti-static pad:*** When configuring any circuit board, place it on an anti-static mat.
- ***Only handle the edges of the PCB:*** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

## 2.2 Unpacking Precautions

When the SPCIE-C246 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

## 2.3 Packing List

**NOTE:**

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the SPCIE-C246 was purchased from or contact an IEI sales representative directly by sending an email to [sales@ieiworld.com](mailto:sales@ieiworld.com).

The SPCIE-C246 is shipped with the following components:

Quantity	Item and Part Number	Image
1	SPCIE-C246 CPU card	
1	SATA cable	
1	Mini jumper pack	
1	Quick installation guide	

Table 2-1: Packing List

## 2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
PS/2 KB/MS Y-cable with bracket (P/N: 19800-000075-RS)	
SATA power cable (P/N: 32102-000100-200-RS)	
7.1-channel HD audio kit with Realtek ALC892 audio codec supporting dual audio stream (P/N: AC-KIT-892HD-R10)	
LGA1150 cooler kit (high-performance compatible, 95W) (P/N: CF-1150SA-R10)	
LGA1150 cooler kit (high-performance compatible, 65W) (P/N: CF-1150SB-R11)	
LGA1150 cooler kit (1U chassis compatible, 65W) (P/N: CF-1150SC-R20)	
LGA1150 cooler kit (high-performance compatible, 95W) (P/N: CF-1150SE-R11)	

**SPCIE-C246 Full-size PICMG 1.3 CPU Card**

Item and Part Number	Image
LGA1150 cooler kit (1U chassis compatible, 54W) <b>(P/N:</b> CF-1150SF-R10)	
SATA to IDE/CompactFlash® converter board <b>(P/N:</b> SAIDE-KIT01-R10)	

**Table 2-2: Optional Items**

Chapter

3

# Connectors

---

### 3.1 Peripheral Interface Connectors

This chapter details all the peripheral interface connectors.

#### 3.1.1 SPCIE-C246 Layout

The figure below shows all the peripheral interface connectors.

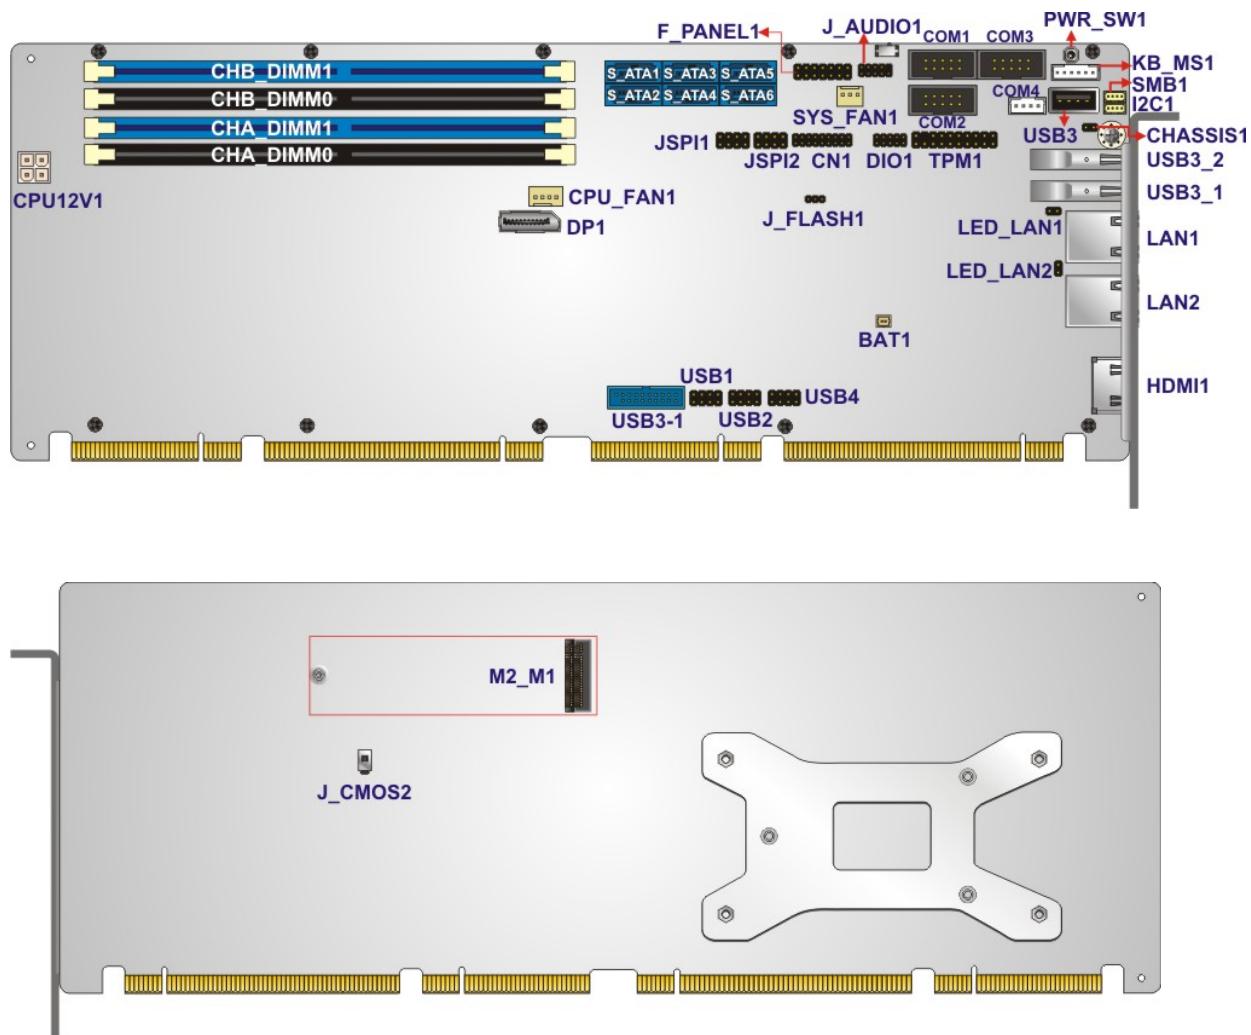


Figure 3-1: Peripheral Interface Connectors

### 3.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
+12V ATX power supply connector	4-pin Molex power connector	CPU12V1
Audio kit connector	10-pin header	J_AUDIO1
Battery connector	2-pin wafer	BAT1
Chassis intrusion connector	2-pin header	CHASSIS1
DDR4 DIMM sockets	288-pin socket	CHA_DIMM0, CHA_DIMM1, CHB_DIMM0, CHB_DIMM1
Digital I/O connector	10-pin header	DIO1
DisplayPort connector	20-pin DP port	DP1
EC debug connector	18-pin header	CN1
Fan connector (CPU)	4-pin wafer	CPU_FAN1
Fan connector (system)	3-pin wafer	SYS_FAN1
Front panel connector	14-pin header	F_PANEL1
I <sup>2</sup> C connector	4-pin wafer	I2C1
Keyboard and mouse connector	6-pin wafer	KB_MS1
LAN LED connectors	2-pin header	LED_LAN1, LED_LAN2
M.2 M-key slot	M.2 M-key 2280	M2_M1
Power button	Push button	PWR_SW1
RS-232 serial ports	10-pin box header	COM1, COM2, COM3,
RS-422/485 serial port	4-pin wafer	COM4
SATA 6Gb/s drive connector	7-pin SATA connector	S_ATA1, S_ATA2, S_ATA3, S_ATA4, S_ATA5, S_ATA6,

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

Connector	Type	Label
SMBus connector	4-pin wafer	SMB1
SPI flash connector	8-pin header	JSPI1
SPI flash connector, EC	8-pin header	JSPI2
TPM connector	20-pin header	TPM1
USB 2.0 connectors	8-pin header	USB1, USB2, USB4
USB 2.0 connector (Type A)	Type A	USB3
USB 3.2 Gen 1 connector	19-pin box header	USB3-1

**Table 3-1: Peripheral Interface Connectors**

### 3.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
Ethernet ports	RJ-45	LAN1, LAN2
USB 3.2 Gen 1 ports	USB 3.2 Gen 1	USB3_1, USB3_2
HDMI connector	HDMI	HDMI1

**Table 3-2: External Peripheral Connectors**

## 3.2 Internal Peripheral Connectors

The section describes all of the connectors on the SPCIE-C246.

### 3.2.1 +12V ATX Power Connector

**CN Label:** CPU12V1

**CN Type:** 4-pin Molex power connector, p=4.2 mm

**CN Location:** See [Figure 3-2](#)

**CN Pinouts:** See [Table 3-3](#)

This connector provides power to the CPU.

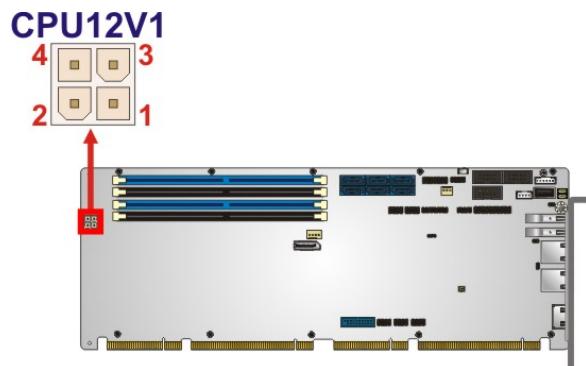


Figure 3-2: +12V ATX Power Connector Pinout Location

Pin	Description	Pin	Description
1	GND	2	GND
3	+12V	4	+12V

Table 3-3: +12V ATX Power Connector Pinouts

### 3.2.2 Audio Kit Connector

CN Label: J\_AUDIO1

CN Type: 10-pin header, p=2.00 mm

CN Location: See Figure 3-3

CN Pinouts: See Table 3-4

This connector allows connection to an external audio kit.

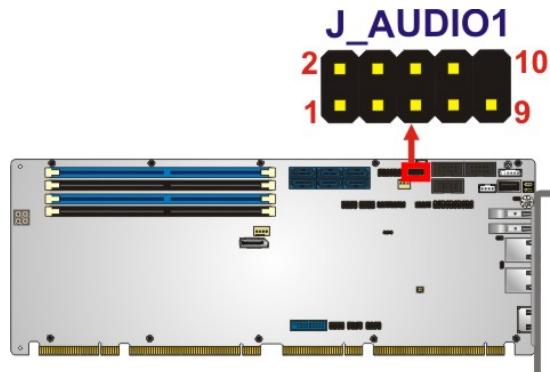


Figure 3-3: Audio Connector Location

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

Pin	Description	Pin	Description
1	HDA_SYNC	2	HDA_BIT_CLK
3	HDA_SDOUT	4	HDA_SPKR
5	HDA_SDIN	6	HDA_RST#
7	HDA_VCC	8	HDA_GND
9	HDA_+12V	10	HDA_GND

**Table 3-4: Audio Connector Pinouts**

### 3.2.3 Battery Connector



#### CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.



#### NOTE:

It is recommended to attach the RTC battery onto the system chassis in which the SPCIE-C246 is installed.


**CN Label:** BAT1

**CN Type:** 2-pin wafer, p=1.25 mm

**CN Location:** See **Figure 3-4**

**CN Pinouts:** See **Table 3-5**

This is connected to the system battery. The battery provides power to the system clock to retain the time when power is turned off.

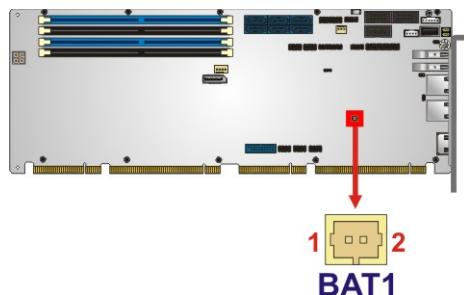

**Figure 3-4: Battery Connector Location**

Pin	Description
1	VBATT
2	GND

**Table 3-5: Battery Connector Pinouts**

### 3.2.4 Chassis Intrusion Connector


**CN Label:** CHASSIS1

**CN Type:** 2-pin header, p=2.54 mm

**CN Location:** See Figure 3-5

**CN Pinouts:** See Table 3-6

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

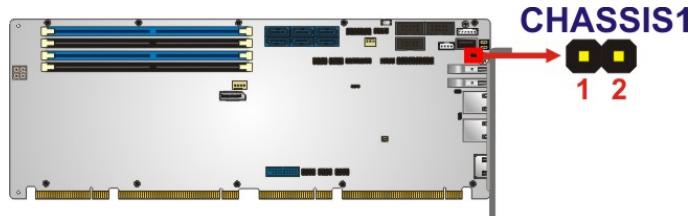

**Figure 3-5: Chassis Intrusion Connector Location**

Pin	Description
1	+3.3VSB
2	CHASSIS OPEN

**Table 3-6: Chassis Intrusion Connector Pinouts**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card


### 3.2.5 DDR4 DIMM Sockets

**CN Label:** CHA\_DIMM0, CHA\_DIMM1, CHB\_DIMM0, CHB\_DIMM1

**CN Type:** 288-pin DDR4 DIMM socket

**CN Location:** See [Figure 3-6](#)

The DIMM sockets are for DDR4 DIMM memory modules.

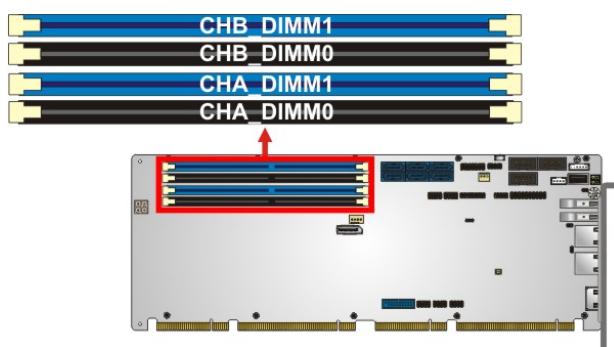

**Figure 3-6: DDR4 DIMM Socket Locations**

### 3.2.6 Digital I/O Connector


**CN Label:** DIO1

**CN Type:** 10-pin header, p=2.00 mm

**CN Location:** See [Figure 3-7](#)

**CN Pinouts:** See [Table 3-7](#)

The digital I/O connector provides programmable input and output for external devices.

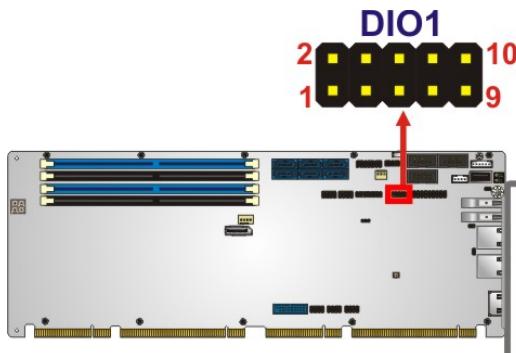

**Figure 3-7: Digital I/O Connector Location**

<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

**Table 3-7: Digital I/O Connector Pinouts**

### 3.2.7 DisplayPort Connector


**CN Label:** DP1

**CN Type:** 20-pin DisplayPort

**CN Location:** See **Figure 3-8**

**CN Pinouts:** See **Table 3-8**

The DisplayPort connector connects to a display device with DisplayPort interface.

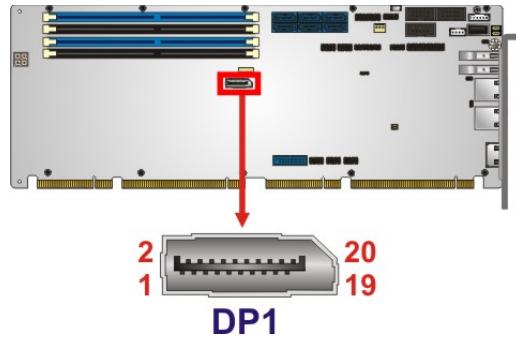**Figure 3-8: DisplayPort Connector Location**


<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
1	ML_LANE0+	2	GND
3	ML_LANE0-	4	ML_LANE1+
5	GND	6	ML_LANE1-
7	ML_LANE2+	8	GND
9	ML_LANE2-	10	ML_LANE3+
11	GND	12	ML_LANE3-

**SPCIE-C246 Full-size PICMG 1.3 CPU Card**

<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
13	AUX_CTRL_DET	14	GND
15	AUX_CTRL+	16	GND
17	AUX_CTRL-	18	HOT PLUG
19	GND	20	DP_PWR

**Table 3-8: DisplayPort Connector Pinouts****3.2.8 EC Debug Connector****CN Label:** CN1**CN Type:** 18-pin header, p=2.00 mm**CN Location:** See **Figure 3-9****CN Pinouts:** See **Table 3-9**

The EC debug connector is used for EC debug.

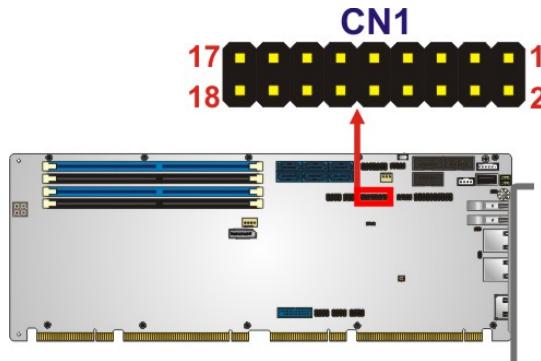**Figure 3-9: EC Debug Connector Location**

<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
1	EC_EPP_STB#	2	EC_EPP_AFD#
3	EC_EPP_PD0	4	NC
5	EC_EPP_PD1	6	EC_EPP_INIT#
7	EC_EPP_PD2	8	EC_EPP_SLIN#
9	EC_EPP_PD3	10	GND
11	EC_EPP_PD4	12	NC
13	EC_EPP_PD5	14	EC_EPP_BUSY

Pin	Description	Pin	Description
15	EC_EPP_PD6	16	EC_EPP_KSI5
17	EC_EPP_PD7	18	EC_EPP_KSI4

**Table 3-9: EC Debug Connector Pinouts**

### 3.2.9 Fan Connector (CPU)


**CN Label:** CPU\_FAN1

**CN Type:** 4-pin wafer, p=2.54 mm

**CN Location:** See **Figure 3-10**

**CN Pinouts:** See **Table 3-10**

The fan connector attaches to a CPU cooling fan.

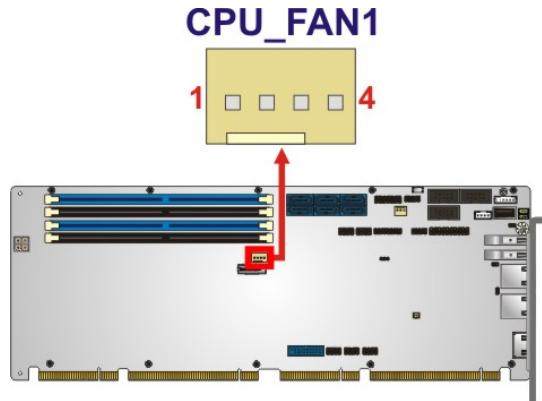**Figure 3-10: CPU Fan Connector Location**

Pin	Description
1	GND
2	+12V
3	FANIO
4	PWM

**Table 3-10: CPU Fan Connector Pinouts**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

### 3.2.10 Fan Connectors (System)


**CN Label:** SYS\_FAN1

**CN Type:** 3-pin wafer, p=2.54 mm

**CN Location:** See [Figure 3-11](#)

**CN Pinouts:** See [Table 3-11](#)

The fan connector attaches to a system cooling fan.

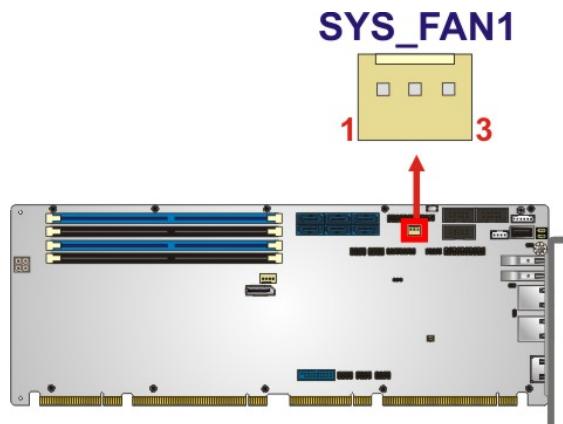

**Figure 3-11: System Fan Connector Location**

Pin	Description
1	FANIO
2	+12V (PWM)
3	GND

**Table 3-11: System Fan (SYS\_FAN1) Connector Pinouts**

### 3.2.11 Front Panel Connector


**CN Label:** F\_PANEL1

**CN Type:** 14-pin header, p=2.54 mm

**CN Location:** See [Figure 3-12](#)

**CN Pinouts:** See [Table 3-12](#)

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

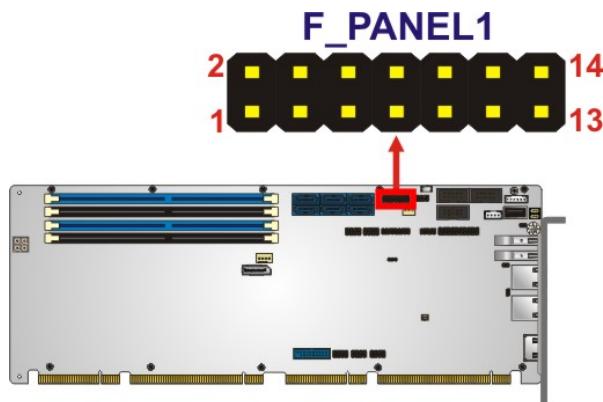

**Figure 3-12: Front Panel Connector Location**

Function	Pin	Description	Function	Pin	Description
Power LED	1	PWR_LED+	IPMI LED	2	SPKR+
	3	NC		4	NC
	5	PWR_LED-		6	NC
Power Button	7	PWR_BTN+	Speaker	8	SPKR-
	9	PWR_BTN-		10	NC
HDD LED	11	HDD_LED+	Reset	12	Reset+
	13	HDD_LED-		14	Reset-

**Table 3-12: Front Panel Connector Pinouts**

### 3.2.12 I<sup>2</sup>C Connector


**CN Label:** I2C1

**CN Type:** 4-pin wafer, p=1.25 mm

**CN Location:** See **Figure 3-13**

**CN Pinouts:** See **Table 3-13**


The I<sup>2</sup>C connector is used to connect I<sup>2</sup>C-bus devices to the motherboard.

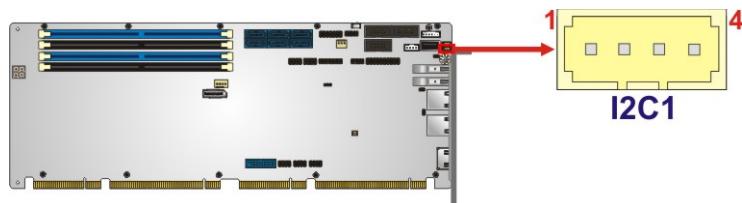**SPCIE-C246 Full-size PICMG 1.3 CPU Card****Figure 3-13: I<sup>2</sup>C Connector Location**

<b>Pin</b>	<b>Description</b>
1	GND
2	I2C_DAT
3	I2C_CLK
4	+5V

**Table 3-13: I<sup>2</sup>C Connector Pinouts****3.2.13 Keyboard and Mouse Connector****CN Label:** KB\_MS1**CN Type:** 6-pin wafer, p=2.00 mm**CN Location:** See **Figure 3-14****CN Pinouts:** See **Table 3-14**

The keyboard and mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

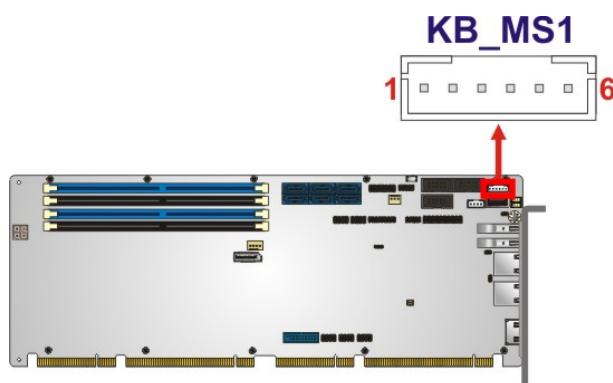**Figure 3-14: Keyboard and Mouse Connector Location**

Pin	Description
1	VCC
2	Mouse Data
3	Mouse Clock
4	Keyboard Data
5	Keyboard Clock
6	GND

Table 3-14: Keyboard and Mouse Connector Pinouts

### 3.2.14 LAN LED Connectors

**CN Label:** LED\_LAN1, LED\_LAN2

**CN Type:** 2-pin header, p=2.54 mm

**CN Location:** See **Figure 3-15**

**CN Pinouts:** See **Table 3-15** and **Table 3-16**

The LAN LED connectors are used to connect to the LAN LED indicators on the chassis to indicate users the link activities of the two LAN ports.

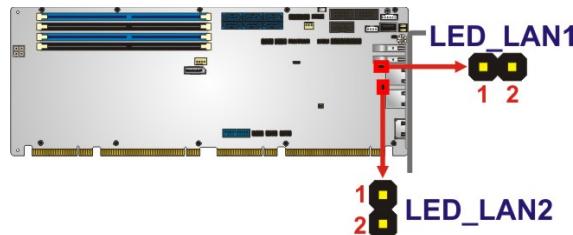


Figure 3-15: LAN LED Connector Locations

Pin	Description
1	+3.3V
2	LAN1_LED_LINK#_ACT


Table 3-15: LAN1 LED Connector (LED\_LAN1) Pinouts

Pin	Description
1	+3.3V
2	LAN2_LED_LINK#_ACT

Table 3-16: LAN2 LED Connector (LED\_LAN2) Pinouts

**SPCIE-C246 Full-size PICMG 1.3 CPU Card****3.2.15 M.2 2280 Slot, M-Key****CN Label:** M2\_M1**CN Type:** M.2 2280 M-key slot**CN Location:** See **Figure 3-16****CN Pinouts:** See **Table 3-17**

The M.2 2280 slot is keyed in the M position. The M.2 slot supports PCIe x4 interfaces.

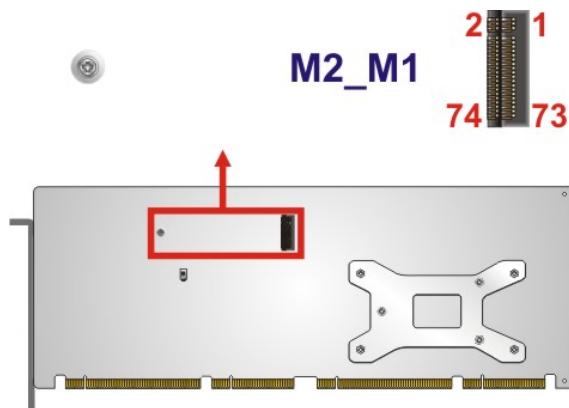**Figure 3-16: M.2 2280 Slot Location**

Pin	Description	Pin	Description
1	GND	2	+3.3V
3	GND	4	+3.3V
5	PCIE_RXN3	6	N/C
7	PCIE_RXP3	8	N/C
9	GND	10	DAS/DSS#
11	PCIE_TXN3	12	+3.3V
13	PCIE_TXP3	14	+3.3V
15	GND	16	+3.3V
17	PCIE_RXN2	18	+3.3V
19	PCIE_RXP2	20	N/C
21	GND	22	N/C
23	PCIE_TXN2	24	N/C
25	PCIE_TXP2	26	N/C

Pin	Description	Pin	Description
27	GND	28	N/C
29	PCIE_RXN1	30	N/C
31	PCIE_RXP1	32	N/C
33	GND	34	N/C
35	PCIE_TXN1	36	N/C
37	PCIE_TXP1	38	DEVSLP
39	GND	40	N/C
41	PCIE_RXN0	42	N/C
43	PCIE_RXP0	44	N/C
45	GND	46	N/C
47	PCIE_TXN0	48	N/C
49	PCIE_TXP0	50	PERST#
51	GND	52	CLKREQ#
53	REFCLKN	54	PEWAKE
55	REFCLKP	56	N/C
57	GND	58	N/C
59	Notch	60	Notch
61	Notch	62	Notch
63	Notch	64	Notch
65	Notch	66	Notch
67	N/C	68	SUSCLK
69	PEDET	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	GND		

**Table 3-17: M.2 2280 Connector Pinouts**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card


### 3.2.16 Power Button

**CN Label:** PWR\_SW1

**CN Type:** Push button

**CN Location:** See **Figure 3-17**

The on-board power button controls system power.

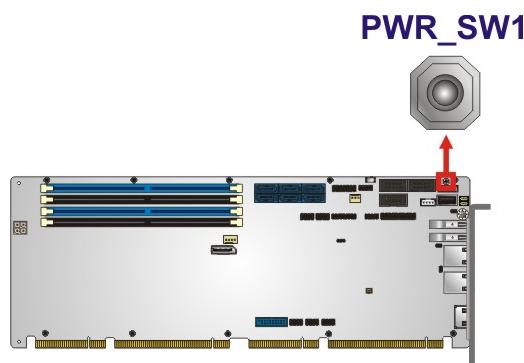

**Figure 3-17: Power Button Location**

### 3.2.17 RS-232 Serial Ports


**CN Label:** COM1, COM2, COM3

**CN Type:** 10-pin box header, p=2.54 mm

**CN Location:** See **Figure 3-18**

**CN Pinouts:** See **Table 3-18**

Each of these connectors provides RS-232 connections.

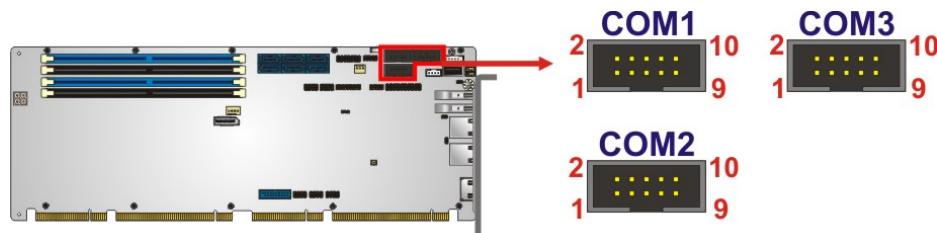

**Figure 3-18: RS-232 Serial Port Locations**


Pin	Description	Pin	Description
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	GND

**Table 3-18: RS-232 Serial Port Pinouts**

### 3.2.18 RS-422/485 Serial Port

**CN Label:** COM4**CN Type:** 4-pin wafer, p=2.00 mm**CN Location:** See **Figure 3-19****CN Pinouts:** See **Table 3-19**

Each of these connectors provides RS-422/485 connections.

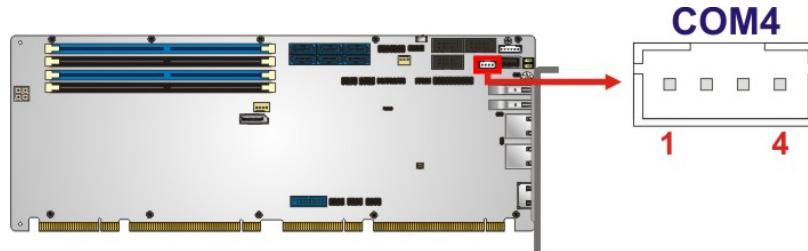**Figure 3-19: RS-422/485 Serial Port Locations**

PIN NO.	DESCRIPTION
1	RXD422-
2	RXD422+
3	TXD422+/TXD485+
4	TXD422-/TXD485-

**Table 3-19: RS-422/485 Serial Port Pinouts**

Use the optional RS-422/485 cable to connect to a serial device. The pinouts of the D-sub 9 connector are listed below.

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

RS-422 Pinouts	RS-485 Pinouts

Table 3-20: DB-9 RS-422/485 Pinouts

### 3.2.19 SATA 6Gb/s Drive Connector

**CN Label:** S\_ATA1, S\_ATA2, S\_ATA3, S\_ATA4, S\_ATA5, S\_ATA6

**CN Type:** 7-pin SATA drive connector

**CN Location:** See Figure 3-20

**CN Pinouts:** See Table 3-21

The SATA drive connectors can be connected to SATA drives and supports up to 6Gb/s data transfer rate.

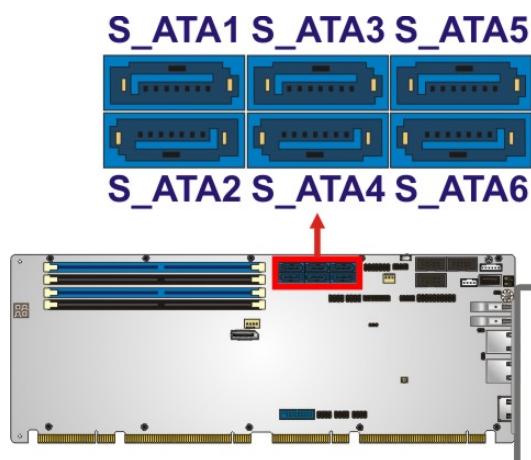


Figure 3-20: SATA 6Gb/s Drive Connector Locations

Pin	Description	Pin	Description
1	GND	2	TX+
3	TX-	4	GND
5	RX-	6	RX+
7	GND		

**Table 3-21: SATA 6Gb/s Drive Connector Pinouts**

### 3.2.20 SMBus Connector


**CN Label:** SMB1

**CN Type:** 4-pin wafer, p=1.25 mm

**CN Location:** See **Figure 3-21**

**CN Pinouts:** See **Table 3-22**

The SMBus (System Management Bus) connector provides low-speed system management communications.

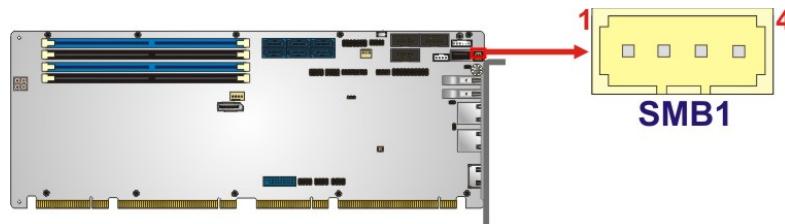**Figure 3-21: SMBus Connector Location**

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V

**Table 3-22: SMBus Connector Pinouts**

### 3.2.21 SPI Flash Connector


**CN Label:** JSPI1

**CN Type:** 8-pin header, p=2.54 mm

**CN Location:** See **Figure 3-22**

**CN Pinouts:** See **Table 3-23**

The SPI flash connector is used to flash the SPI ROM.

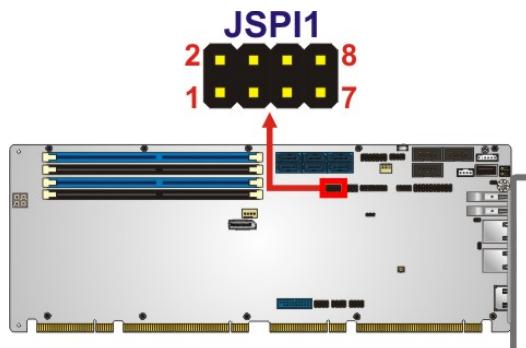

**Figure 3-22: SPI Flash Connector Location**

Pin	Description	Pin	Description
1	+3.3V	2	GND
3	SPI_CS	4	SPI_CLK_SW
5	SPI_SO_SW	6	SPI_SI_SW
7	NC	8	NC

**Table 3-23: SPI Flash Connector Pinouts**

### 3.2.22 SPI Flash Connector, EC


**CN Label:** JSPI2

**CN Type:** 8-pin header, p=2.54 mm

**CN Location:** See **Figure 3-23**

**CN Pinouts:** See **Table 3-24**

The SPI flash connector is used to flash the EC ROM.

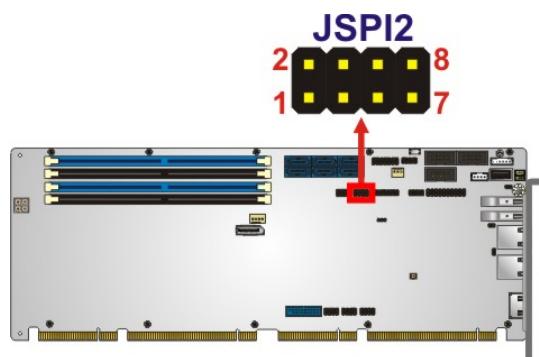

**Figure 3-23: SPI EC Flash Connector Location**

Pin	Description	Pin	Description
1	+3.3V	2	GND
3	SPI_CS_EC	4	SPI_CLK_EC
5	SPI_SO_EC	6	SPI_SI_EC
7	NC	8	NC

**Table 3-24: SPI EC Flash Connector Pinouts**

### 3.2.23 TPM Connector


**CN Label:** TPM1

**CN Type:** 20-pin header, p=2.54 mm

**CN Location:** See **Figure 3-24**

**CN Pinouts:** See **Table 3-25**

The TPM connector connects to a TPM module.

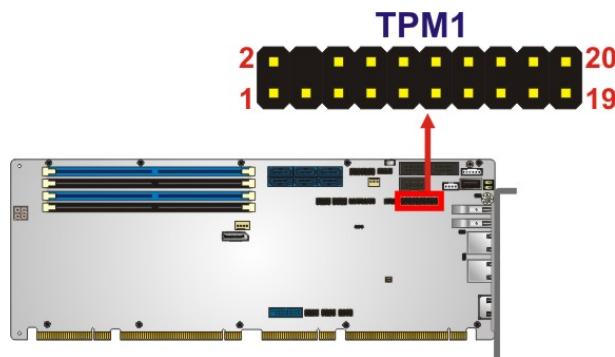

**Figure 3-24: TPM Connector Location**

Pin	Description	Pin	Description
1	LCLK	2	GND
3	LFRAME#	4	KEY
5	LRERST#	6	+5V
7	LAD3	8	LAD2
9	+3.3V	10	LAD1
11	LAD0	12	GND
13	SCL	14	SDA
15	SB3V	16	SERIRQ
17	GND	18	GLKRUN#
19	LPCPD#	20	LDRQ#

**Table 3-25: TPM Connector Pinouts**

### 3.2.24 USB 2.0 Connectors


**CN Label:** USB1, USB2, USB4

**CN Type:** 8-pin header, p=2.54 mm

**CN Location:** See **Figure 3-25**

**CN Pinouts:** See **Table 3-26**

The USB 2.0 connectors connect to USB 2.0 devices. Each pin header provides two USB 2.0 ports.

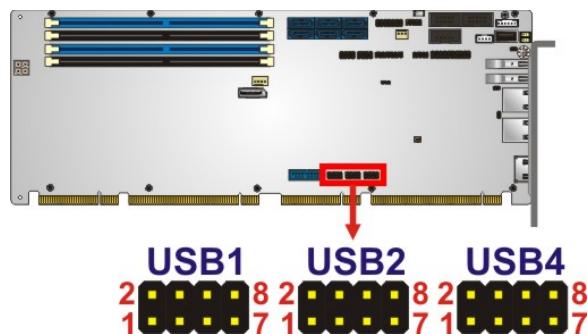

**Figure 3-25: USB 2.0 Connector Locations**

<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
1	VCC	2	GND
3	USB_DATA-	4	USB_DATA+
5	USB_DATA+	6	USB_DATA-
7	GND	8	VCC

**Table 3-26: USB 2.0 Connector Pinouts**

### 3.2.25 USB 2.0 Connector (Type A)


**CN Label:** USB3

**CN Type:** USB Type A

**CN Location:** See **Figure 3-26**

**CN Pinouts:** See **Table 3-27**

The USB Type A connector connects to a USB 2.0/1.1 device.

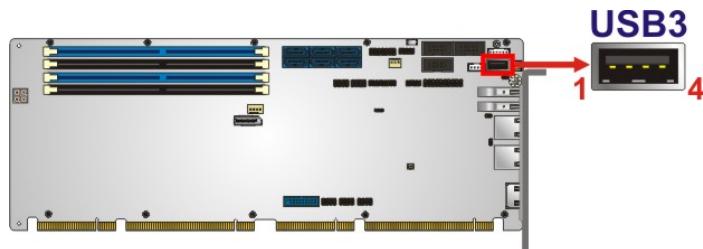

**Figure 3-26: USB 2.0 Connector (Type A) Pinout Location**

Pin	Description
1	VCC
2	DATA-
3	DATA+
4	GROUND

**Table 3-27: USB 2.0 Connector (Type A) Pinouts**

### 3.2.26 USB 3.2 Gen 1 Connector


**CN Label:** USB3-1

**CN Type:** 19-pin box header, p=2.00 mm

**CN Location:** See **Figure 3-27**

**CN Pinouts:** See **Table 3-28**

The USB 3.2 Gen 1 connector connects to USB 3.2 devices. This connector provides two USB 3.2 Gen 1 (5 Gb/s) ports.

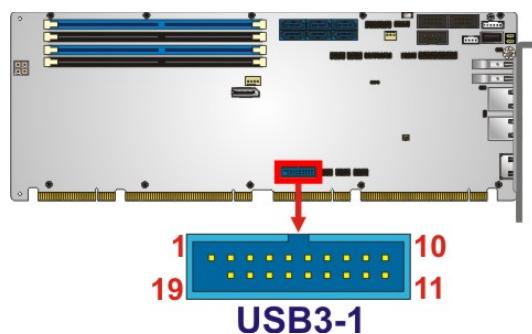

**Figure 3-27: USB 3.2 Gen 1 Connector Location**

Pin	Description	Pin	Description
1	VCC	11	USB_DATA+
2	USB3_RX-	12	USB_DATA-
3	USB3_RX+	13	GND
4	GND	14	USB3_TX+
5	USB3_TX-	15	USB3_TX-
6	USB3_TX+	16	GND
7	GND	17	USB3_RX+
8	USB_DATA-	18	USB3_RX-
9	USB_DATA+	19	VCC
10	NC		

**Table 3-28: USB 3.2 Gen 1 Connector Pinouts**

### 3.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

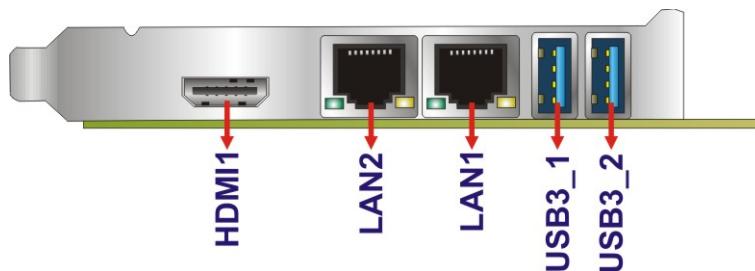


Figure 3-28: External Peripheral Interface Connector

#### 3.3.1 Ethernet Connectors

**CN Label:** LAN1, LAN2

**CN Type:** RJ-45

**CN Location:** See Figure 3-28

**CN Pinouts:** See Table 3-29

Each LAN connector connects to a local network.

Pin	Description	Pin	Description
1	LAN_MDI0P	5	LAN_MDI2P
2	LAN_MDI0N	6	LAN_MDI2N
3	LAN_MDI1P	7	LAN_MDI3P
4	LAN_MDI1N	8	LAN_MDI3N

Table 3-29: LAN Pinouts

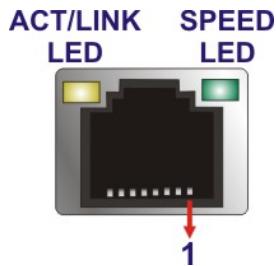


Figure 3-29: Ethernet Connector

### 3.3.2 USB 3.2 Gen 1 Connectors

**CN Label:** USB3\_1, USB3\_2

**CN Type:** USB 3.2

**CN Location:** See [Figure 3-28](#)

**CN Pinouts:** See [Table 3-30](#)

There are two external USB 3.2 Gen 1 connectors on the SPCIE-C246.

Pin	Description	Pin	Description
1	VBUS	2	D-
3	D+	4	GND
5	STDA_SSRX_N	6	STDA_SSRX_P
7	GND_DRAIN	8	STDA_SSTX_N
9	STDA_SSTX_P		

**Table 3-30: USB 3.2 Port Pinouts**

### 3.3.3 HDMI Connector

**CN Label:** HDMI1

**CN Type:** 23-pin HDMI port

**CN Location:** See [Figure 3-28](#)


**CN Pinouts:** See [Table 3-31](#)

The HDMI connector can connect to an HDMI device.

Pin	Description	Pin	Description
1	HDMI_DATA2	2	GND
3	HDMI_DATA2#	4	HDMI_DATA1
5	GND	6	HDMI_DATA1#
7	HDMI_DATA0	8	GND
9	HDMI_DATA0#	10	HDMI_CLK
11	GND	12	HDMI_CLK#
13	N/C	14	N/C

**SPCIE-C246 Full-size PICMG 1.3 CPU Card**

Pin	Description	Pin	Description
15	HDMI_SCL	16	HDMI_SDA
17	GND	18	+5V
19	HDMI_HPD	20	HDMI_GND
21	HDMI_GND	22	HDMI_GND
23	HDMI_GND		

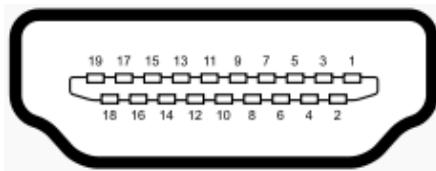**Table 3-31: HDMI Connector Pinouts****Figure 3-30: HDMI Connector**

Chapter

4

# Installation

---

## 4.1 Anti-static Precautions



### WARNING:

Failure to take ESD precautions during the installation of the SPCIE-C246 may result in permanent damage to the SPCIE-C246 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the SPCIE-C246. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the SPCIE-C246 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:*** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring the SPCIE-C246, place it on an anti-static pad. This reduces the possibility of ESD damaging the SPCIE-C246.
- ***Only handle the edges of the PCB:*** - When handling the PCB, hold the PCB by the edges.

## 4.2 Installation Considerations



### NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

**WARNING:**

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
  - The user manual provides a complete description of the SPCIE-C246 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the SPCIE-C246 on an anti-static pad:
  - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the SPCIE-C246 off:
  - When working with the SPCIE-C246, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the SPCIE-C246, **DO NOT**:

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

## 4.3 Socket LGA1151 CPU Installation




### WARNING:

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.


To install the CPU, follow the steps below.

**Step 1:** **Disengage the load lever** by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 4-1**.

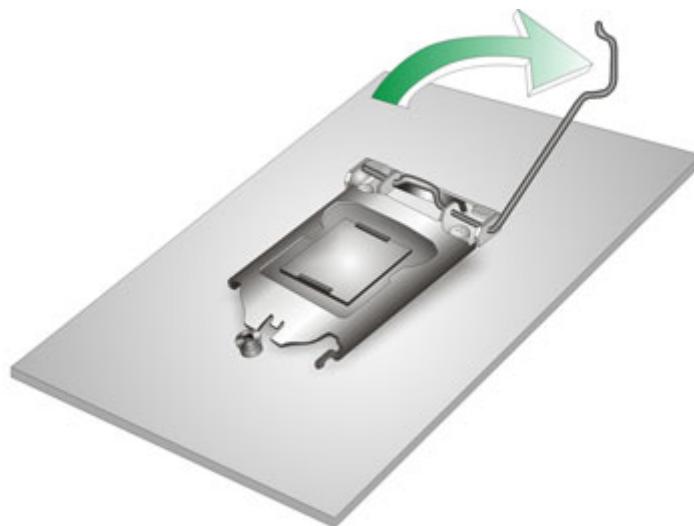

**Figure 4-1: Disengage the CPU Socket Load Lever**

**Step 2:** **Open the socket and remove the protective cover.** The black protective cover can be removed by pulling up on the tab labeled "Remove". See **Figure 4-2**.

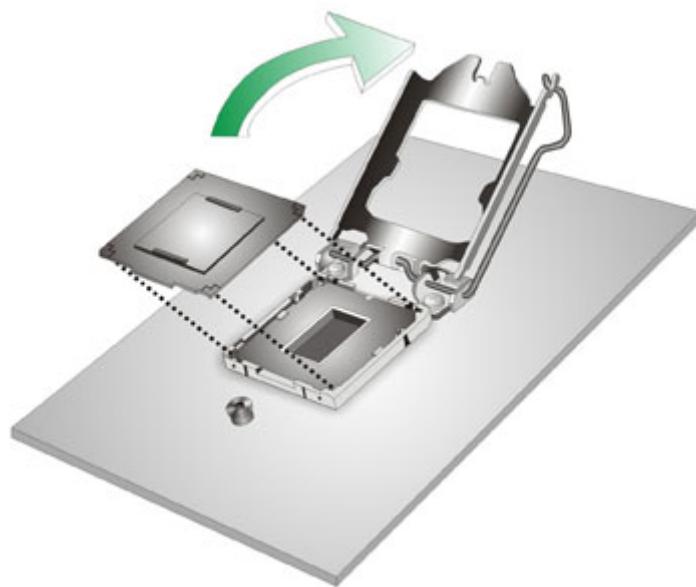

**Figure 4-2: Remove Protective Cover**

**Step 3: Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.

**Step 4: Orientate the CPU properly.** The contact array should be facing the CPU socket.



**WARNING:**


DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

**Step 5: Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket.

**Step 6: Align the CPU pins.** Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.


## SPCIE-C246 Full-size PICMG 1.3 CPU Card

**Step 7: Insert the CPU.** Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 4-3.**

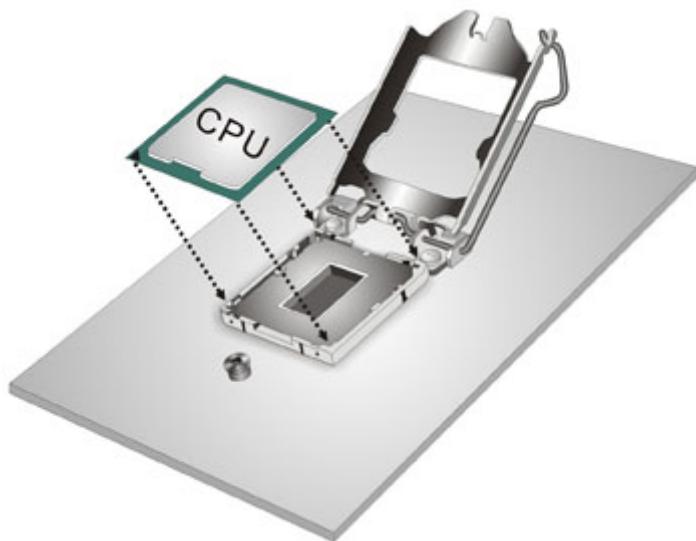

**Figure 4-3: Insert the Socket LGA1151 CPU**

**Step 8: Close the CPU socket.** Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 4-4**). There will be some resistance, but will not require extreme pressure.

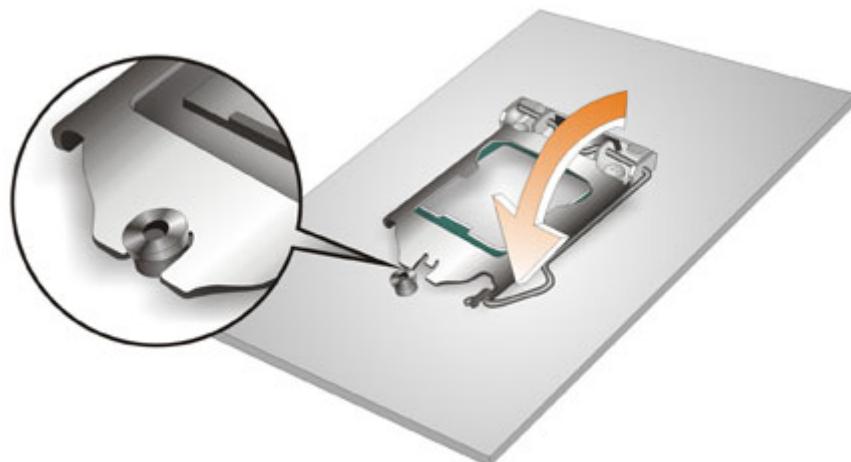

**Figure 4-4: Close the Socket LGA1151**

**Step 9: Connect the 12 V power to the board.** Connect the 12 V power from the power supply to the board.

#### 4.4 Socket LGA1151 Cooling Kit Installation

---



##### **WARNING:**

**DO NOT attempt to install a push-pin cooling fan.**

**The pre-installed support bracket prevents the board from bending and is ONLY compatible with captive screw type cooling fans.**

---

The cooling kit can be bought from IEI. The cooling kit has a heat sink and fan.

---



##### **WARNING:**

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

---

To install the cooling kit, follow the instructions below.

**Step 1:** A cooling kit bracket is pre-installed on the rear of the motherboard. See **Figure 4-5**.

## SPCIE-C246 Full-size PICMG 1.3 CPU Card



**Figure 4-5: Cooling Kit Support Bracket**

**Step 2:** Place the cooling kit onto the socket LGA1151 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.


**Step 3:** Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.

**Step 4:** Tighten the screws. Use a screwdriver to tighten the four screws. In a diagonal pattern, tighten each screw a few turns then move to the next one, until they are all secured. Do not overtighten the screws.

**Step 5:** Connect the fan cable. Connect the cooling kit fan cable to the CPU fan connector on the SPCIE-C246. Carefully route the cable and avoid heat generating chips and fan blades.

## 4.5 DIMM Installation

To install a DIMM, please follow the steps below and refer to **Figure 4-6**.

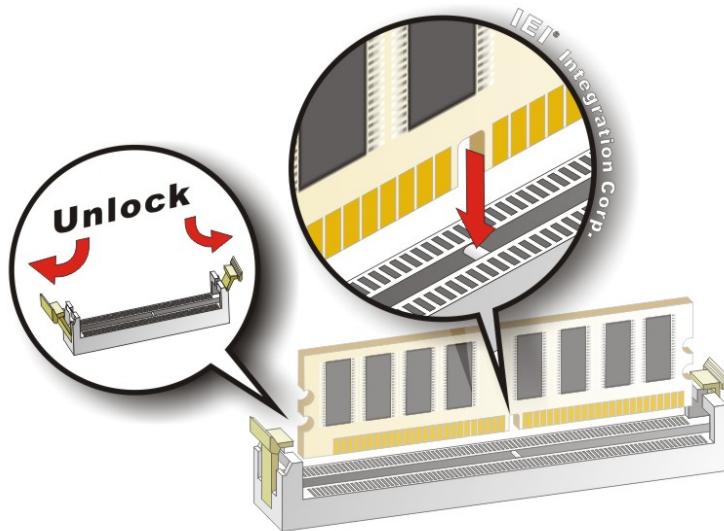

**Figure 4-6: DIMM Installation**

**Step 1: Open the DIMM socket handles.** Open the two handles outwards as far as they can. See **Figure 4-6**.

**Step 2: Align the DIMM with the socket.** Align the DIMM so the notch on the memory lines up with the notch on the memory socket. See **Figure 4-6**.

**Step 3: Insert the DIMM.** Once aligned, press down until the DIMM is properly seated. Clip the two handles into place. See **Figure 4-6**.

**Step 4: Removing a DIMM.** To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.



### CAUTION:


For quad channel configuration, install four identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

## 4.6 System Configuration

The system configuration should be performed before installation.

### 4.6.1 AT/ATX Power Mode Setting

The AT and ATX power mode selection is made through the AT/ATX power mode switch which is shown in **Figure 4-7**.

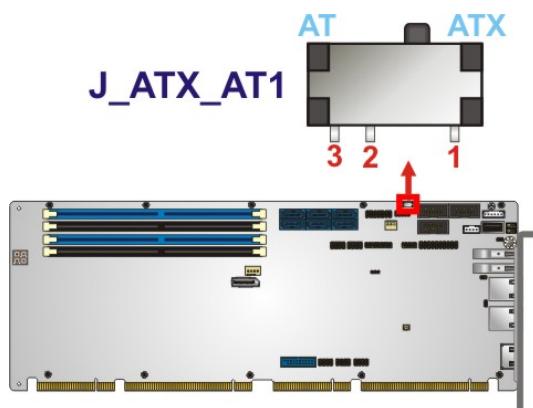


**Figure 4-7: AT/ATX Power Mode Switch Location**

Setting	Description
1-2 (right)	ATX power mode (default)
2-3 (left)	AT power mode

**Table 4-1: AT/ATX Power Mode Switch Settings**

### 4.6.2 Clear CMOS Button

To reset the BIOS, remove the on-board battery and press the clear CMOS button for three seconds or more. The clear CMOS button location is shown in **Figure 4-8**.

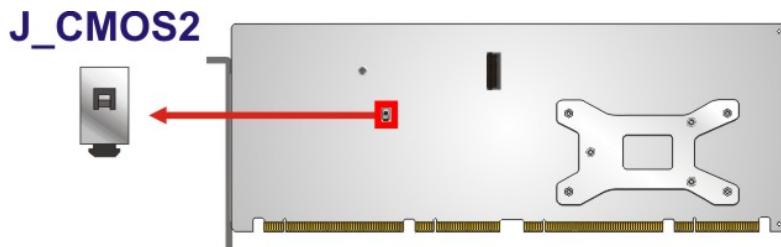

**Figure 4-8: Clear CMOS Button Location**

#### 4.6.3 PCIe x16 Channel Mode Setup

The SPCIE-C246 supports one PCIe x16 interface on the backplane. The PCIe x16 channel mode setup is made through the BIOS menu in “Chipset → System Agent (SA) Configuration → PEG Port Configuration”. Use the **PEG Link Width Configuration** BIOS option to configure the PCIe x16 channel mode.

Options	Description
1x16	Sets the PCIe x16 link width as one PCIe x16 slot (default)
2x8	Sets the PCIe x16 link width as two PCIe x8 slots
1x8, 2x4	Sets the PCIe x16 link width as one PCIe x8 and two PCIe x4

**Table 4-2: PCIe x16 Channel Mode Setup**


Please refer to **Section 5.4.1.3** for detailed information.

#### 4.6.4 Flash Descriptor Security Override Jumper

The flash descriptor security override jumper (J\_FLASH1) allows to enable or disable the ME firmware update. Refer to **Table 4-3** and **Figure 4-9** for the jumper location and settings.

Setting	Description
Short 1-2	Disabled (default)
Short 2-3	Enabled

**Table 4-3: Flash Descriptor Security Override Jumper Settings**

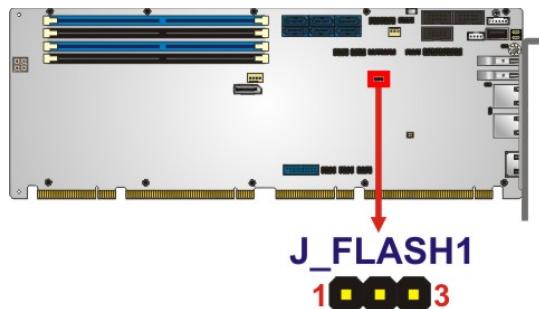

**Figure 4-9: Flash Descriptor Security Override Jumper Location**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

To update the ME firmware, please follow the steps below.

- Step 1:** Before turning on the system power, short pin 2-3 of the flash descriptor security override jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.
- Step 3:** Remove the metal clip on the flash descriptor security override jumper or return to its default setting (short pin 1-2).
- Step 4:** Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

#### 4.6.5 USB Power Selection

The USB power selection is made through the BIOS menu in “Chipset → PCH-IO Configuration”. Use the **USB Power SW1** and the **USB Power SW2** BIOS options to configure whether to provide power to the corresponding USB connectors when the system is in S3/S4 sleep state. See **Table 4-4** and refer to **Table 4-5** to select the USB power source. These options are valid only when the above **Power Saving Function (ERP)** BIOS option is disabled.

BIOS Options	Configured USB Ports
USB Power SW1	USB3_1 (external USB 3.2 Gen 1 port) USB3_2 (external USB 3.2 Gen 1 port) USB3 (internal USB 2.0 port, Type A)
USB Power SW2	USB1 (internal USB 2.0 ports) USB2 (internal USB 2.0 ports) USB4 (internal USB 2.0 ports) USB3-1 (internal USB 3.2 Gen 1 ports)

**Table 4-4: BIOS Options and Configured USB Ports**

Options	Description
+5V DUAL	+5V dual (default)
+5V	+5V

**Table 4-5: USB Power Source Setup**

Please refer to **Section 5.4.2** for BIOS setup.

## 4.7 Internal Peripheral Device Connections


This section outlines the installation of peripheral devices to the onboard connectors.

### 4.7.1 SATA Drive Connection

The SPCIE-C246 is shipped with two SATA drive cables. To connect the SATA drives to the connectors, please follow the steps below.

**Step 1: Locate the connectors.** The locations of the SATA drive connectors are shown in Chapter 3.


**Step 2: Insert the cable connector.** Insert the cable connector into the on-board SATA drive connector until it clips into place. See **Figure 4-10**.

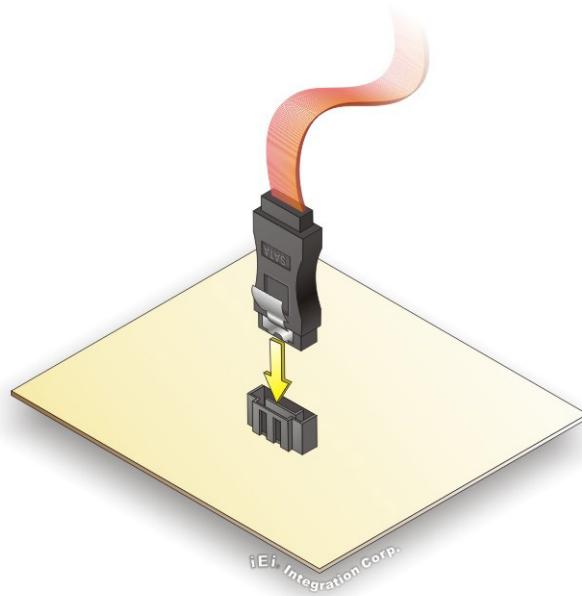

**Figure 4-10: SATA Drive Cable Connection**

**Step 3: Connect the cable to the SATA disk.** Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-11**.

**Step 4: Connect the SATA power cable.** Connect the SATA power connector to the back of the SATA drive. See **Figure 4-11**.

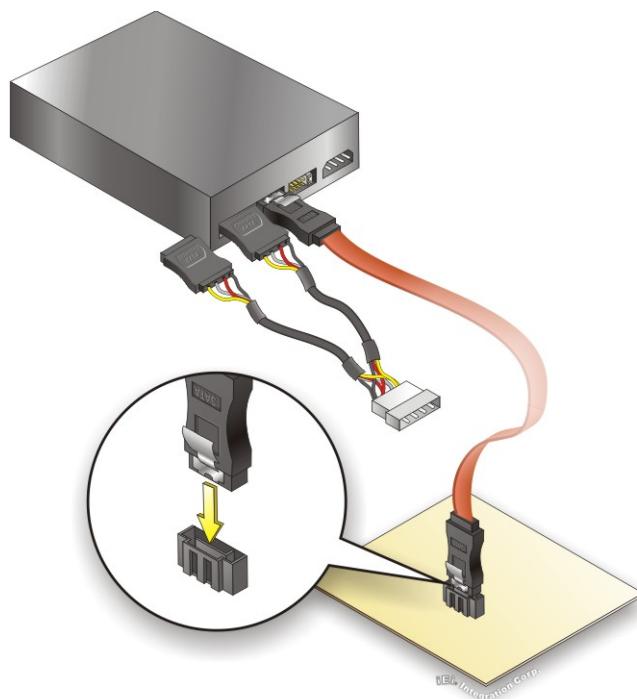

**Figure 4-11: SATA Power Drive Connection**

The SATA power cable can be bought from IEI. See Optional Items in Section 2.4.

## 4.8 Software Installation

All the drivers for the SPCIE-C246 are available on IEI Resource Download Center (<https://download.ieeworld.com>). Type SPCIE-C246 and press Enter to find all the relevant software, utilities, and documentation.


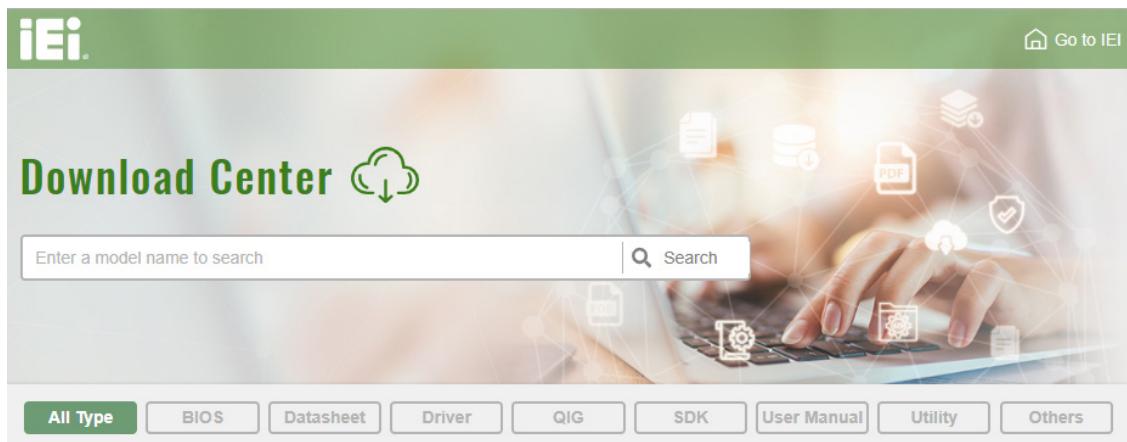


Figure 4-12: IEI Resource Download Center

## 4.9 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

**Step 1:** Go to <https://download.ieeworld.com>. Type SPCIE-C246 and press Enter.

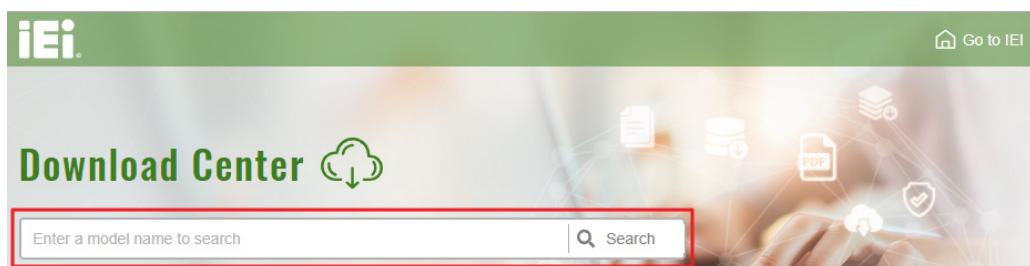

**Step 2:** All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.


WAFER-BT-i1

Embedded Computer > Single Board Computer > Embedded Board

3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

File Name	Published	Version	File Checksum
<a href="#">7B000-001033-RS V2.3.iso (2.23 GB)</a>	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

**Step 3:** Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (1), or click the small arrow to find an individual driver and click the file name to download (2).

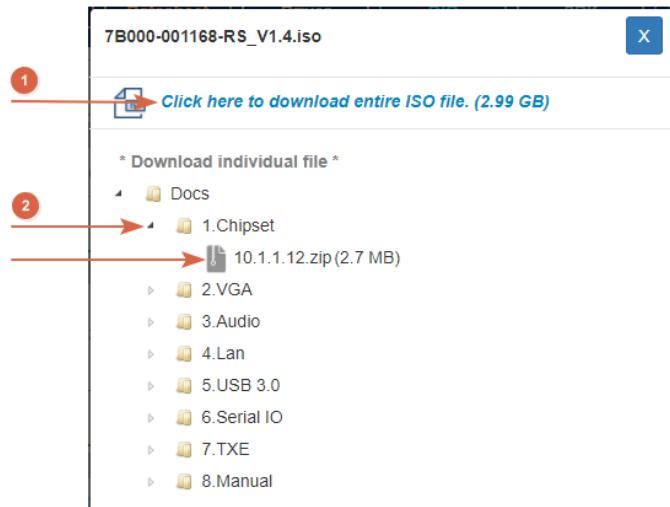

#### NOTE:

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content. On Windows 7 system, an additional tool (such as Virtual CD-ROM Control Panel from Microsoft) is needed to mount the file.

## 4.10 Intel® AMT Setup Procedure

The SPCIE-C246 is featured with the Intel® Active Management Technology (AMT). To enable the Intel® AMT function, follow the steps below.

**Step 1:** Make sure at least one of the memory sockets is installed with a DDR4 DIMM.

**Step 2:** Connect an Ethernet cable to the RJ-45 connector labeled **LAN1**.

**Step 3:** The AMI BIOS options regarding the Intel® ME or Intel® AMT must be enabled,

**Step 4:** Properly install the Intel® Management Engine Components drivers from the iAMT Driver & Utility directory in the driver CD.

**Step 5:** Configure the Intel® Management Engine BIOS extension (MEBx). To get into the Intel® MEBx settings, press **<Ctrl+P>** after a single beep during boot-up process. Enter the Intel® current ME password as it requires (the Intel® default password is **admin**).



### NOTE:

To change the password, enter a new password following the strong password rule (containing at least one upper case letter, one lower case letter, one digit and one special character, and be at least eight characters).

Chapter

5

# BIOS

---

## 5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



### NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

### 5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DEL** or **F2** key as soon as the system is turned on or
2. Press the **DEL** or **F2** key when the “**Press DEL or F2 to enter SETUP**” message appears on the screen.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again.

### 5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the **PageUp** and **PageDown** keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in the following table.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page

Key	Function
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS

Table 5-1: BIOS Navigation Keys

### 5.1.3 Getting Help

When **F1** is pressed, a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press **Esc**.

### 5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

### 5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

### 5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.			
Main	Advanced	Chipset	Security
BIOS Information			Set the Date. Use Tab to switch between Date elements.
BIOS Vendor	American Megatrends		
Core Version	5.13		
Compliance	UEFI 2.6; PI 1.4		
Project Version	B528AR10.BIN		
Build Date and Time	11/26/2018 16:41:44		
iWDD Vendor	iEi		
iWDD Version	B528ER10.bin		
Processor Information			
Name	CoffeeLake DT		
Brand String	Intel(R) Xeon(R)		
Frequency	E-2186 CPU @ 3.80GHz		
ID	3800 MHz		
Stepping	0x906EA		
Number of Processors	U0		
Microcode Revision	6Core(s)/12Thread(s)		
GT Info	84		
IGFX VBIOS Version	GT2 (0x3E96)		
Memory RC Version	1010		
Total Memory	0.7.1.58		
Memory Frequency	4096 MB		
PCH Information	2133 MHz		
Name	CNL PCH-H		
PCH SKU	C246		
Stepping	B0		
ME FW Version	12.0.0.1068		
ME Firmware SKU	Corporate SKU		
Access Level	Administrator		
System Date	[Thu 01/01/2018]		
System Time	[01:10:27]		
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.			

#### BIOS Menu 1: Main

The **Main** menu has two user configurable fields:

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

### 5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



#### WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

The screenshot shows the BIOS setup utility interface for the SPCIE-C246 card. The main menu bar at the top includes options like Main, Advanced, Chipset, Security, Boot, Save & Exit. The 'Advanced' tab is currently selected. The left pane lists various configuration items under the heading 'Advanced Configuration'. The right pane displays the 'Trusted Computing Settings' section, which includes a list of keyboard shortcuts for navigation and function keys for specific actions. At the bottom of the screen, the copyright notice 'Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.' is visible.

Advanced Configuration	
> CPU Configuration	Trusted Computing Settings
> PCH-FW Configuration	-----
> Trusted Computing	→←: Select Screen
> ACPI Settings	↑↓: Select Item
> iWDD H/M Monitor	Enter: Select
> F81866 Super IO Configuration	+/-: Change Opt.
> RTC Wake Settings	F1: General Help
> Serial Port Console Redirection	F2: Previous Values
> USB Configuration	F3: Optimized Defaults
> CSM Configuration	F4: Save & Exit
> NVMe Configuration	ESC: Exit
> iEI Feature	


Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.

**BIOS Menu 2: Advanced**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

**5.3.1 CPU Configuration**

Use the **CPU Configuration** menu (**BIOS Menu 3**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

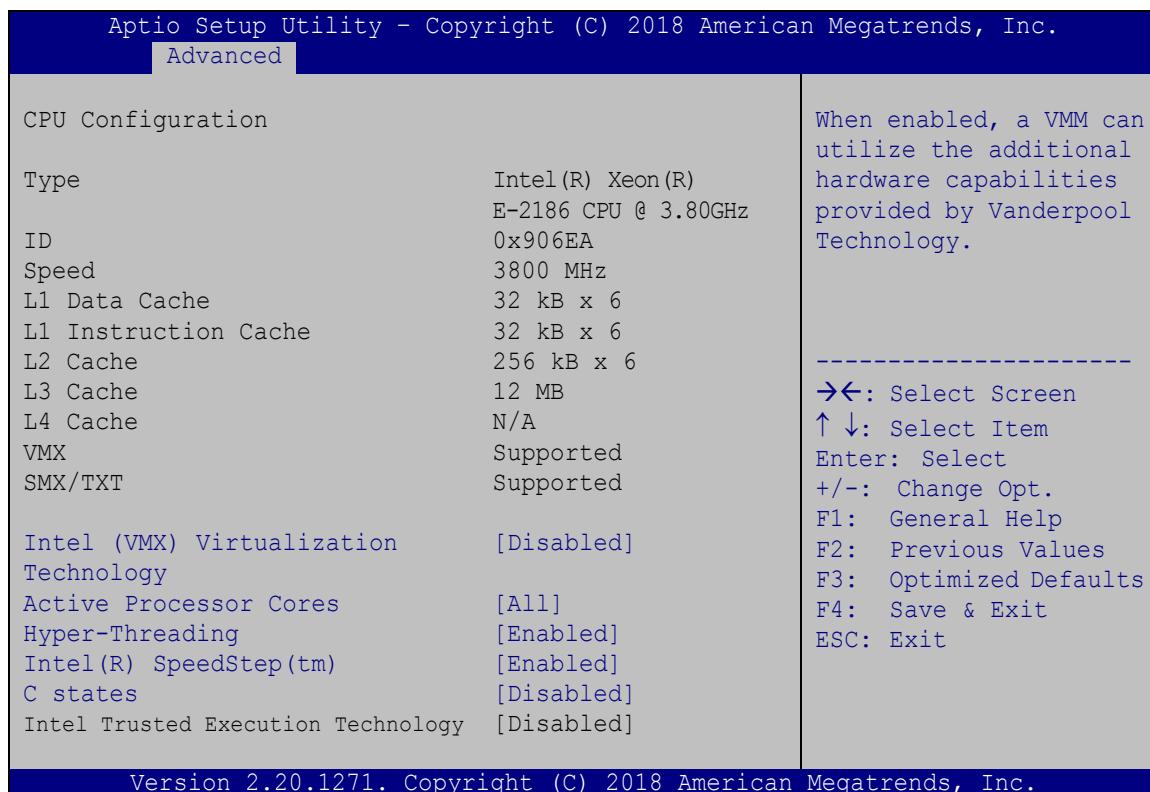**BIOS Menu 3: CPU Configuration**

→ **Intel (VMX) Virtualization Technology [Disabled]**

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

→ **Disabled**      **DEFAULT**      Disables Intel Virtualization Technology.

→ **Enabled**      Enables Intel Virtualization Technology.

→ Active Processor Cores [All]

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

- **All**      **DEFAULT**    Enable all cores in the processor package.
- **1**                  Enable one core in the processor package.
- **2**                  Enable two cores in the processor package.
- **3**                  Enable three cores in the processor package.
- **4**                  Enable four cores in the processor package.
- **5**                  Enable five cores in the processor package.

→ Hyper-threading [Enabled]

Use the **Hyper-threading** BIOS option to enable or disable the Intel Hyper-Threading Technology.

- **Disabled**                  Disables the Intel Hyper-Threading Technology.
- **Enabled**    **DEFAULT**    Enables the Intel Hyper-Threading Technology.

→ Intel(R) SpeedStep(tm) [Enabled]

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep Technology which allows more than two frequency ranges to be supported.

- **Disabled**                  Disables Intel® SpeedStep Technology
- **Enabled**    **DEFAULT**    Enables Intel® SpeedStep Technology


→ C states [Disabled]

Use the **C states** option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% utilized.

- **Disabled**                  Disables CPU power management
- **Enabled**                  Enables CPU power management

### 5.3.2 PCH-FW Configuration

The **PCH-FW Configuration** menu (**BIOS Menu 4**) allows Intel® Active Management Technology (AMT) options to be configured.

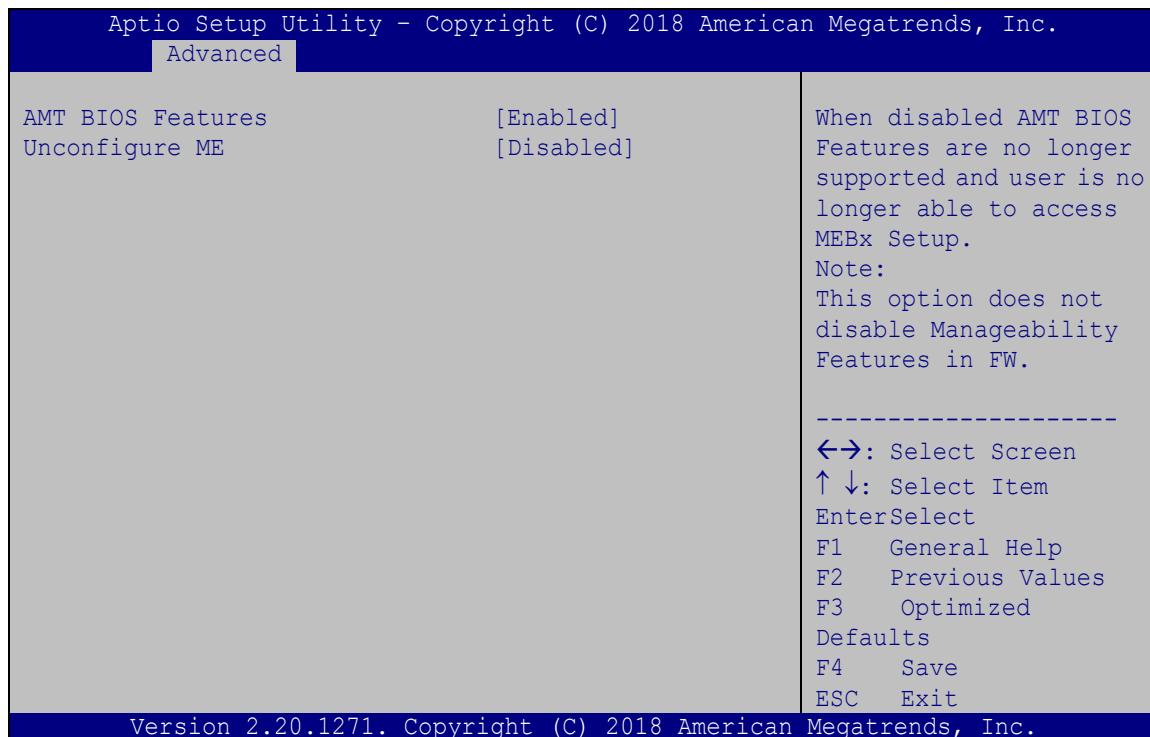

#### BIOS Menu 4: PCH-FW Configuration

##### → AMT BIOS Features [Enabled]

Use the **AMT BIOS Features** option to enable or disable the access to MEBx setup.

- **Disabled** Disable access to MEBx setup.
- **Enabled** **DEFAULT** Enable access to MEBx setup.

##### → Unconfigure ME [Disabled]


Use the **Unconfigure ME** option to unconfigure ME with resetting MEBx password to default.

- **Disabled** **DEFAULT** Not unconfigure ME with resetting MEBx password to default

- **Enabled** Unconfigure ME with resetting MEBx password to default

### 5.3.3 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 5**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

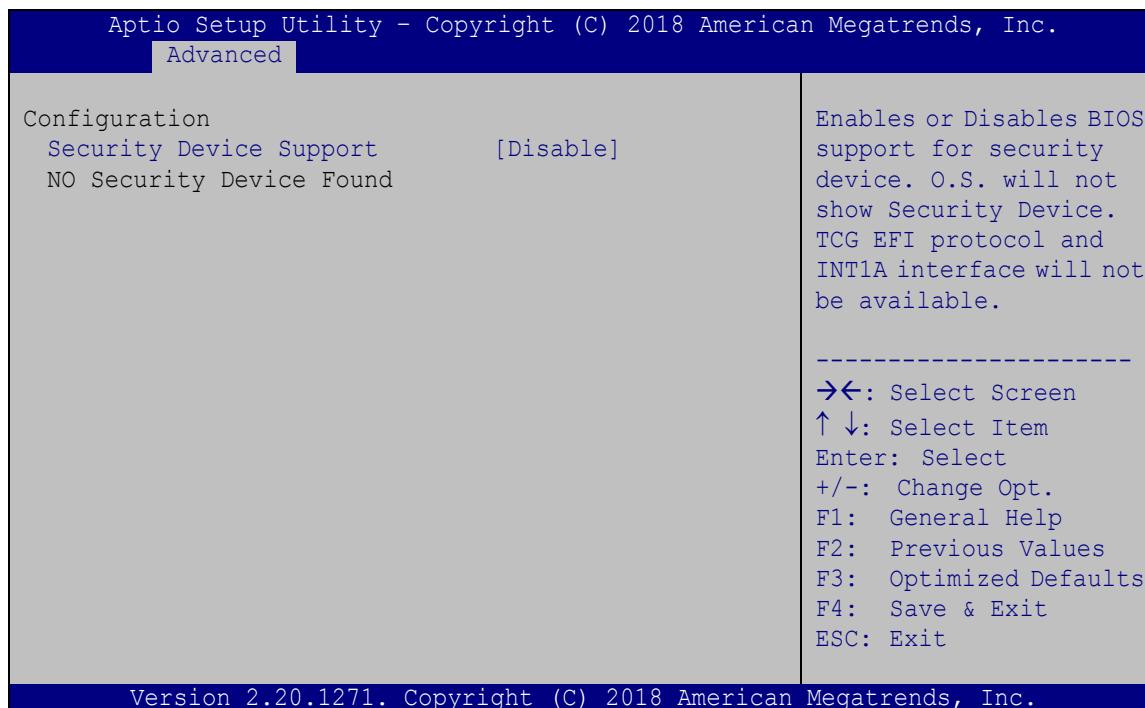

#### BIOS Menu 5: Trusted Computing


##### → **Security Device Support [Disable]**

Use the **Security Device Support** option to configure support for the TPM.

- **Disable** DEFAULT TPM support is disabled.
- **Enable** TPM support is enabled.

### 5.3.4 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 6**) configures the Advanced Configuration and Power Interface (ACPI) options.

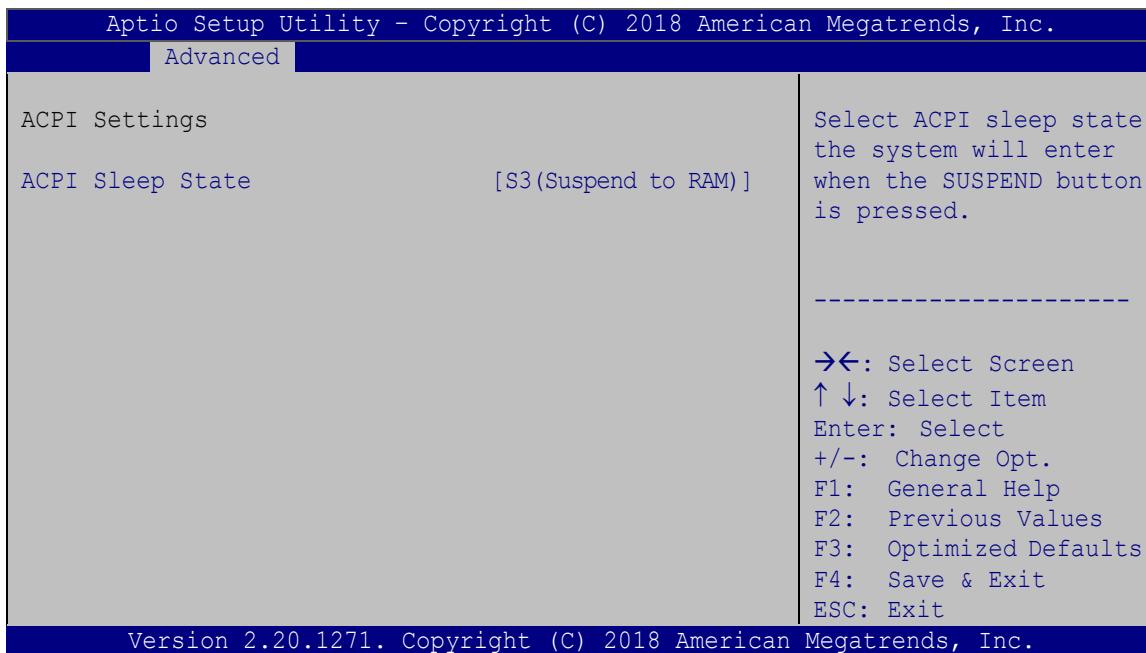

#### BIOS Menu 6: ACPI Settings


##### → **ACPI Sleep State [S3 (Suspend to RAM)]**

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

→ **S3 (Suspend to RAM)**    **DEFAULT**    The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

### 5.3.5 iWDD H/W Monitor

The **iWDD H/W Monitor** menu (**BIOS Menu 7**) contains the fan configuration submenu, and displays the system temperature and CPU fan speed.

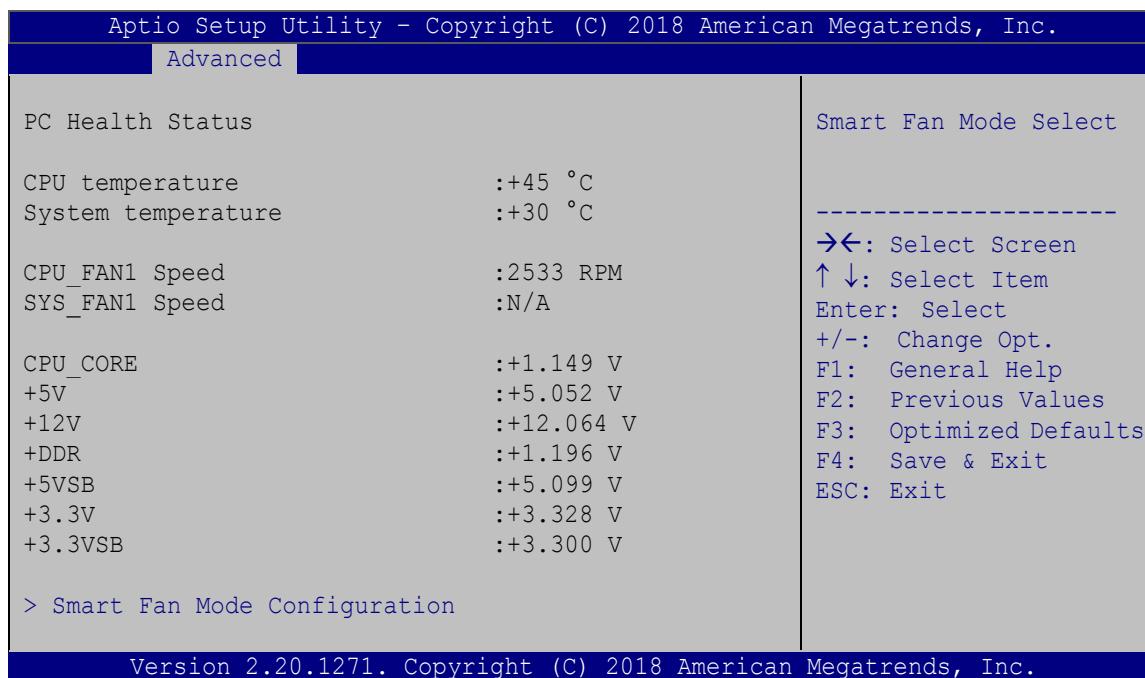

#### BIOS Menu 7: iWDD H/W Monitor

##### → PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:


- System Temperatures:
  - CPU Temperature
  - System Temperature
- Fan Speeds:
  - CPU Fan Speed
  - System Fan Speed
- Voltages:
  - CPU\_CORE
  - +5V

**SPCIE-C246 Full-size PICMG 1.3 CPU Card**

- +12V
- DDR
- +5VSB
- +3.3V
- +3.3VSB

**5.3.5.1 Smart Fan Mode Configuration**

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 8**) to configure the CPU/system fan temperature and speed settings.

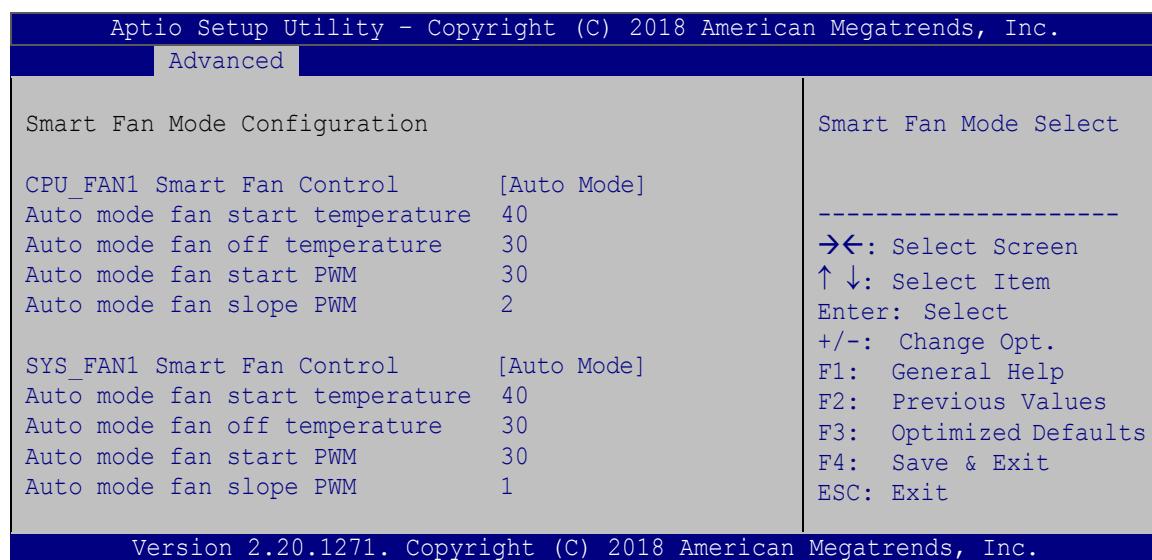**BIOS Menu 8: Smart Fan Mode Configuration**

→ **CPU\_FAN1 Smart Fan Control/SYS\_FAN1 Smart Fan Control [Auto Mode]**

Use the **CPU\_FAN1 Smart Fan Control/SYS\_FAN1 Smart Fan Control** option to configure the CPU/System Smart Fan.

- |                                   |   |
|-----------------------------------|---|
| → <b>Manual Mode</b>              | The fan spins at the speed set in Manual Mode settings. |
| → <b>Auto Mode</b> <b>DEFAULT</b> | The fan adjusts its speed using Auto Mode settings.     |

The following options can only be set if the CPU/SYS Smart Fan Control option is set to Auto Mode.

→ **Auto mode fan start temperature**

If the CPU temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **Auto mode fan off temperature**

If the CPU temperature is lower than the value set this option, the fan speed change to be lowest. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **Auto mode fan start PWM**


Use the **Auto mode fan start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **Auto mode fan slope PWM**

Use the **Auto mode fan slope PWM** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. Use the + or – key to change the value or enter a decimal number between 1 and 8.

### 5.3.6 F81866 Super IO Configuration

Use the **F81866 Super IO Configuration** menu (**BIOS Menu 9**) to set or change the configurations for the parallel ports and serial ports.

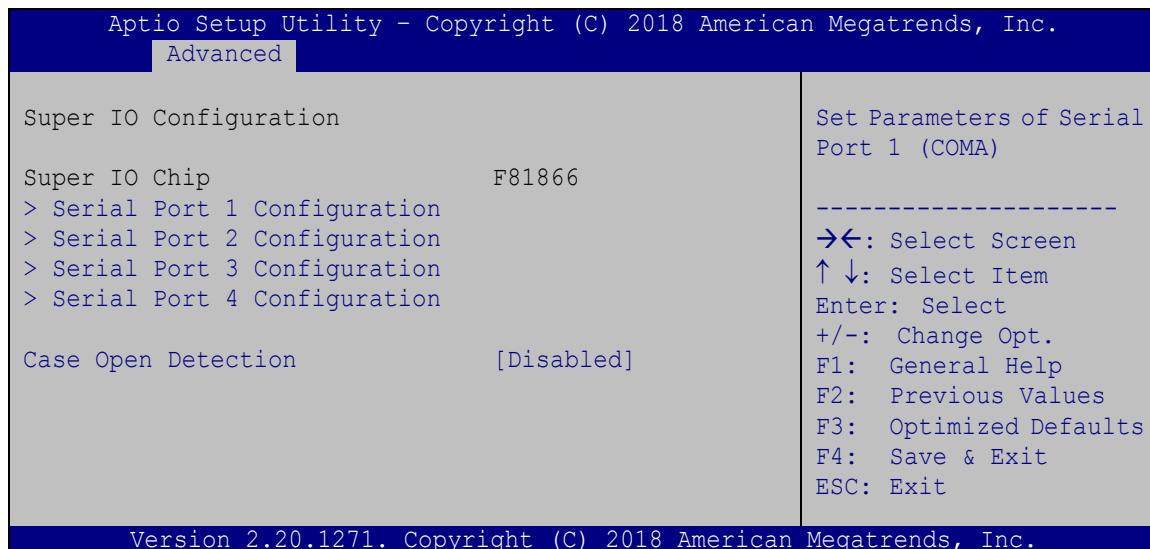

#### BIOS Menu 9: F81866 Super IO Configuration


##### → Case Open Beep [Disabled]

Use the **Case Open Beep** option to enable or disable the case open beep function.

- |                   |         |                                     |
|-------------------|---------|-------------------------------------|
| → <b>Disabled</b> | DEFAULT | Disable the case open beep function |
| → <b>Enabled</b>  |         | Enable the case open beep function  |

### 5.3.6.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 10**) to configure the serial port n.

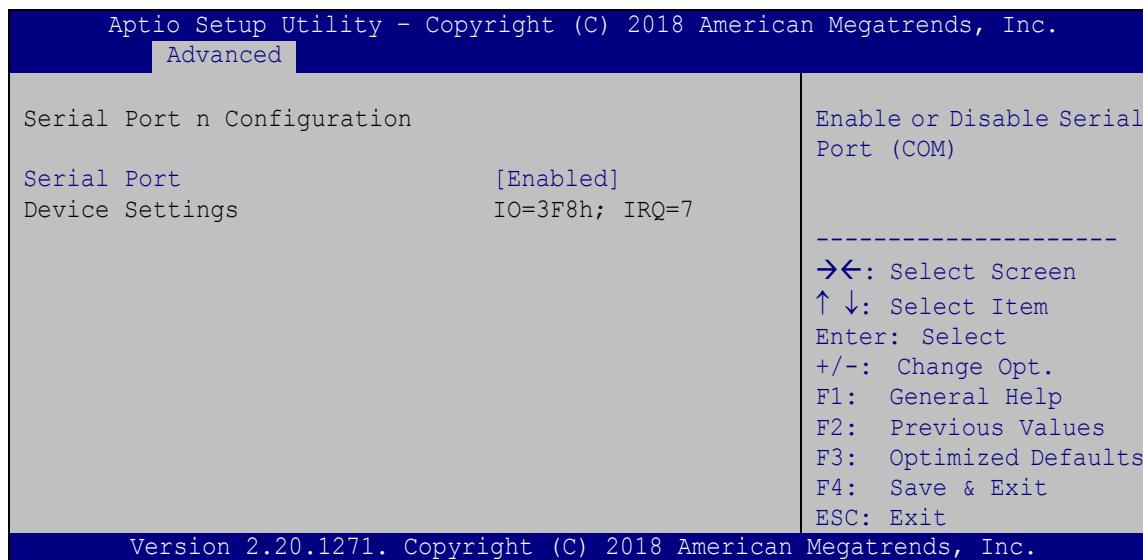

#### BIOS Menu 10: Serial Port 1 Configuration Menu


##### → **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

- |                                 |                         |
|---------------------------------|-------------------------|
| → <b>Disabled</b>               | Disable the serial port |
| → <b>Enabled</b> <b>DEFAULT</b> | Enable the serial port  |

### 5.3.6.2 Serial Port 2 Configuration

Use the **Serial Port 2 Configuration** menu (BIOS Menu 11: Serial Port 2 Configuration Menu) to configure the serial port n.

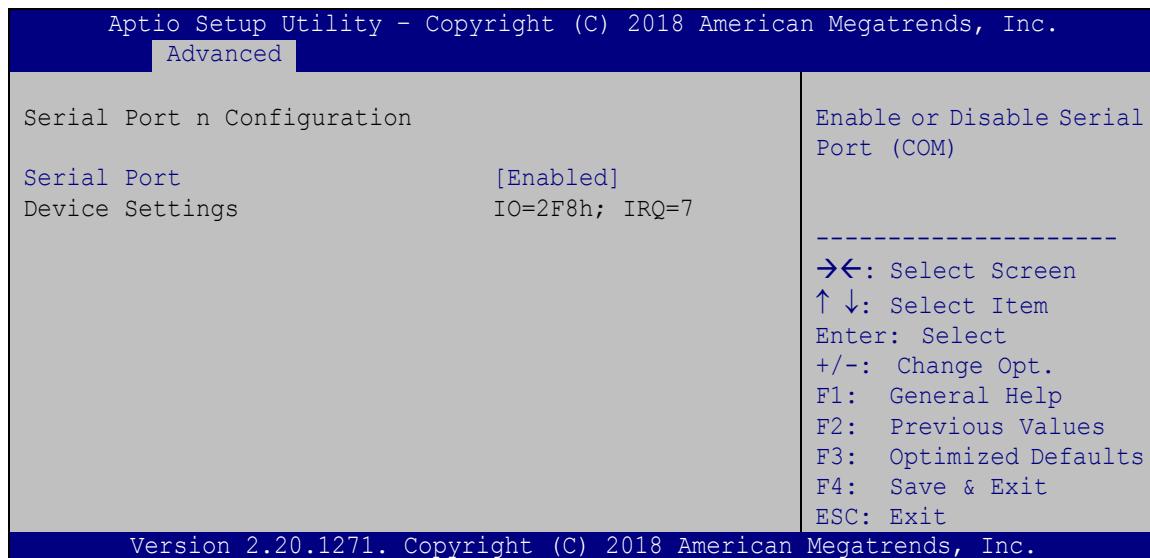

#### BIOS Menu 11: Serial Port 2 Configuration Menu

##### → Serial Port [Enabled]


Use the **Serial Port** option to enable or disable the serial port.

→ **Disabled**      Disable the serial port

→ **Enabled**    **DEFAULT**    Enable the serial port

### 5.3.6.3 Serial Port 3 Configuration

Use the **Serial Port 3 Configuration** menu (**BIOS Menu 12**) to configure the serial port n.

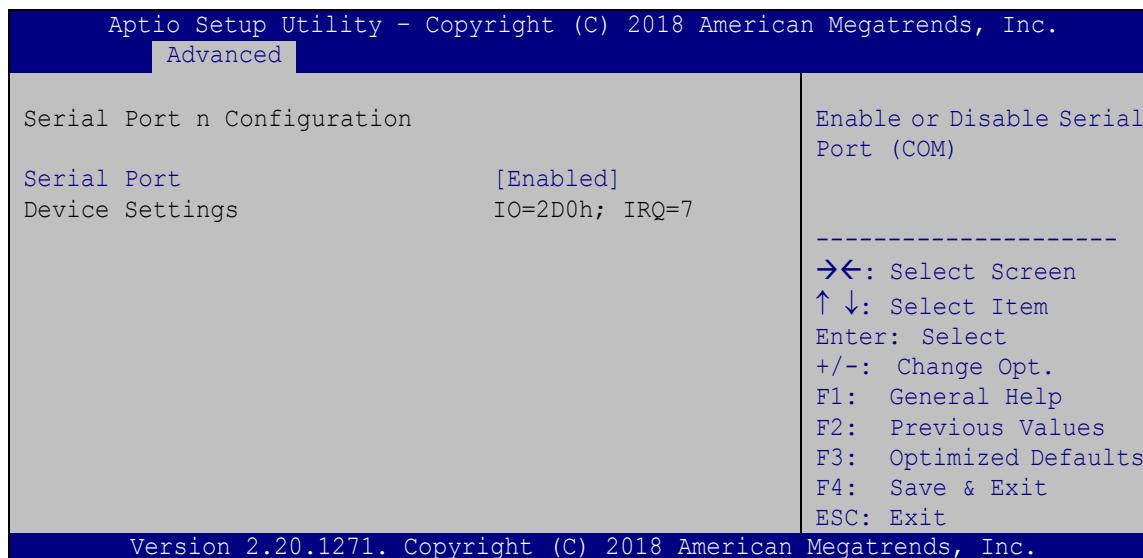

#### BIOS Menu 12: Serial Port 3 Configuration Menu


##### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- |                                 |                         |
|---------------------------------|-------------------------|
| → <b>Disabled</b>               | Disable the serial port |
| → <b>Enabled</b> <b>DEFAULT</b> | Enable the serial port  |

### 5.3.6.4 Serial Port 4 Configuration

Use the **Serial Port 4 Configuration** menu (**BIOS Menu 13**) to configure the serial port n.

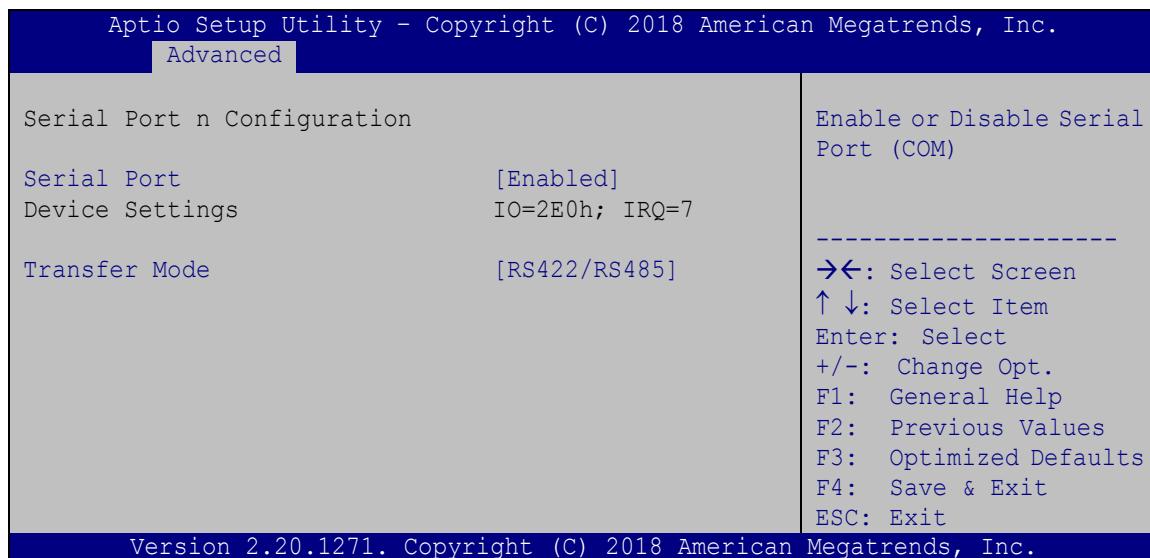

#### BIOS Menu 13: Serial Port 4 Configuration Menu

##### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- |                          |                         |
|--------------------------|-------------------------|
| → <b>Disabled</b>        | Disable the serial port |
| → <b>Enabled</b> DEFAULT | Enable the serial port  |


##### → Transfer Mode [RS422/RS485]

Use the **Transfer Mode** option to select the Serial Port 4 signaling mode.

- |                               |   |
|-------------------------------|---|
| → <b>RS422/RS 485</b> DEFAULT | Serial Port 4 signaling mode is RS-422/RS-485 |
|-------------------------------|---|

### 5.3.7 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 14**) enables the system to wake at the specified time.

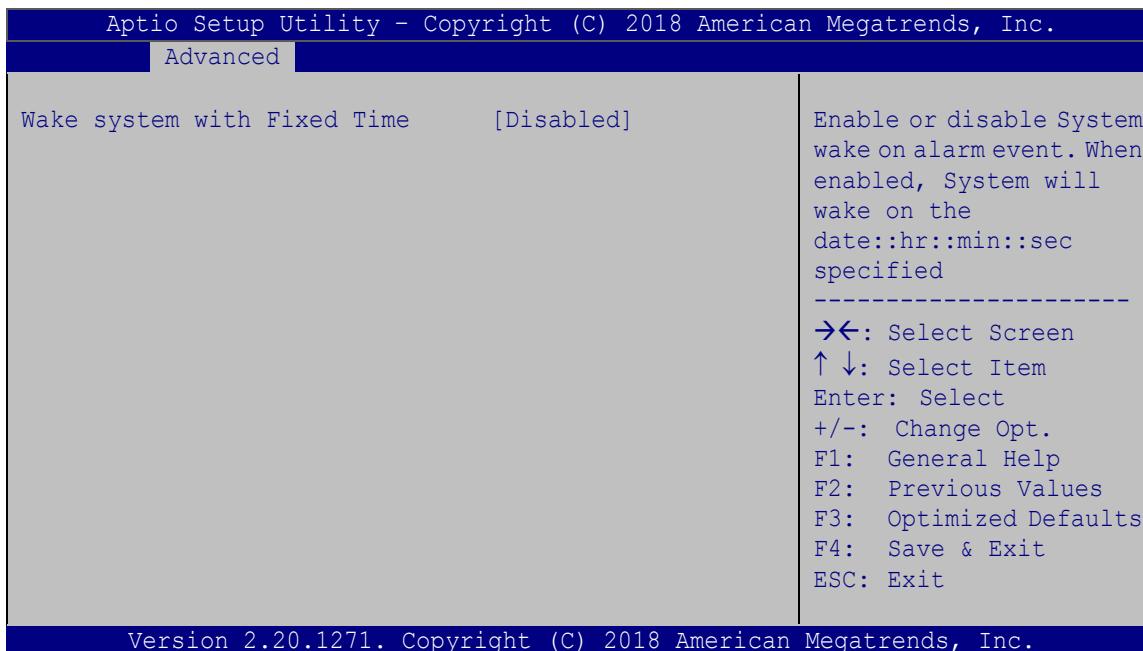

#### BIOS Menu 14: RTC Wake Settings

##### → Wake system with Fixed Time [Disabled]

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.

→ **Disabled**    **DEFAULT**    The real time clock (RTC) cannot generate a wake event

→ **Enabled**    If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:

Wake up date

Wake up hour

## SPCIE-C246 Full-size PICMG 1.3 CPU Card


Wake up minute

Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

### 5.3.8 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 15**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

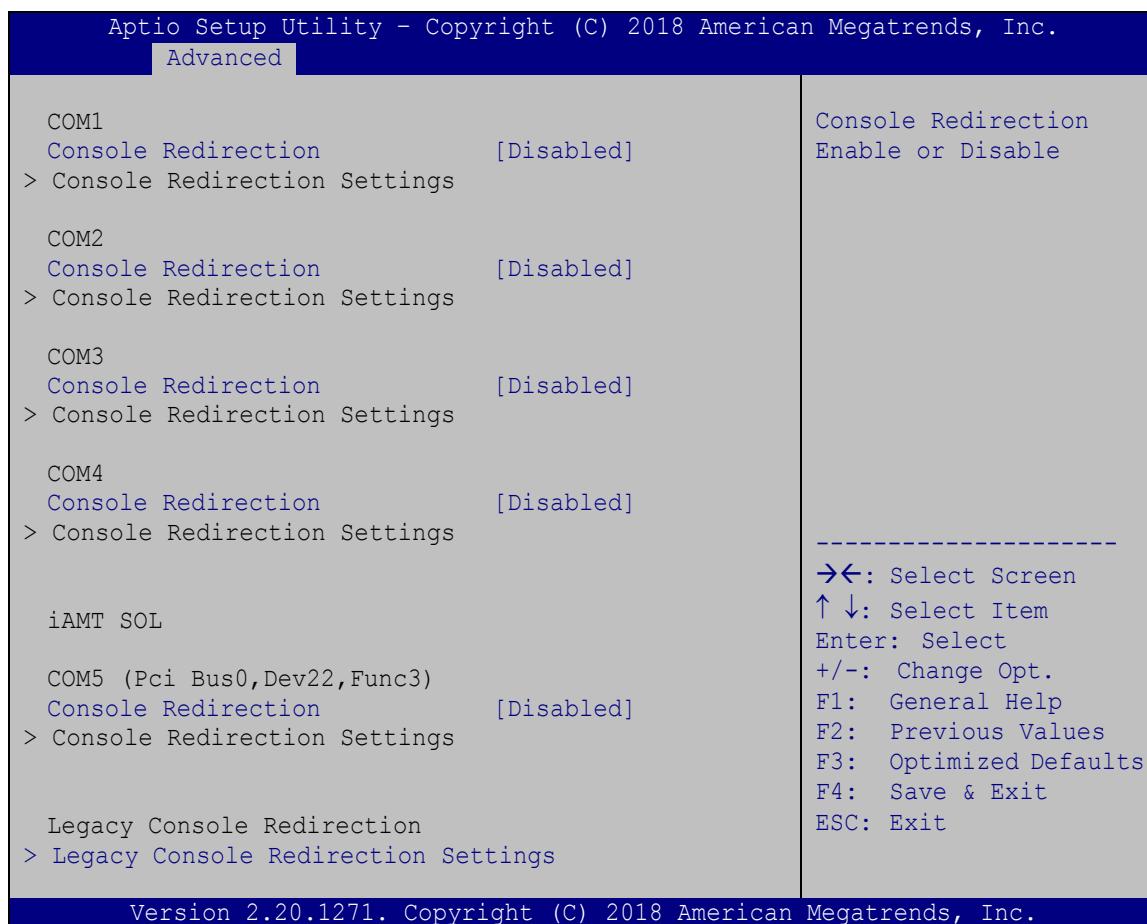

**BIOS Menu 15: Serial Port Console Redirection**

## → Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- ➔ **Disabled**    **DEFAULT**    Disabled the console redirection function
  - ➔ **Enabled**                      Enabled the console redirection function

The following options are available in the **Console Redirection Settings** submenu when the **Console Redirection** option is enabled.

## → Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- ➔ **VT100** The target terminal type is VT100
  - ➔ **VT100+** The target terminal type is VT100+
  - ➔ **VT-UTF8** The target terminal type is VT-UTF8
  - ➔ **ANSI** **DEFAULT** The target terminal type is ANSI

→ Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

- **9600** Sets the serial port transmission speed at 9600.
  - **19200** Sets the serial port transmission speed at 19200.
  - **57600** Sets the serial port transmission speed at 57600.
  - **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

## → Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- 7 Sets the data bits at 7.
  - 8 **DEFAULT** Sets the data bits at 8.

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

### → Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.


- **None**      **DEFAULT**      No parity bit is sent with the data bits.
- **Even**                  The parity bit is 0 if the number of ones in the data bits is even.
- **Odd**                   The parity bit is 0 if the number of ones in the data bits is odd.
- **Mark**                  The parity bit is always 1. This option does not provide error detection.
- **Space**                  The parity bit is always 0. This option does not provide error detection.

### → Stop Bits [1]

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- **1**      **DEFAULT**      Sets the number of stop bits at 1.
- **2**                  Sets the number of stop bits at 2.

### 5.3.8.1 Legacy Console Redirection Settings

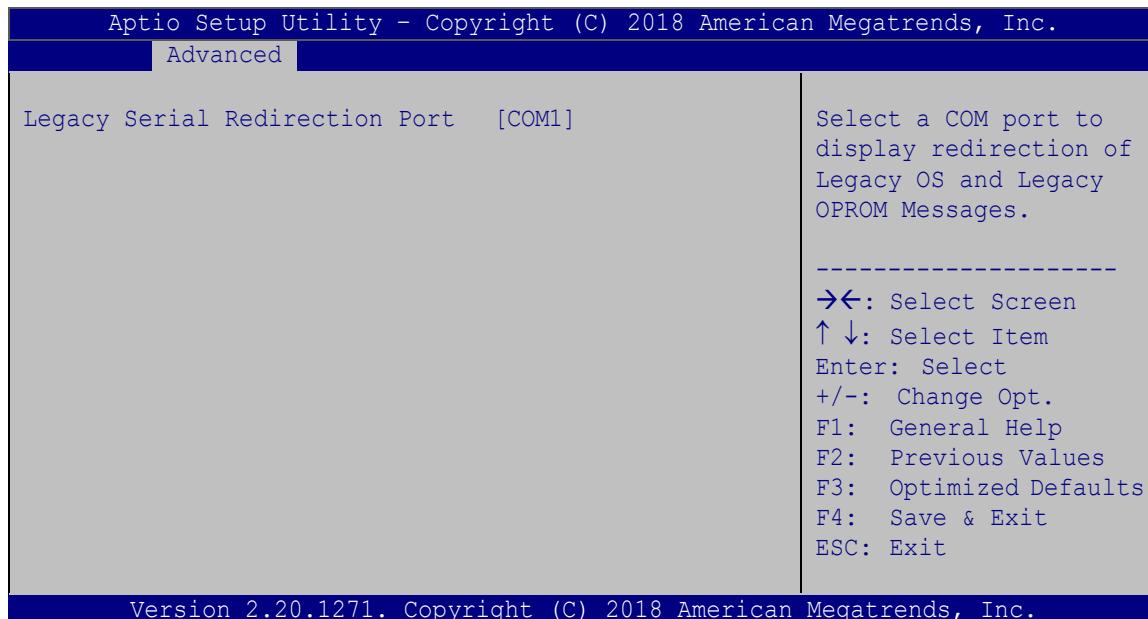

#### BIOS Menu 16: Legacy Console Redirection Settings


##### → Legacy Serial Redirection Port [COM1]

Use the **Legacy Serial Redirection Port** option to select a COM port to display redirection of legacy OS and legacy OPROM messages. Configuration options are listed below.

- |                               |                |
|-------------------------------|----------------|
| ▪ COM1                        | <b>Default</b> |
| ▪ COM2                        |                |
| ▪ COM3                        |                |
| ▪ COM4                        |                |
| ▪ COM5 (Pci Bus0,Dev22,Func3) |                |

### 5.3.9 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 17**) to read USB configuration information and configure the USB settings.

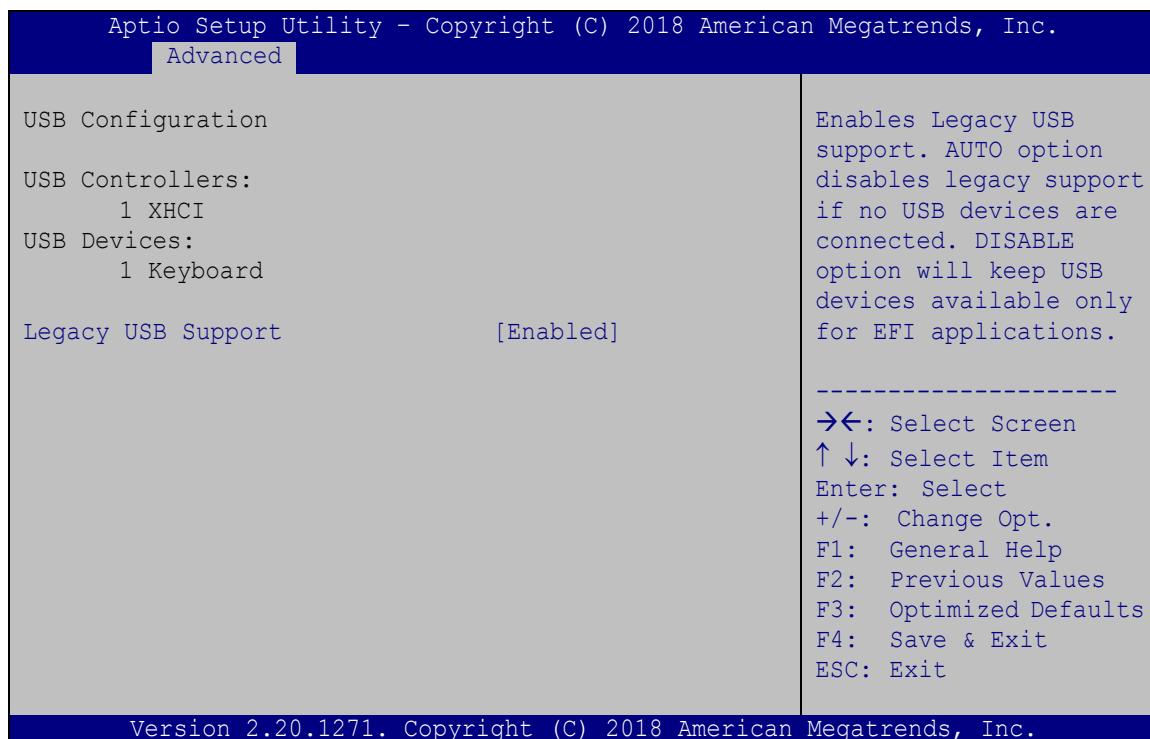

#### BIOS Menu 17: USB Configuration


##### → Legacy USB Support [Enabled]

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- |            |         |   |
|------------|---------|---|
| → Enabled  | DEFAULT | Legacy USB support enabled                                  |
| → Disabled |         | Legacy USB support disabled                                 |
| → Auto     |         | Legacy USB support disabled if no USB devices are connected |

### 5.3.10 CSM Configuration

The **CSM Configuration** menu (**BIOS Menu 18**) configures the CSM (Compatibility Support Module) support.

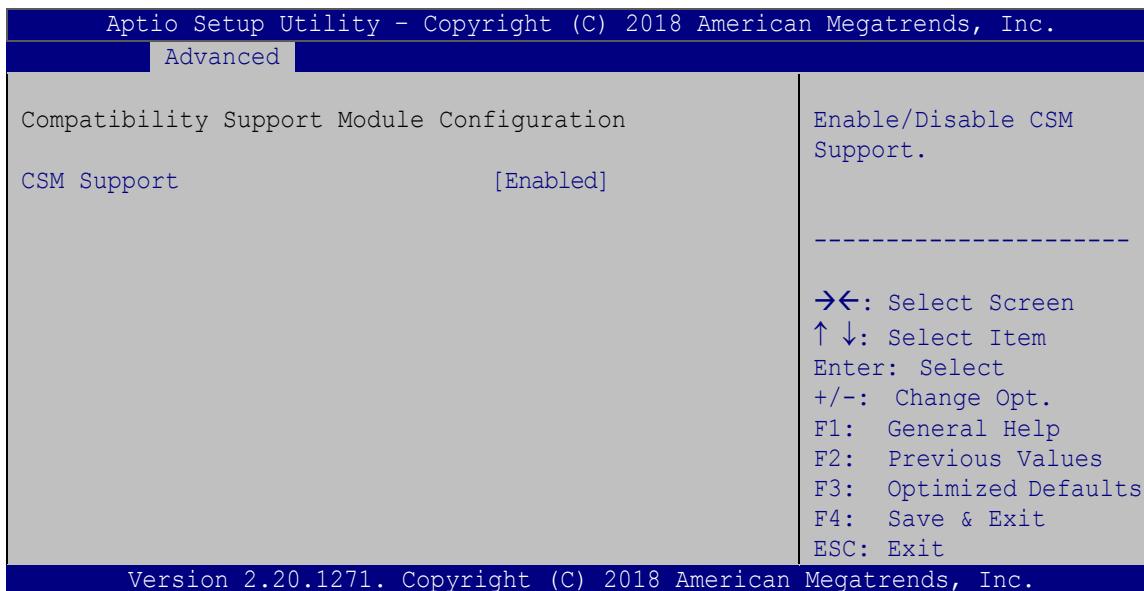

#### BIOS Menu 18: CSM Configuration

##### → **CSM Support [Enabled]**


Use the **CSM Support** option to enable or disable CSM support.

→ **Disabled** Disable CSM support.

→ **Enabled** **DEFAULT** Enable CSM support.

### 5.3.11 NVMe Configuration


Use the **NVMe Configuration (BIOS Menu 19)** menu to display the NVMe controller and device information.

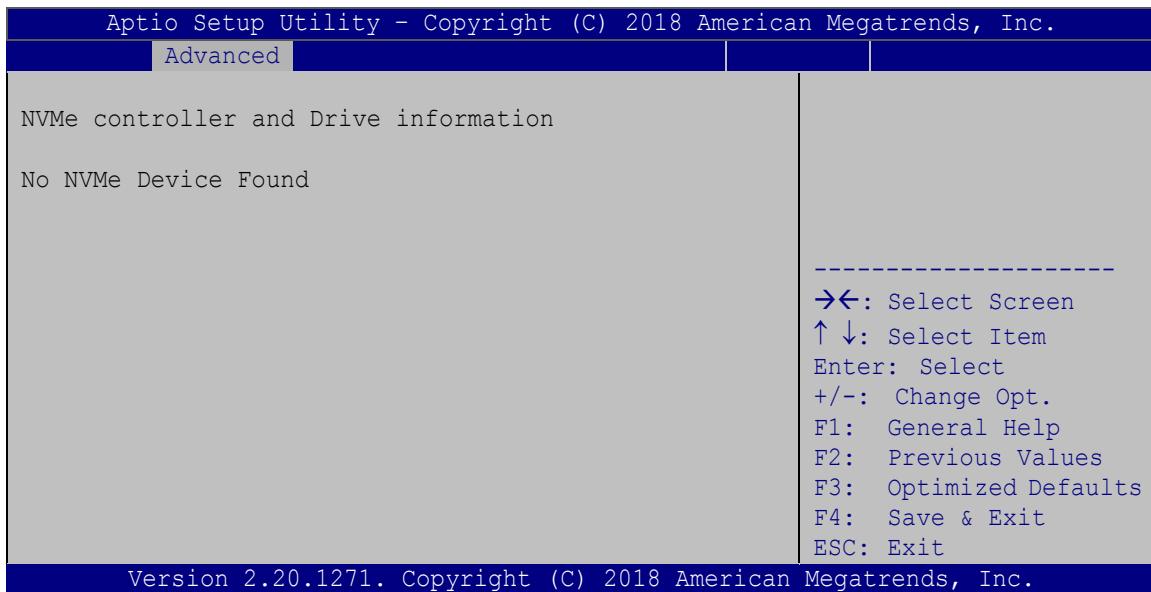

**BIOS Menu 19: NVMe Configuration**

### 5.3.12 iEI Feature

Use the **iEI Feature** menu (**BIOS Menu 20**) to configure One Key Recovery function.

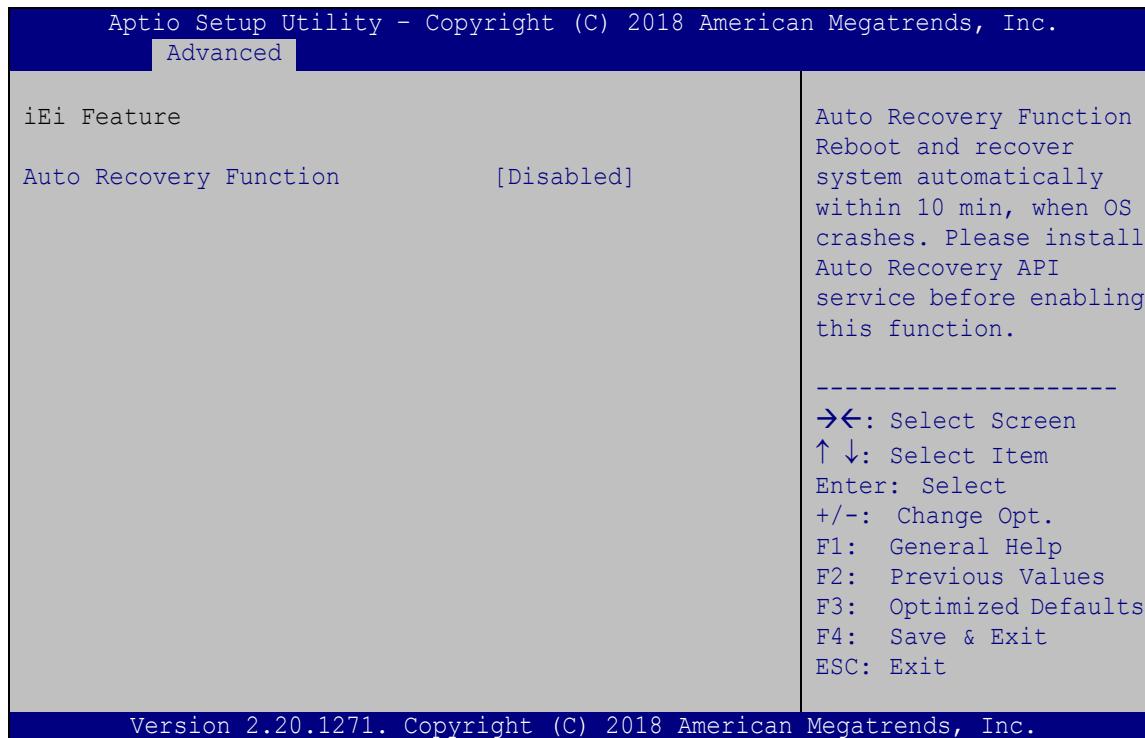

#### BIOS Menu 20: iEI Feature

##### → Auto Recovery Function [Disabled]

Use the **Auto Recovery Function** BIOS option to enable or disable the auto recovery function of the IEI One Key Recovery.

→ **Disabled**    **DEFAULT**    Auto recovery function disabled

→ **Enabled**    Auto recovery function enabled


## 5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 21**) to access the PCH IO and System Agent (SA) configuration menus.



### WARNING!


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

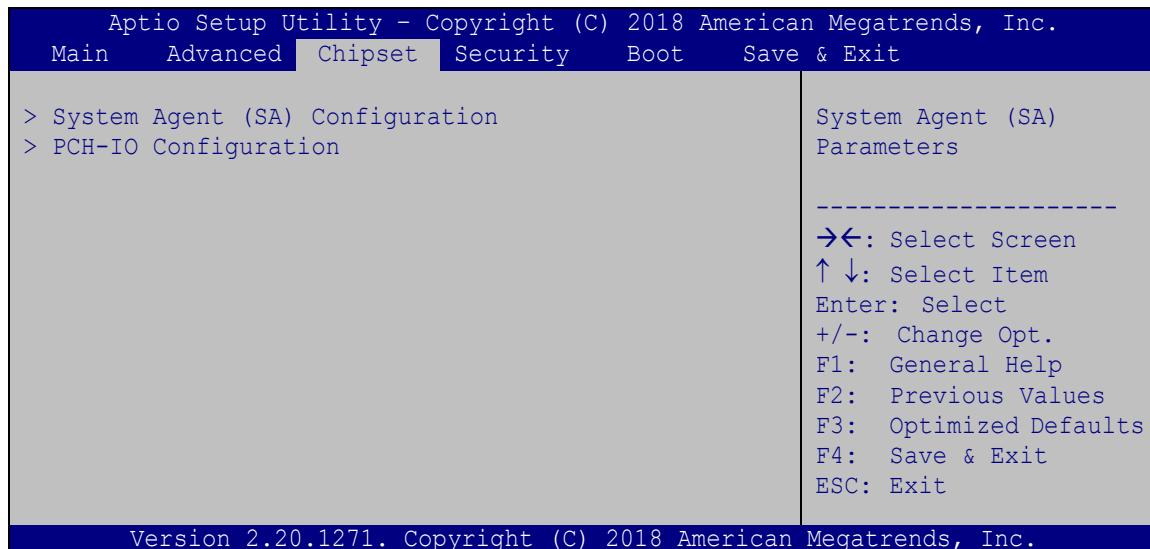

**BIOS Menu 21: Chipset**

### 5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 22**) to configure the System Agent (SA) parameters.

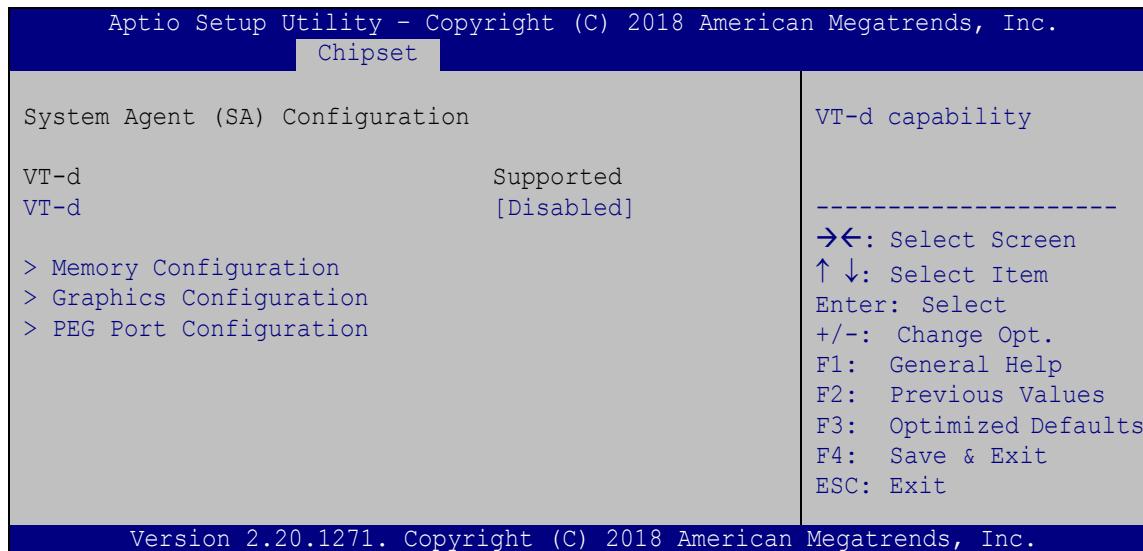

#### BIOS Menu 22: System Agent (SA) Configuration


##### → VT-d [Disabled]

Use the **VT-d** option to enable or disable VT-d capability.


- |                   |                |                           |
|-------------------|----------------|---------------------------|
| → <b>Disabled</b> | <b>DEFAULT</b> | Disables VT-d capability. |
| → <b>Enabled</b>  |                | Enables VT-d capability.  |

**SPCIE-C246 Full-size PICMG 1.3 CPU Card****5.4.1.1 Memory Configuration**

Use the **Memory Configuration** submenu (**BIOS Menu 23**) to view memory information.

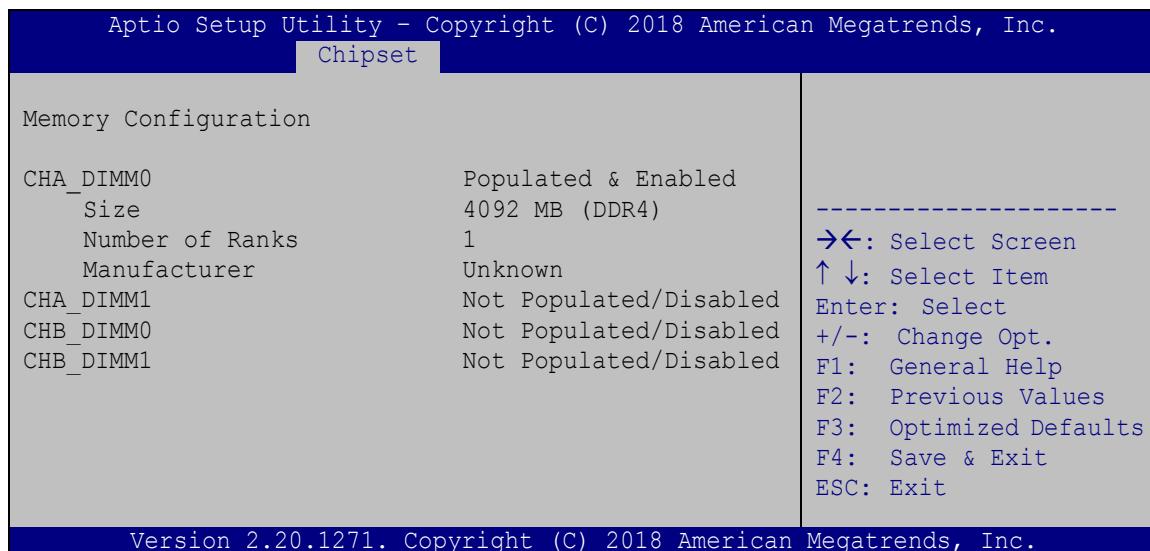**BIOS Menu 23: Memory Configuration****5.4.1.2 Graphics Configuration**

Use the **Graphics Configuration** (**BIOS Menu 24**) menu to configure the video device connected to the system.

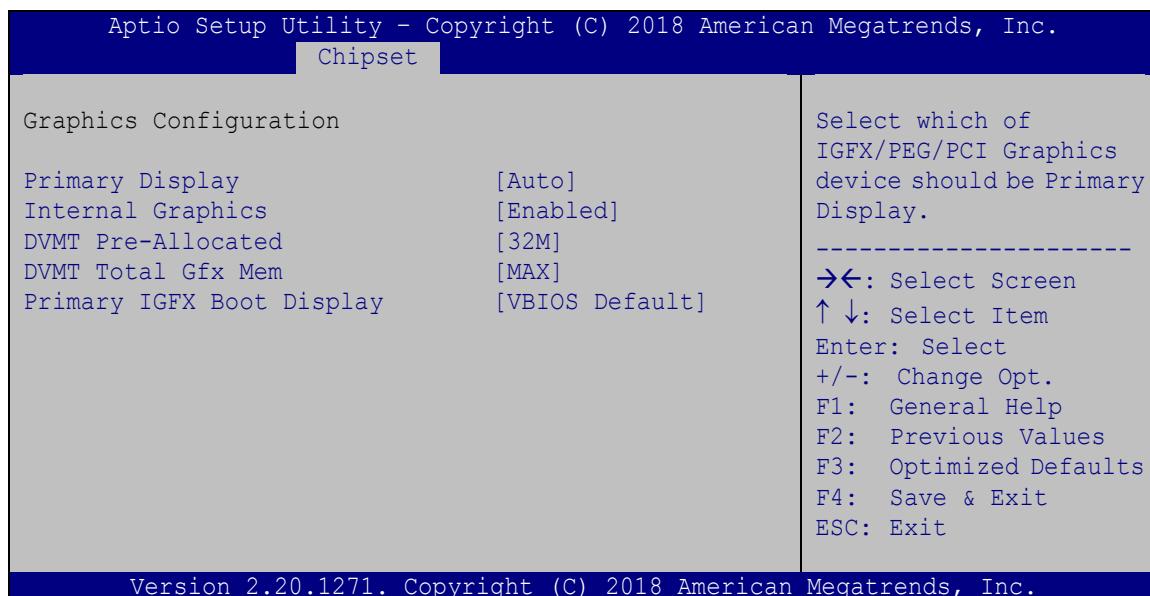**BIOS Menu 24: Graphics Configuration**

**→ Primary Display [Auto]**

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto              **Default**
- IGFX
- PEG
- PCIe

**→ Internal Graphics [Enabled]**

Use the **Internal Graphics** option to keep IGFX enabled basing on the setup options. The following options are available:

- Auto
- Disabled
- Enabled              **Default**

**→ DVMT Pre-Allocated [32M]**

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- 32M              **Default**
- 64M

**→ DVMT Total Gfx Mem [MAX]**


Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- MAX              **Default**

**SPCIE-C246 Full-size PICMG 1.3 CPU Card****→ Primary IGFX Boot Display [VBIOS Default]**

Use the **Primary IGFX Boot Display** option to select the display device used by the system when it boots. Configuration options are listed below.

- VBIOS Default      **Default**
- CRT
- HDMI

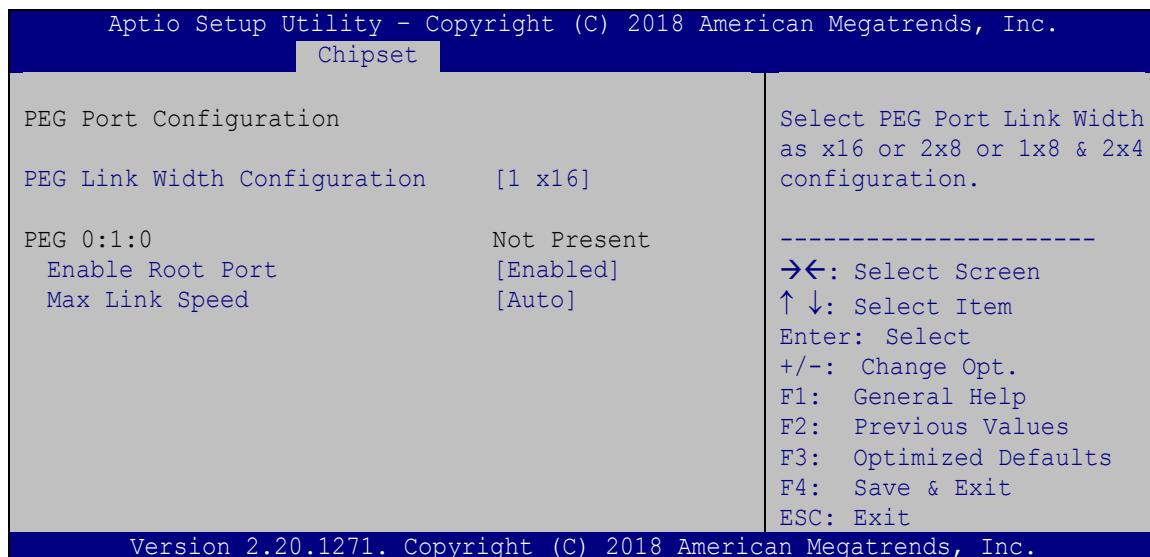**5.4.1.3 PEG Port Configuration****BIOS Menu 25: PEG Port Configuration****→ PEG Link Width Configuration [1 x16]**

Use the **PEG Link Width Configuration** option to configure the PCIe x16 channel mode on the backplane.

- 1 x16      DEFAULT** Sets the PCIe x16 link width as one PCIe x16 slot
- 2 x8** Sets the PCIe x16 link width as two PCIe x8 slots
- 1 x8, 2 x4** Sets the PCIe x16 link width as one PCIe x8 and two PCIe x4 slots

→ **Enable Root Port [Enabled]**

Use the **Enable Root Port** option to enable or disable the PCI Express (PEG) controller.

- |                   |  |
|-------------------|--|
| → <b>Disabled</b> | Disables the PCI Express (PEG) controller.               |
| → <b>Enabled</b>  | <b>DEFAULT</b> Enables the PCI Express (PEG) controller. |

→ **Max Link Speed [Auto]**


Use the **Max Link Speed** option to select the maximum link speed of the PCI Express slot.

The following options are available:

- Auto              **Default**
- Gen1
- Gen2
- Gen3

#### 5.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 26**) to configure the PCH parameters.

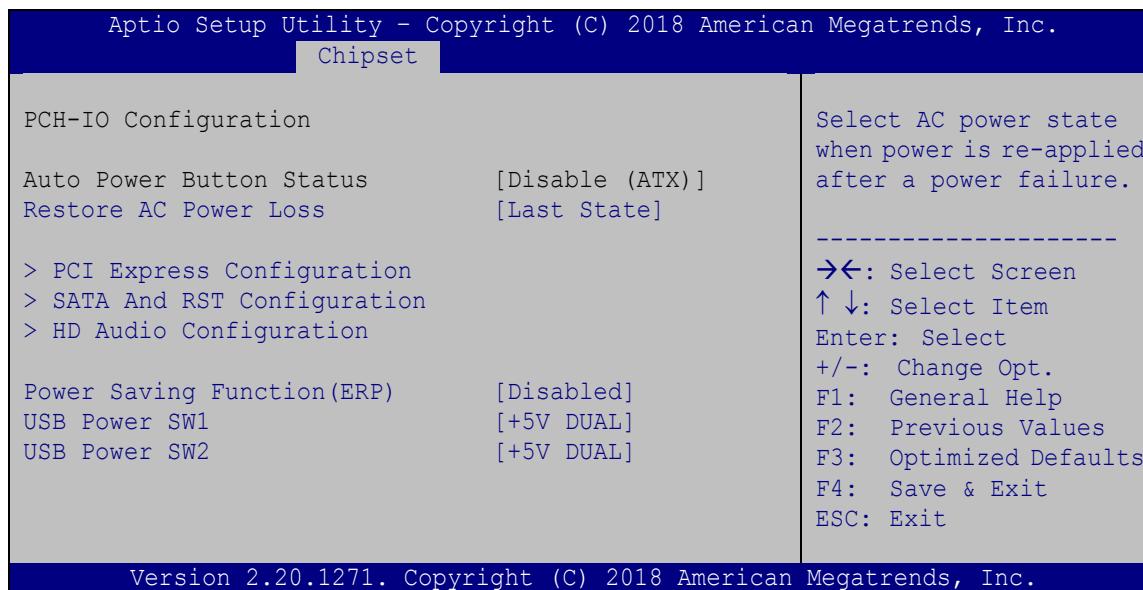

**BIOS Menu 26: PCH-IO Configuration**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

### → Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off** The system remains turned off
- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

### → Power Saving Function(ERP) [Disabled]

Use the **Power Saving Function(ERP)** BIOS option to enable or disable the power saving function.

- **Disabled** **DEFAULT** Power saving function is disabled.
- **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

### → USB Power SW1 [+5V DUAL]

Use the **USB Power SW1** BIOS option to configure whether to provide power to the four corresponding USB connectors (**Table 5-2**) when the system is in S3/S4 sleep state. This option is valid only when the above **Power Saving Function (ERP)** BIOS option is disabled.

- **+5V** Sets the USB power source to +5V
- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual

### → USB Power SW2 [+5V DUAL]

Use the **USB Power SW1** BIOS option to configure whether to provide power to the four corresponding USB connectors (**Table 5-2**) when the system is in S3/S4 sleep state. This option is valid only when the above **Power Saving Function (ERP)** BIOS option is disabled.

- ➔ **+5V** Sets the USB power source to +5V
- ➔ **+5V DUAL DEFAULT** Sets the USB power source to +5V dual


<b>BIOS Options</b>	<b>Configured USB Ports</b>
USB Power SW1	USB3_1 (external USB 3.2 Gen 1 port) USB3_2 (external USB 3.2 Gen 1 port) USB3 (internal USB 2.0 port, Type A)
USB Power SW2	USB1 (internal USB 2.0 ports) USB2 (internal USB 2.0 ports) USB4 (internal USB 2.0 ports) USB3-1 (internal USB 3.2 Gen 1 ports)

**Table 5-2: BIOS Options and Configured USB Ports**

## SPCIE-C246 Full-size PICMG 1.3 CPU Card


### 5.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** menu (**BIOS Menu 27**) to configure the PCI Express and M.2 slots.

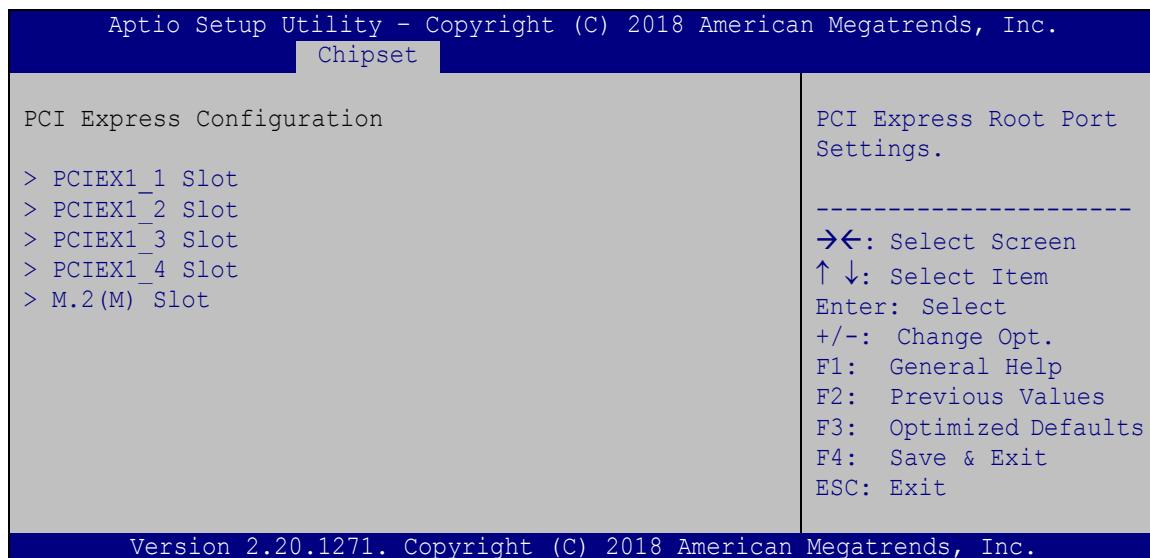

#### BIOS Menu 27: PCI Express Configuration

### 5.4.2.1.1 PCIEX1 Slot/M.2 Slot

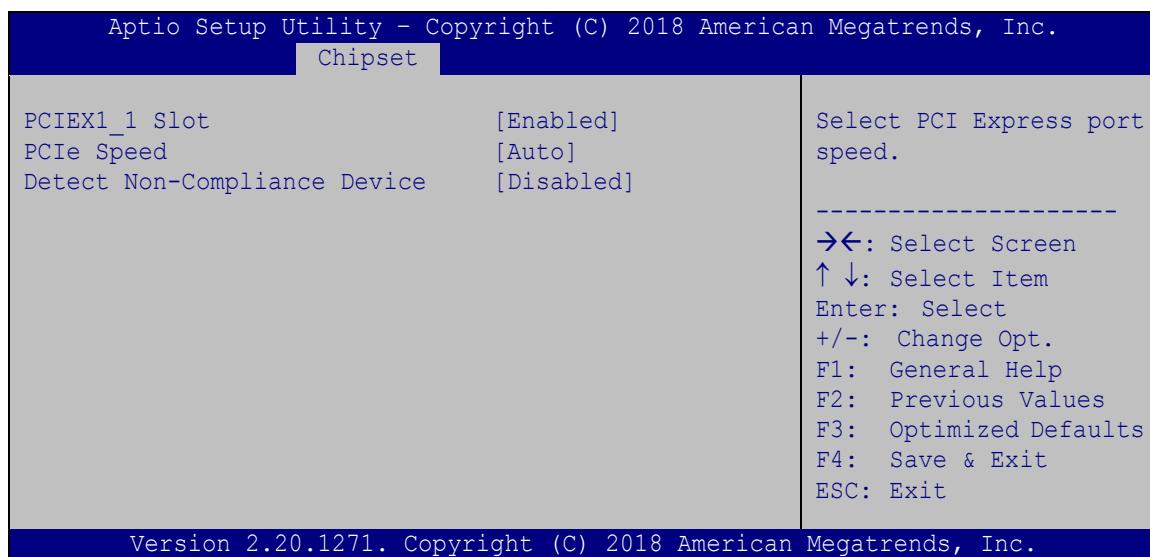

#### BIOS Menu 28: PCIEX1 Slot/M.2 Slot

**→ PCIe Speed [Auto]**

Use this option to select the support type of the PCI Express slots. The following options are available:

- Auto              **Default**
- Gen1
- Gen2
- Gen3

**→ Detect Non-Compliance Device [Disabled]**

Use the **Detect Non-Compliance Device** option to enable or disable detecting if a non-compliance PCI Express device is connected to the PCI Express slot.

**→ Disabled**              **DEFAULT**      Disables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

**→ Enabled**              Enables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

**5.4.2.2 SATA Configuration**

Use the **SATA Configuration** menu (**BIOS Menu 29**) to change and/or set the configuration of the SATA devices installed in the system.

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.	
Chipset	
SATA And RST Configuration	Enable/Disable SATA Device.
SATA Controller(s)	[Enabled]
SATA Mode Selection	[AHCI]
PCIe Storage Dev On Port 21	[Not RST Controlled]
SATA PORT 1	Empty
Hot Plug	[Disabled]
SATA PORT 2	Empty
Hot Plug	[Disabled]
SATA PORT 3	Empty
Hot Plug	[Disabled]
SATA PORT 4	Empty
Hot Plug	[Disabled]
SATA PORT 5	Empty
Hot Plug	[Disabled]
SATA PORT 6	Empty
Hot Plug	[Disabled]
-----	
→←: Select Screen	
↑↓: Select Item	
Enter: Select	
+/-: Change Opt.	
F1: General Help	
F2: Previous Values	
F3: Optimized Defaults	
F4: Save & Exit	
ESC: Exit	
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.	

**BIOS Menu 29: SATA Configuration****→ SATA Controller(s) [Enabled]**

Use the **SATA Controller(s)** option to configure the SATA controller(s).

**→ Enabled**      **DEFAULT**      Enables the on-board SATA controller(s).

**→ Disabled**      Disables the on-board SATA controller(s).

**→ SATA Mode Selection [AHCI]**

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

- ➔ **AHCI**      **DEFAULT**      Configures SATA devices as AHCI device.
- ➔ **Intel RST Premium With Intel Optane System Acceleration**      Configures SATA devices to the Intel RST Premium With Intel Optane System Acceleration mode.

**→ PCIe Storage Dev On Port 21**

Use the **PCIe Storage Dev On Port 21** option to enable or disable RST PCIe storage remapping which is only supported by UEFI.

- ➔ **RST Controlled**      Enables RST PCIe storage remapping. (*CSM Support* option must be disabled and *UEFI Boot* option must be enabled.)
- ➔ **Not RST Controlled**      Disables RST PCIe storage remapping.


**→ Hot Plug**

Use the **Hot Plug** option to enable or disable the hot plug function.

- ➔ **Disabled**      **DEFAULT**      Disables the hot plug function.
- ➔ **Enabled**      Enables the hot plug function.

### 5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 30**) to configure the PCH Azalia settings.

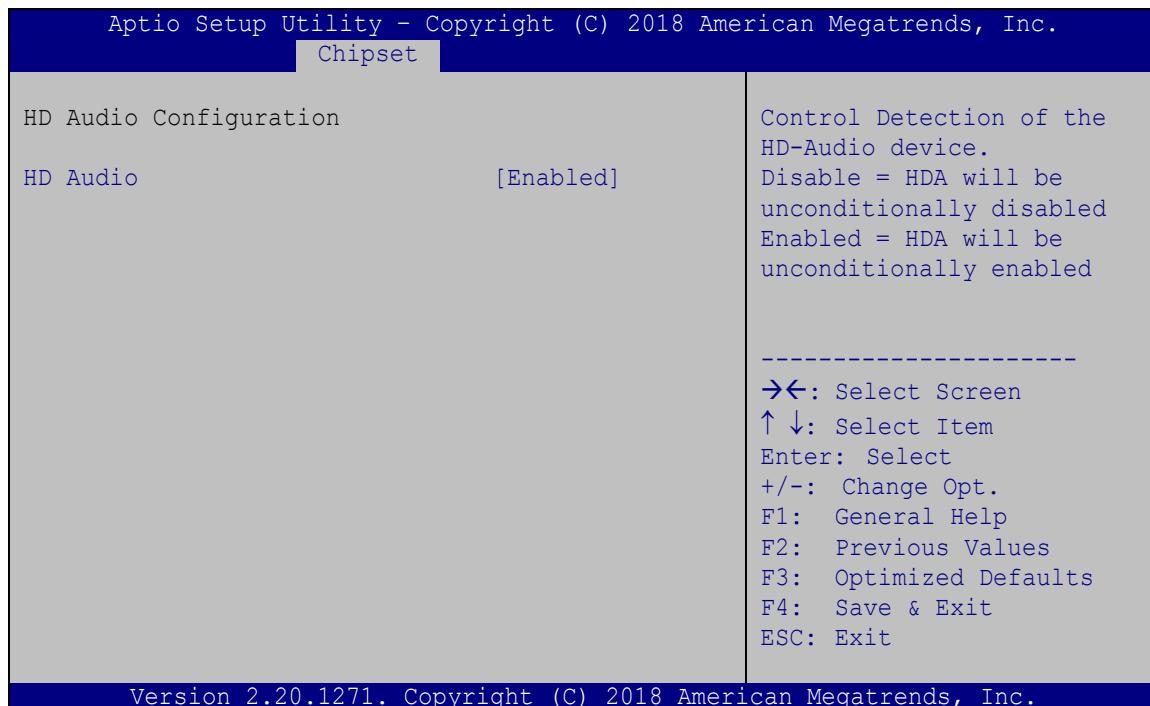

#### BIOS Menu 30: HD Audio Configuration

##### → **HD Audio [Enabled]**


Use the **HD Audio** option to enable or disable the High Definition Audio controller.

→ **Disabled** The onboard High Definition Audio controller is disabled.

→ **Enabled DEFAULT** The onboard High Definition Audio controller is enabled.

## 5.5 Security

Use the **Security** menu (**BIOS Menu 31**) to set system and user passwords.

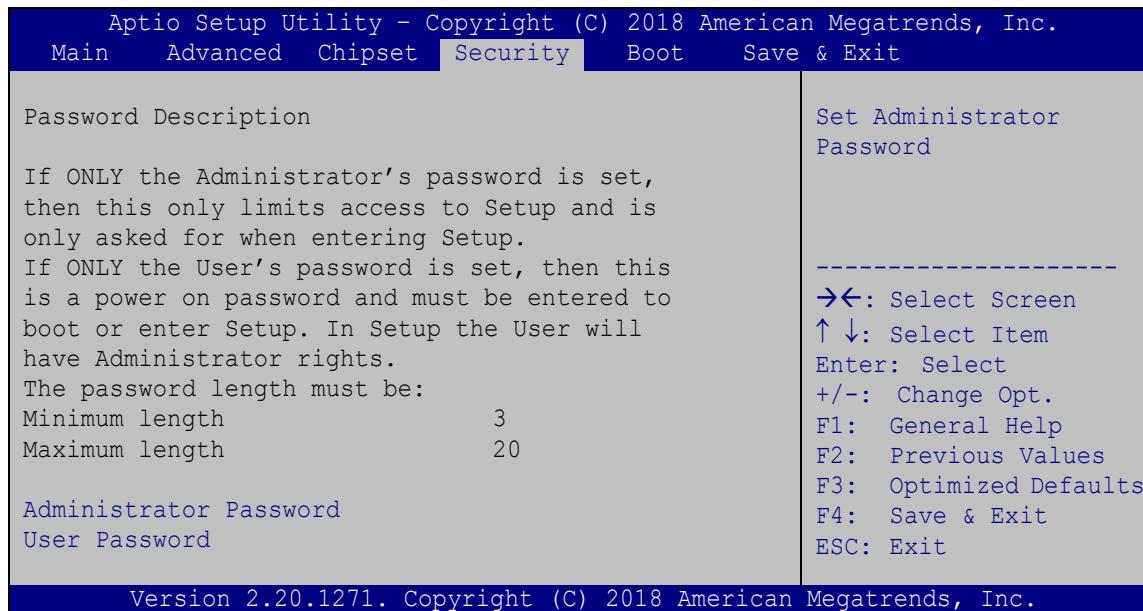

### BIOS Menu 31: Security

#### ➔ Administrator Password


Use the **Administrator Password** to set or change a administrator password.

#### ➔ User Password

Use the **User Password** to set or change a user password.

## 5.6 Boot

Use the **Boot** menu (**BIOS Menu 32**) to configure system boot options.

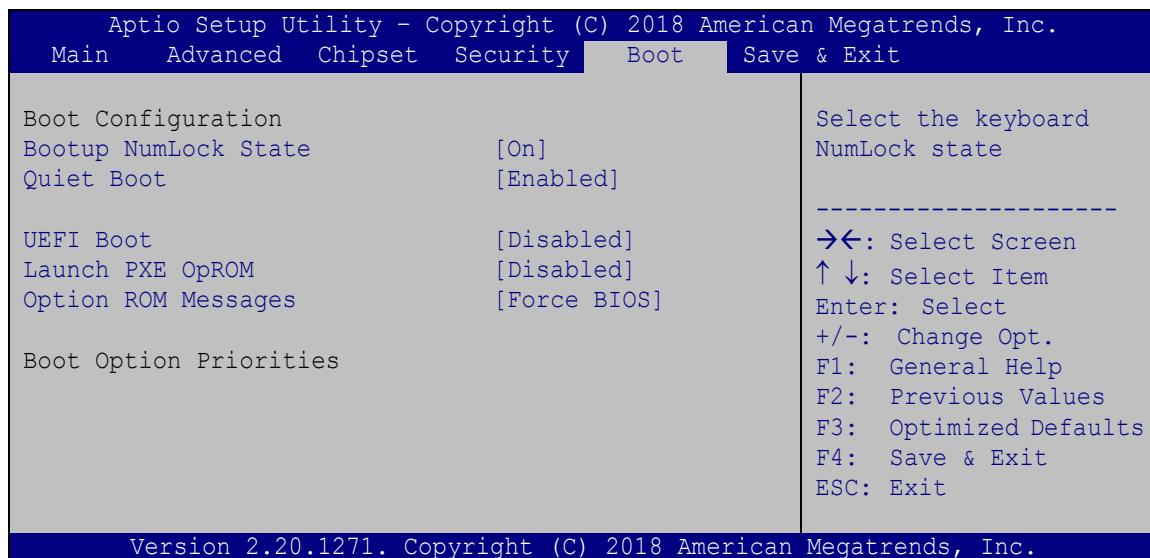

### BIOS Menu 32: Boot

#### → Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

→ **On**      **DEFAULT**      Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

→ **Off**      Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- ➔ **Disabled** Normal POST messages displayed
  - ➔ **Enabled**    **DEFAULT** OEM Logo displayed instead of POST messages

## → UEFI Boot [Disabled]

Use the **UEFI Boot** option to enable or disable to boot from the UEFI devices.

- ➔ **Disabled**    **DEFAULT**    Boot from UEFI devices is disabled.
  - ➔ **Enabled**                      Boot from UEFI devices is enabled.

#### → Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- **Disabled**    **DEFAULT**    Ignore all PXE Option ROMs.
  - **Enabled**                      Load PXE Option ROMs.


## → Option ROM Messages [Force BIOS]

Use the **Option ROM Messages** option to set the Option ROM display mode.

- **Force BIOS**      **DEFAULT**      Sets display mode to force BIOS.
  - **Keep Current**      Sets display mode to current.

## 5.7 Save & Exit

Use the **Safe & Exit** menu (**BIOS Menu 33**) to load default BIOS values, optimal failsafe values and to save configuration changes.

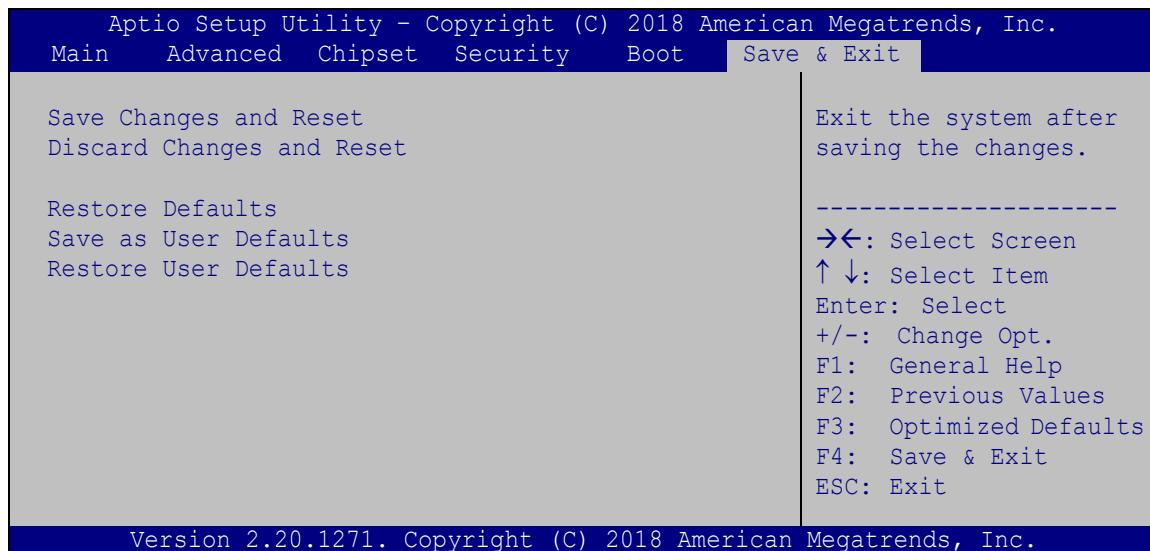

### BIOS Menu 33: Save & Exit

#### → Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

#### → Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

#### → Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

#### → Save as User Defaults

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

#### → Restore User Defaults

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

# Regulatory Compliance

---

**DECLARATION OF CONFORMITY**

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

**FCC WARNING**

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B

# Product Disposal


---

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union—If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union—The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

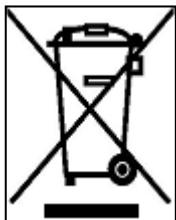

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

# BIOS Options

---

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

Below is a list of BIOS configuration options in the BIOS chapter.

□ System Date [xx/xx/xx] .....	66
□ System Time [xx:xx:xx] .....	66
□ Intel (VMX) Virtualization Technology [Disabled] .....	67
□ Active Processor Cores [All] .....	68
□ Hyper-threading [Enabled] .....	68
□ Intel(R) SpeedStep(tm) [Enabled] .....	68
□ C states [Disabled] .....	68
□ AMT BIOS Features [Enabled] .....	69
□ Unconfigure ME [Disabled] .....	69
□ Security Device Support [Disable] .....	70
□ ACPI Sleep State [S3 (Suspend to RAM)] .....	71
□ PC Health Status .....	72
□ CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control [Auto Mode] .....	73
□ Auto mode fan start temperature .....	74
□ Auto mode fan off temperature .....	74
□ Auto mode fan start PWM .....	74
□ Auto mode fan slope PWM .....	74
□ Case Open Beep [Disabled] .....	75
□ Serial Port [Enabled] .....	76
□ Serial Port [Enabled] .....	77
□ Serial Port [Enabled] .....	78
□ Serial Port [Enabled] .....	79
□ Transfer Mode [RS422/RS485] .....	79
□ Wake system with Fixed Time [Disabled] .....	80
□ Console Redirection [Disabled] .....	82
□ Terminal Type [ANSI] .....	82
□ Bits per second [115200] .....	82
□ Data Bits [8] .....	82
□ Parity [None] .....	83
□ Stop Bits [1] .....	83
□ Legacy Serial Redirection Port [COM1] .....	84
□ Legacy USB Support [Enabled] .....	85
□ CSM Support [Enabled] .....	86

□ Auto Recovery Function [Disabled] .....	88
□ VT-d [Disabled] .....	90
□ Primary Display [Auto] .....	92
□ Internal Graphics [Enabled] .....	92
□ DVMT Pre-Allocated [32M] .....	92
□ DVMT Total Gfx Mem [MAX] .....	92
□ Primary IGFX Boot Display [VBIOS Default] .....	93
□ PEG Link Width Configuration [1 x16] .....	93
□ Enable Root Port [Enabled] .....	94
□ Max Link Speed [Auto] .....	94
□ Restore AC Power Loss [Last State] .....	95
□ Power Saving Function(ERP) [Disabled] .....	95
□ USB Power SW1 [+5V DUAL] .....	95
□ USB Power SW2 [+5V DUAL] .....	95
□ PCIe Speed [Auto] .....	98
□ Detect Non-Compliance Device [Disabled] .....	98
□ SATA Controller(s) [Enabled] .....	99
□ SATA Mode Selection [AHCI] .....	100
□ PCIe Storage Dev On Port 21 .....	100
□ Hot Plug .....	100
□ HD Audio [Enabled] .....	101
□ Administrator Password .....	102
□ User Password .....	102
□ Bootup NumLock State [On] .....	103
□ Quiet Boot [Enabled] .....	104
□ UEFI Boot [Disabled] .....	104
□ Launch PXE OpROM [Disabled] .....	104
□ Option ROM Messages [Force BIOS] .....	104
□ Save Changes and Reset .....	105
□ Discard Changes and Reset .....	105
□ Restore Defaults .....	105
□ Save as User Defaults .....	105
□ Restore User Defaults .....	105

**SPCIE-C246 Full-size PICMG 1.3 CPU Card**

Appendix

D

# Terminology

---

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

<b>AC '97</b>	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
<b>ACPI</b>	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
<b>AHCI</b>	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
<b>ATA</b>	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
<b>ARMD</b>	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
<b>ASKIR</b>	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
<b>BIOS</b>	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
<b>CODEC</b>	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
<b>CMOS</b>	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
<b>COM</b>	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
<b>DAC</b>	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
<b>DDR</b>	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.
<b>DMA</b>	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.

<b>DIMM</b>	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
<b>DIO</b>	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
<b>EHCI</b>	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
<b>EIDE</b>	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
<b>EIST</b>	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
<b>FSB</b>	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
<b>GbE</b>	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
<b>GPIO</b>	General purpose input
<b>HDD</b>	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
<b>ICH</b>	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
<b>IrDA</b>	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
<b>L1 Cache</b>	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
<b>L2 Cache</b>	The Level 2 Cache (L2 Cache) is an external processor memory cache.
<b>LCD</b>	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.

## SPCIE-C246 Full-size PICMG 1.3 CPU Card

<b>LVDS</b>	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
<b>POST</b>	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
<b>RAM</b>	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
<b>SATA</b>	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
<b>S.M.A.R.T</b>	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
<b>UART</b>	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
<b>UHCI</b>	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
<b>USB</b>	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
<b>VGA</b>	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

E

# Digital I/O Interface

---

## E.1 Introduction

The DIO connector on the SPCIE-C246 is interfaced to GPIO ports on the Super I/O chipset. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



### NOTE:

For further information, please refer to the datasheet for the Super I/O chipset.

The BIOS interrupt call **INT 15H** controls the digital I/O.

#### **INT 15H:**

##### **AH – 6FH**

Sub-function:

**AL – 8** :Set the digital port as INPUT

**AL** :Digital I/O input value

## E.2 Assembly Language Sample 1

```
MOV      AX, 6F08H      ;setting the digital port as input  
INT      15H           ;
```

**AL low byte = value**

**AH - 6FH**

Sub-function:

**AL - 9** :Set the digital port as OUTPUT  
**BL** :Digital I/O input value

## E.3 Assembly Language Sample 2

```
MOV      AX, 6F09H      ;setting the digital port as output  
MOV      BL, 09H         ;digital value is 09H  
INT      15H           ;
```

**Digital Output is 1001b**

## Appendix

## F

# Watchdog Timer

---

**NOTE:**

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

<b>AH – 6FH Sub-function:</b>	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

**Table F-1: AH-6FH Sub-function**

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer,  
otherwise the system resets.

---

**EXAMPLE PROGRAM:**

; INITIAL TIMER PERIOD COUNTER

;

**W\_LOOP:**

;

MOV AX, 6F02H ;setting the time-out value  
MOV BL, 30 ;time-out value is 48 seconds  
INT 15H

;

; ADD THE APPLICATION PROGRAM HERE

;

CMP EXIT\_AP, 1 ;is the application over?  
JNE W\_LOOP ;No, restart the application

MOV AX, 6F02H ;disable Watchdog Timer  
MOV BL, 0 ;  
INT 15H

;

; EXIT ;

Appendix

G

# Error Beep Code

---

## G.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXE IPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

## G.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met



### NOTE:

If you have any question, please contact IEI for further assistance.

Appendix

H

# Hazardous Materials Disclosure

---

## H.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.

## H.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	O	O	O	O	O	O
印刷电路板	O	O	O	O	O	O
金属螺帽	O	O	O	O	O	O
电缆组装	O	O	O	O	O	O
风扇组装	O	O	O	O	O	O
电力供应组装	O	O	O	O	O	O
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。